



REPAIR PARTS LIST

Key No.	Description	Part No.
1	Handle	L07629
2	Seal Plate	HO351
3	O-Ring	M10584
4	Mechanical Seal	S20791
5	Impeller	H05350
5A	Neck Ring	M10611
5B	Wear Washer	M10612
6	Bolt Seal	M10582 (4)
7	Capscrew (seal plate to engine)	M10587 (4)
8	Diffuser	H05352
9	Clack Assembly	B71717
10	Pump Case	H05335
11	Capscrew (pump case to seal plate)	S24905 (2)
12	Drain Plug	U178-820P
13	Capscrew (pump case to seal plate, short)	S24901 (4)
14	Washer	S27123 (6)
15	Hex Nut	S26456 (6)
16	Discharge Cap 1-1/2"	M10620
17	Cap Washer 1-1/2"	M10621
18	Discharge Cap 1"	M10579 (2)
19	Cap Washer 1"	M10580 (2)
20	Discharge Cap 2"	M10581
^	Manual	FP342
21	Cap Washer 2"	M10583

Note: Quantity one unless otherwise indicated ().

^ Not Illustrated