



INSTALLER MANUAL

Fleck 9100 SXT



IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions
Save these instructions

WWW.PENTAIR.EU
WWW.PENTAIR.COM

Table of Contents

1	Generalities	6
1.1	Scope of the documentation	6
1.2	Release management	6
1.3	Manufacturer identifier, product identification	7
1.4	Intended use	8
1.5	Abbreviations used	8
1.6	Norms	8
1.6.1	Applicable norms	8
1.6.2	Available certificates	9
1.7	Procedure for technical support	9
1.8	Copyright and Trademarks	9
1.9	Limitation of liability	10
2	Safety	11
2.1	Safety pictograms definition	11
2.2	Serial label location	12
2.3	Hazards	12
2.3.1	Personnel	13
2.3.2	Material	13
2.4	Hygiene and sanitization	13
2.4.1	Sanitary issues	13
2.4.2	Hygiene measures	14
3	Description	15
3.1	Technical specifications	15
3.2	Performance flow rate characteristics	16
3.3	Outline drawing	17
3.4	Components description and location	18
3.5	Softener operating mode	19
3.5.1	Downflow regeneration cycle (5-cycles operation)	19
3.5.2	Upflow regeneration cycle (5-cycles operation)	21
3.6	Options available on the valve	23
4	System sizing	24
4.1	Recommended Injector/DLFC/BLFC-Valve configuration	24
4.2	Sizing a softener (single unit)	24
4.2.1	Parameters to be considered	24
4.2.2	Determining the required volume of resin	25
4.2.3	Resin exchange capacity and capacity of the unit	26
4.2.4	Valve configuration	28

4.2.5	Cycle time calculation	28
4.3	Salt dosage definition	31
4.4	Injector flow rates	31
4.4.1	1650 injectors	31
5	Installation	34
5.1	Product identification	34
5.2	Warnings	34
5.3	Safety notices for installation	35
5.4	Installation environment	35
5.4.1	General	35
5.4.2	Water	35
5.4.3	Electrical	36
5.4.4	Mechanical	36
5.5	Integration constraints	37
5.6	Block diagram and configuration example	38
5.7	Valve on tank assembly	39
5.8	Valve connection to piping	39
5.8.1	Top-mounted valve installation	40
5.9	Regeneration mode	41
5.10	Electrical connections	42
5.11	Bypassing	43
5.12	Drain line connection	43
5.13	Overflow line connection	45
5.14	Brine line connection	46
6	Programming	47
6.1	Display	47
6.2	Commands	49
6.3	Setting the time of the day (TD)	49
6.4	Basic programming	49
6.4.1	Basic programming mode chart	49
6.4.2	Day of override (DO)	50
6.4.3	Regeneration time (RT)	50
6.4.4	Feed water hardness (H)	50
6.4.5	Reserve capacity (RC) or (SF)	50
6.4.6	Current day of the week (CD)	50
6.5	Master programming mode	51
6.5.1	Master programming mode chart	51
6.5.2	Entering master programming mode	53
6.5.3	Display format mode (DF)	53
6.5.4	Regeneration flow (RF)	53

6.5.5	Regeneration control type (CT).....	53
6.5.6	Number of tanks (NT)	54
6.5.7	Tank in service (TS).....	54
6.5.8	Unit capacity (C)	54
6.5.9	Feedwater hardness (H).....	55
6.5.10	Reserve selection (RS).....	55
6.5.11	Days override (DO)	56
6.5.12	Regeneration time (RT).....	56
6.5.13	Regeneration cycle step duration.....	57
6.5.14	Day of week (Dn, n = 1 to 7).....	57
6.5.15	Current day (CD).....	58
6.5.16	Flow meter type (FM)	58
6.5.17	Meter pulse (K).....	58
6.6	Diagnostic.....	59
6.6.1	Commands	59
6.6.2	Current flow rate (FR).....	59
6.6.3	Peak flow rate (PF).....	59
6.6.4	Hours since last regeneration (HR).....	59
6.6.5	Volume since last regeneration (VU)	60
6.6.6	Reserve capacity (RC)	60
6.6.7	Software version (SV)	60
6.7	Resetting the controller.....	60
6.7.1	Soft reset (SR)	60
6.7.2	Hard reset (HR)	61
7	Commissioning	62
7.1	Water filling, draining and waterproofness inspection.....	62
7.2	Sanitization.....	63
7.2.1	Disinfection of water softeners.....	63
7.2.2	Sodium or calcium hypochlorite.....	63
8	Operation	65
8.1	Display	65
8.1.1	Display during operation.....	65
8.1.2	Display during regeneration	65
8.2	Recommendations	66
8.3	Manual regeneration	66
8.3.1	Manual delayed regeneration	66
8.3.2	Manual immediate regeneration	66
8.3.3	To advance regeneration cycles	66
8.4	Operation during a power failure	67
9	Maintenance	68
9.1	General system inspection	68
9.1.1	Water quality	68
9.1.2	Mechanical checks.....	68
9.1.3	Regeneration test.....	69

9.2	Recommended maintenance plan.....	70
9.2.1	Valve used for softening.....	70
9.3	Recommendations	72
9.3.1	Use original spare parts	72
9.3.2	Use original approved lubricants.....	72
9.3.3	Maintenance instructions	72
9.4	Cleaning and maintenance	72
9.4.1	First steps	72
9.4.2	Controller motor replacement	73
9.4.3	Controller replacement	74
9.4.4	Power head disassembly/replacement	75
9.4.5	Upper piston and/or seal and spacer kit replacement	77
9.4.6	Lower piston and/or front side seal and spacer kit replacement.....	79
9.4.7	Back side seal and spacer cartridge replacement	81
9.4.8	Micro-switches replacement	88
9.4.9	Injector cleaning.....	89
9.4.10	BLFC cleaning	91
10	Troubleshooting	92
10.1	Error detection	95
10.1.1	Motor stall/cam sense error.....	95
10.1.2	Motor run-ON error/cycle sense error.....	96
10.1.3	Regeneration failure	96
10.1.4	Memory error	97
11	Spare parts and options.....	98
11.1	Valve parts list.....	98
11.2	Power head parts list.....	101
11.3	Safety brine valves list	102
11.4	Safety brine valves 2310 parts list	102
11.5	Bypass valve assembly list	103
11.5.1	1" BSP female stainless steel bypass	103
11.5.2	1" BSP female brass bypass with mixing	104
11.5.3	Plastic bypass (no yoke).....	105
11.6	Distribution systems parts list	106
11.7	Second tank adapter parts list.....	107
11.8	Air checks list.....	108
11.9	Meters parts list.....	109
11.10	Additional parts list.....	110
11.11	Yokes	111
12	Disposal	112

1 Generalities

1.1 Scope of the documentation

The documentation provides the necessary information for appropriate use of the product. It informs the user to ensure efficient execution of the installation, operation or maintenance procedures.

The content of this document is based on the information available at the time of publication. The original version of the document was written in English.

For safety and environmental protection reasons, the safety instructions given in this documentation must be strictly followed.

The manufacturer reserves the right to make changes at any time without notice.

This manual is a reference and will not include every system installation situation. The person installing this equipment should have:

- training in the Fleck series, SXT controllers and water treatment appliances installation;
- knowledge of water conditioning and how to determine proper controller settings;
- basic plumbing skills.

This document is available in other languages:

For EMEA (Europe Middle East and Africa): <https://www.pentair.eu/product-finder/product-type/control-valves>

For NAM (North America): <https://www.pentair.com/en-us/water-treatment-components/valves>

1.2 Release management

Revision	Date	Authors	Description
A	27.10.2016	BRY/KVA	First edition.
B	01.06.2018	BRY/FIM	Address change, Bleam information and valve on tank assembly.
C	28.11.2019	BRY	Corrections.
D	12.05.2020	BRY/FIM	Copyright and Trademarks.
E	06.10.2020	BRY/FLA	Programming corrections.
F	16.01.2023	BRY/FIM	Website, scan & service removal.
G	18.12.2025	AMI/EPL/EKG	Adaptation for the US, Spares parts update, address change.

1.3 Manufacturer identifier, product identification

	EMEA legal entity	NAM legal entity
Manufacturer:	Pentair Manufacturing Italy S.R.L. Via Tiziano 32 20145 Milano (MI) Italy	Pentair Water Solutions 13845 Bishops Drive, Suite 200 Brookfield, WI 53005 United States
Assembled in the factory:	Pentair Manufacturing Italy Via Masaccio 13 Lugnano di Vicopisano 56010 (PI) Italy	Pentair Manufacturing Reynosa Av. de Los Nogales Lt. del 6 al 11 Nave 5 Parque Ind. Villa Florida Reynosa, Tamaulipas, 88730 Mexico

Product identification: Fleck 9100 SXT

1.4 Intended use

The device is intended for commercial applications use only and it is purpose-built for water treatment.

1.5 Abbreviations used

Assy	Assembly
BLFC	Brine Line Flow Controller
BV	Brine Valve
CW	Cold Water
DF	Down Flow
Distr	Distribution
DLFC	Drain Line Flow Controller
HW	Hot Water
Inj	Injector
N/A	Not Available
NBP	No By Pass
PN	Part Number
QC	Quick connect
Regen	Regeneration
S&S	Seals & Spacers
SBV	Safety Brine Valve
STD	Standard
SM	Side Mounted
Sys	System
TC	Time Clock
TM	Top Mounted
UF	Up Flow
VB	Valve Body

1.6 Norms

1.6.1 Applicable norms

For EMEA:

Comply with the following guidelines:

- 2014/35/UE: Low Voltage Directive;
- 2014/30/UE: Electromagnetic compatibility;
- 2011/65/UE: Restriction of use of certain hazardous substances in electrical and electronic equipment (RoHS);
- UNI EN ISO9001.

Meets the following technical standards:

- EN IEC 61326-1;
- EN IEC 61010-1.

For NAM:

Comply with the following guidelines:

- UL 979;
- NSF/ANSI Standard 44;
- NSF/ANSI/CAN 372: Drinking Water System Components - Lead Content;
- CSA B483.1: Drinking Water Treatment Systems;
- FCC 47 CFR part 15 subpart b;
- ISED-ICES-003.

1.6.2 Available certificates

- CE;
- DM174;
- ACS.

Please find beside the certifications for some of our product families. Please note that this list is not an exhaustive list of all our certifications. In case of need for more information please contact us.



1.7 Procedure for technical support

Procedure to follow for any technical support request:

1. Collect the required information for a technical assistance request.
 - ⇒ Product identification [see Serial label location [→Page 12] and Recommendations [→Page 72]].
 - ⇒ Description of the device problem.
2. Please refer to the Troubleshooting [→Page 92]. If the problem persists contact your local tech support.

EMEA: Contact your local tech support

NAM: Phone: 1-800-279-9404
tech-support@pentair.com

1.8 Copyright and Trademarks

All indicated Pentair trademarks and logos are property of Pentair. Third party registered and unregistered trademarks and logos are the property of their respective owners.

© 2025 Pentair. All rights reserved.

1.9 Limitation of liability

Pentair Water Treatment products benefit, under specific conditions, from a manufacturer warranty that may be invoked by Pentair's direct customers. Users should contact the vendor of this product for applicable conditions and in case of a potential warranty claim.

Any warranty provided by Pentair regarding the product will become invalid in case of:

- installation done by a non-water-professional;
- improper installation, improper programming, improper use, improper operation and/or maintenance leading to any kind of product damages;
- improper or unauthorized intervention on the controller or components;
- incorrect, improper or wrong connection/assembly of systems or products with this product and vice versa;
- use of a non-compatible lubricant, grease or chemicals of any type and not listed by the manufacturer as compatible for the product;
- failure due to wrong configuration and/or sizing.

Pentair accepts no liability for equipment installed by the user upstream or downstream of Pentair products, as well as for process/production processes which are installed and connected around or even related to the installation. Disturbances, failures, direct or indirect damages that are caused by such equipment or processes are also excluded from the warranty. Pentair shall not accept any liability for any loss or damage to profits, revenues, use, production, or contracts, or for any indirect, special or consequential loss or damage whatsoever. Please refer to the Pentair List Price for more information about terms and conditions applicable to this product.

2 Safety

2.1 Safety pictograms definition

DANGER

This combination of symbol and keyword indicates an imminently hazardous situation that will result in serious or fatal injury if not avoided.

WARNING

This combination of symbol and keyword indicates a potentially hazardous situation that can result in serious or fatal injury if not avoided.

CAUTION

This combination of symbol and keyword indicates a potentially hazardous situation that can result in minimal or minor injury if not avoided.

Caution - material



This combination of symbol and keyword indicates a potentially hazardous situation that can result in material damage if not avoided.

Prohibition



Mandatory advice to follow.

Mandatory



Applicable guideline, measure.


Info




Informative comment.

2.2 Serial label location

EMEA

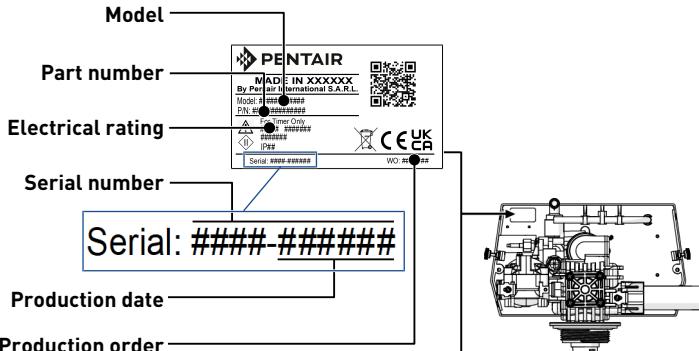

NAM

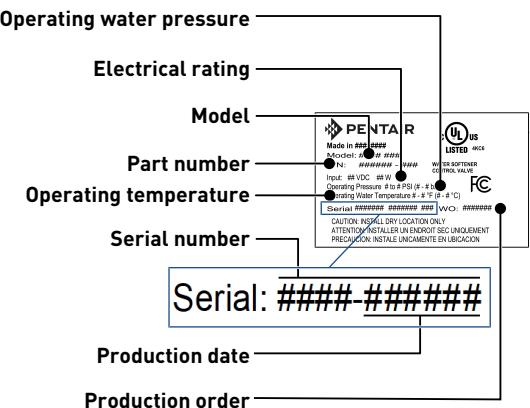

Mandatory



Ensure that the serial label and the safety labels on the device are completely legible and clean!

2.3 Hazards

All the safety and protection instructions contained in this document must be observed in order to avoid temporary or permanent injury, damage to property or environmental pollution.

At the same time, any other legal regulations, accident prevention and environmental protection measures, as well as any recognized technical regulations relating to appropriate and risk-free methods of working which apply in the country and place of use of the device must be adhered to.

Any non-observation of the safety and protection rules, as well as any existing legal and technical regulations, will result in a risk of temporary or permanent injury, damage to property or environmental pollution.

This product is not intended to be used for treating water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the product.

2.3.1 Personnel

CAUTION



Risk of injury due to improper handling!

Only qualified and professional personnel, based on their training, experience and instruction as well as their knowledge of the regulations, safety rules and operations performed, are authorized to carry out necessary work.

Mandatory



Any other maintenance operation must be carried out only by qualified and professional personnel!

2.3.2 Material

The following points must be observed to ensure proper operation of the system and the safety of user:

- be careful of high voltages present on the transformer (230 V, 50 Hz);
- do not put your fingers in the system (risk of injuries with moving parts and shock due to electric voltage).

2.4 Hygiene and sanitization

2.4.1 Sanitary issues

Preliminary checks and storage

- Check the integrity of the packaging. Check that there is no damage and no signs of contact with liquid to make sure that no external contamination occurred;
- the packaging has a protective function and must be removed just before installation. For transportation and storage, appropriate measures should be adopted to prevent the contamination of materials or the objects themselves.

Assembly

- Assemble only with components which are in accordance with drinking water standards;
- after installation and before use, perform one or more manual regenerations in order to clean the media bed. During such operations, do not use the water for human consumption. Perform a disinfection of the system in the case of installations for treatment of drinking water for human use.

Info



This operation must be repeated in the case of ordinary and extraordinary maintenance.

It should also be repeated whenever the system remains idle for a significant time.

Info**Valid only for Italy**

In case of equipment used in accordance with the DM25, apply all the signs and obligations arising from the DM25.

2.4.2 Hygiene measures

Disinfection

- The materials used for the construction of our products meet the standards for use with potable water; the manufacturing processes are also geared to preserving these criteria. However, the process of production, distribution, assembly and installation, may create conditions of bacterial proliferation, which may lead to odor problems and water contamination;
- it is therefore strongly recommended to sanitize the products. See Sanitization [→Page 63];
- maximum cleanliness is recommended during the assembly and installation;
- for disinfection, use Sodium or Calcium Hypochlorite and perform a manual regeneration.

3 Description

3.1 Technical specifications

Design specifications/ratings

Valve body	PPO (Polyphenylene oxide)
Rubber components	EP or EPDM
Valve material certification	DM174, ACS
Weight (valve with controller)	6.6 lbs (3 kg) max
Recommended operating pressure	26 - 125 psi (1.8 - 8.6 bar) (0.18 - 0.86 MPa)
Maximum inlet pressure	125 psi (8.6 bar) (0.86 MPa)
Hydrostatic test pressure	290 psi (20 bar) (2 MPa)
Water temperature	34 - 110° F (1 - 43° C)
Ambient temperature	41 - 120° F (5 - 49° C)

Flow rates (3.5 bar inlet - valve only)

	3/4"	1"
Continuous service flow ($\Delta p = 15$ psi (1 bar) (0.1 MPa))	17.6 gpm (4 m ³ /h)	19.8 gpm (4.5 m ³ /h)
Peak service flow ($\Delta p = 25$ psi (1.8 bar) (0.18 MPa))	23.8 gpm (5.4 m ³ /h)	26 gpm (5.9 m ³ /h)
Cv*	4.8 gpm	5.2 gpm
Kv*	4 m ³ /h	4.5 m ³ /h
Maximum backwash flow ($\Delta p = 25$ psi (1.8 bar) (0.18 MPa))	8.4 gpm (1.9 m ³ /h)	8.4 gpm (1.9 m ³ /h)

*Cv: Flow rate in gpm across the valve at a pressure drop of 1 psi at 60° F.

*Kv: Flow rate in m³/h across the valve at a pressure drop of 1 bar at 15.5° C.

Valve connections

Tank Thread	2 1/2" - 8NPSM
Inlet/Outlet	3/4" or 1" BSP, male
Riser tube	1.1" (26.7 mm) O.D., 1.05" tube
Drain line	1/2" O.D.
Brine line (1600/1610)	3/8"

Electrical

Transformer input voltage	230 VAC
Input supply frequency	50 or 60 Hz
Transformer output voltage	24 VAC
Motor input voltage	24 VAC
Controller input voltage	24 VAC


Controller max. power consumption	8 W
Protection rating.	IP 22
Power supply	100 to 240 VAC, 50/60 Hz, 0.5 A, Class II
Transient overvoltages	within the limits of category II
Pollution Degree	3

Temporary overvoltages must be limited in duration and in frequency.

- Indoor use only;
- temperature from 41 – 120° F (5 – 49° C);
- maximum relative humidity 80 % for temperatures up to 88° F (31° C) decreasing linearly to 50 % relative humidity at 104° F (40° C);
- mains supply voltage fluctuations up to ± 10 % of the nominal voltage.


3.2 Performance flow rate characteristics

The graph shows the pressure drop created by the valve itself at different flow rates. It allows predetermining the maximum flow rate going through the valve depending on the system settings (inlet pressure etc). It also allows to determine the valve pressure drop at a given flow rate, and therefore to evaluate the system pressure drop vs flow rate.


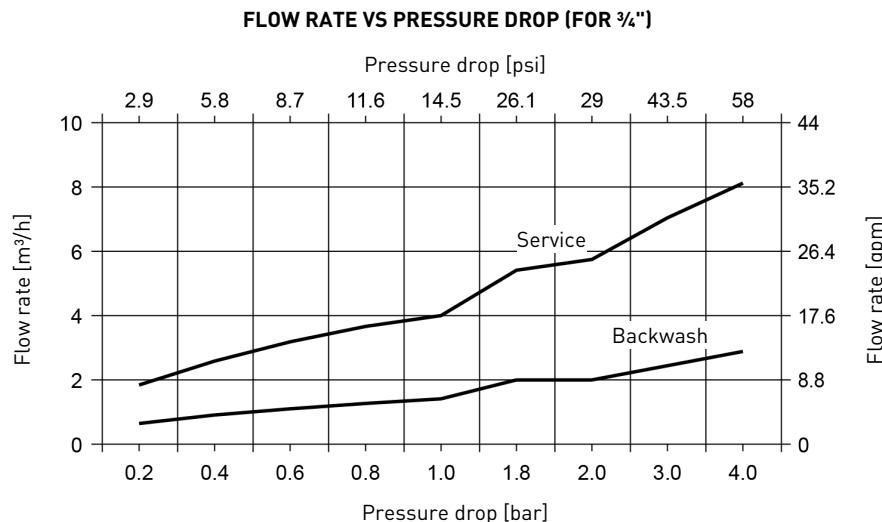


3.3 Outline drawing

Measurements: inch [mm]

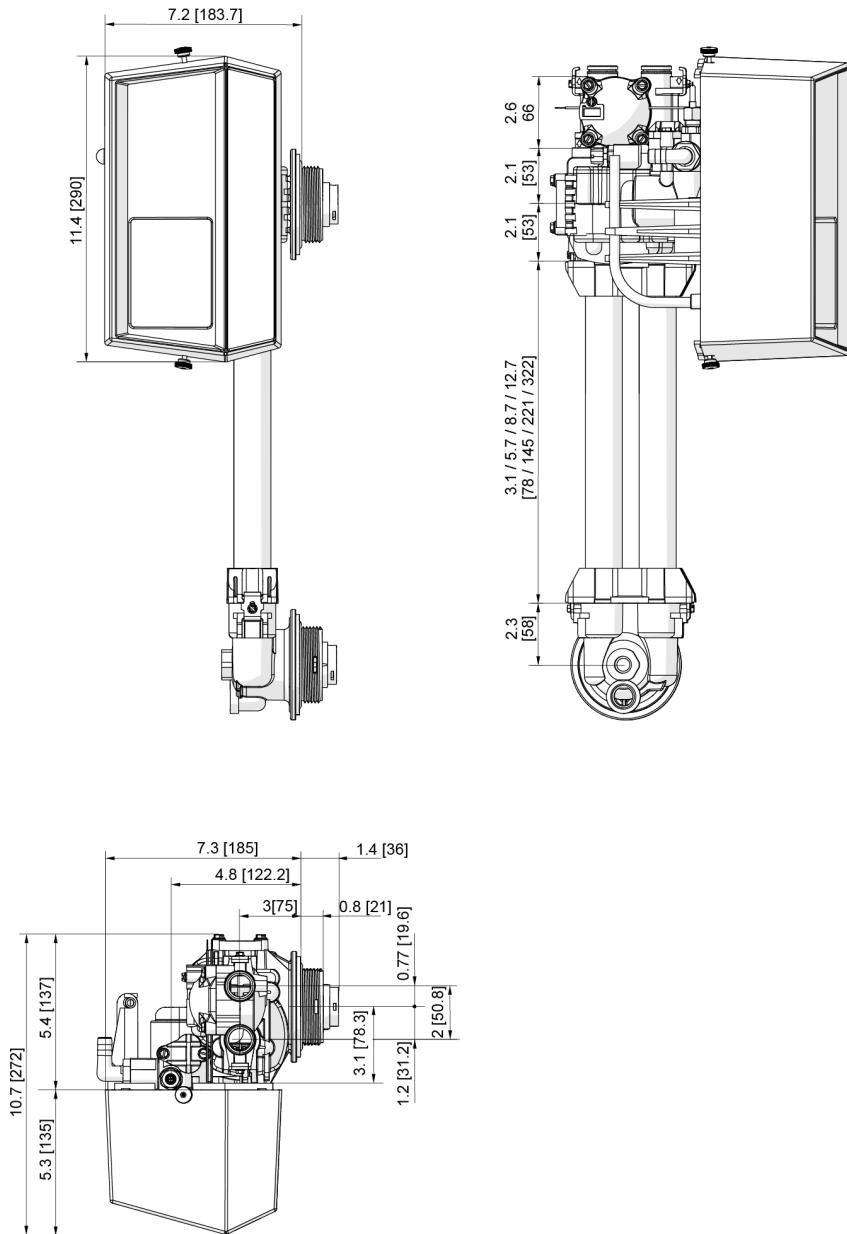

3.4 Components description and location

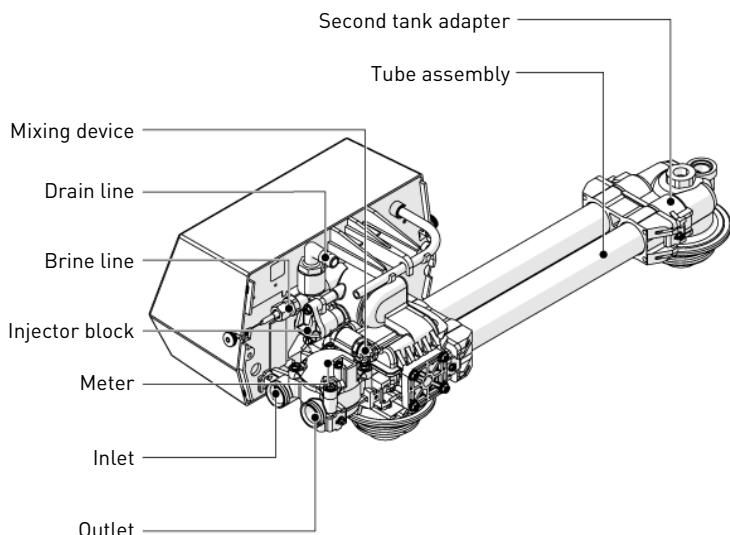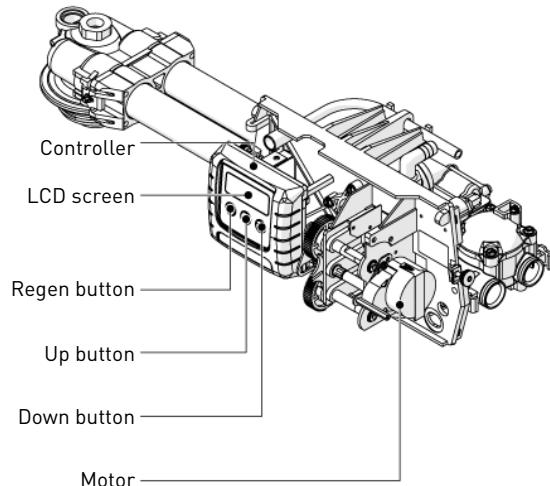

3.5 Softener operating mode

Info



This valve allows to do down flow or up flow regenerations.

3.5.1 Downflow regeneration cycle (5-cycles operation)

Service — Normal use

Untreated water is directed down through the resin bed and up through the riser tube. The hardness ions attach themselves to the resin and are removed from the raw water being exchanged on the resin beads by sodium ions. The water is conditioned as it passes through the resin bed.

Backwash — Cycle C1

The flow of water is reversed by the valve and directed down the riser tube and up through the resin bed. During the backwash cycle, the bed is expanded and debris is flushed to the drain, while the media bed is remixed.

Brine draw & slow rinse — Cycles C2

The valve directs water through the brine injector and brine is drawn from the brine tank. The brine is then directed down through the resin bed and up through the riser tube to the drain. The hardness ions on the resin beads are replaced by sodium ions and are sent to the drain. The resin is regenerated during the brine cycle. When the air check valve closes brine drawing finishes, and then the slow rinse phase starts.

Rapid rinse — Cycle C3

The valve directs water down through the resin bed and up through the riser tube to the drain. Any residual brine is rinsed from the resin bed, while the media bed is re-compacted.







Brine tank refill — Cycle C4

Water is directed to the brine tank, at a rate controlled by the refill controller [BLFC], to create brine for the next regeneration. During brine refill, treated water is already available at the valve outlet.

Info



For illustration purpose only. Always verify inlet and outlet marking on the valve.

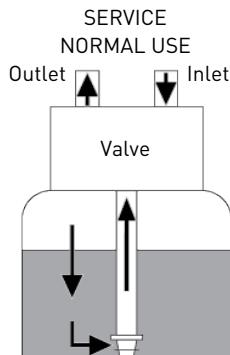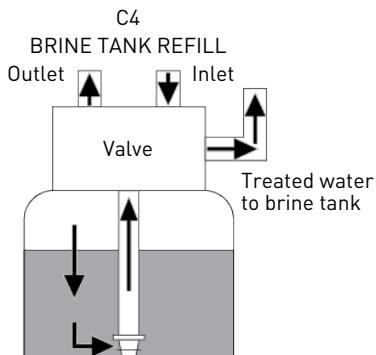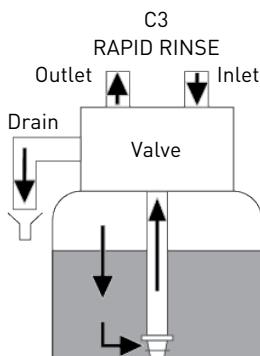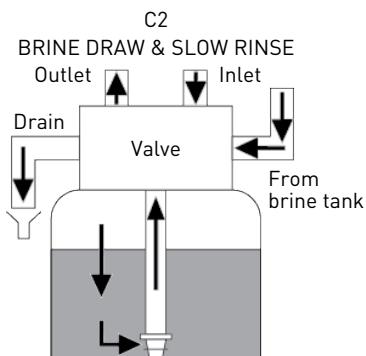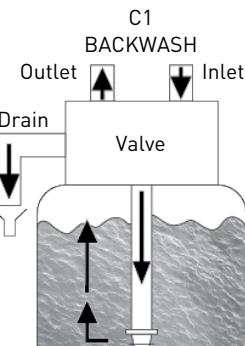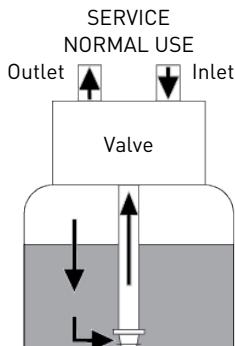

3.5.2 Upflow regeneration cycle (5-cycles operation)

Service — Normal Use

Untreated water is directed down through the resin bed and up through the riser tube. The hardness ions attach themselves to the resin and are removed from the raw water being exchanged on the resin beads against sodium ions. The water is conditioned as it passes through the resin bed.

Brine draw & slow rinse — Cycle C1

The controller directs water through the brine injector and brine is drawn from the brine tank. The brine is then directed down through the riser tube and up through the resin bed to the drain. The hardness ions are replaced by sodium ions and are sent to the drain. The resin is regenerated during the brine cycle. Then the slow rinse phase starts.

Backwash — Cycle C2

The flow of water is reversed by the valve and directed down through the riser tube and up through the resin bed. During the backwash cycle, the bed is expanded and debris is flushed to the drain, while the media bed is remixed.

Rapid rinse — Cycle C3







The controller valve directs water down through the resin bed and up through the riser tube to the drain. Any residual brine is rinsed from the resin bed, while the media bed is recompacted.

Brine tank refill — Cycle C4

Water is directed to the brine tank, at a rate controlled by the refill controller [BLFC], to create brine for the next regeneration. During brine refill, treated water is already available at the valve outlet.

Info

For illustration purpose only. Always verify inlet and outlet marking on the valve.

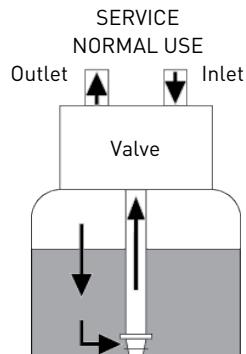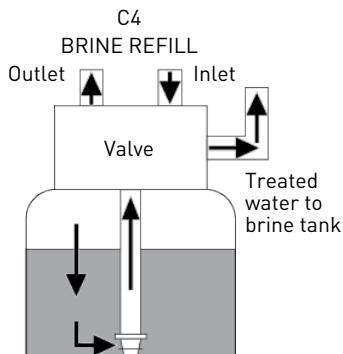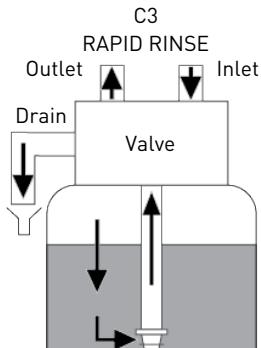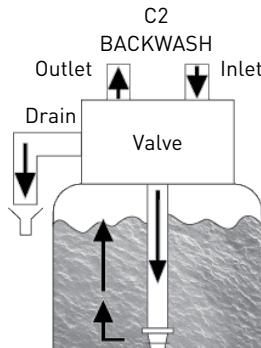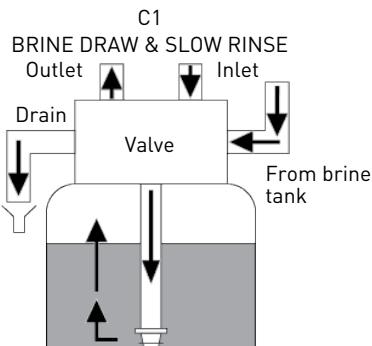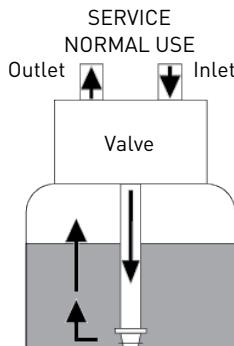

3.6 Options available on the valve

Mixing device

The valve can be equipped with a mixing device [1] whose function is to regulate the hardness of the water at the outlet. The mixing can be set from 0% to 25% of hard water (e.i. 0 turn = 0% of hard water with 100% of treated water and 1-½ turn = 25% of hard water with 75% of treated water).

Info




To set the mixing up to 50%, a yoke with integrated mixing must be used.

0 turn
1 turn

¼ turn
1 - ¼ turn

¾ turn
½ turn

1 - ½ turn

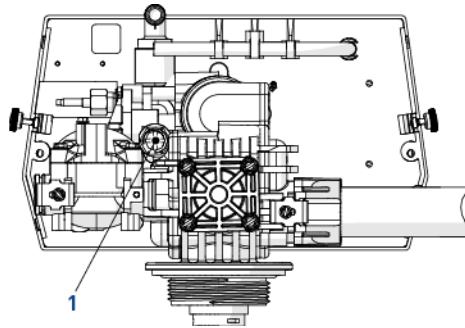

4 System sizing

4.1 Recommended Injector/DLFC/BLFC-Valve configuration

Brine syst.	Tank Diam eter	Connect. flexible	Resin volume	Injector				DLFC	BLFC	
				[in]	[mm]	[l]	DF	Color	UF	Color
9100 / 1650	6	78.3	5 - 7	0	Red	0	Red	1.2	0.125	0.125
			8 - 14							
	8	144.5	9 - 21	1	White	1	White	1.5	0.25	0.25
			22 - 28					2	0.50	0.50
	10	221.0	29 - 42					2.4		
			43 - 56	2	Blue	2	Blue	3.5	1.00	1.00
	12	322.3	57 - 70					4		
			71 - 85	3	Yellow	3	Yellow	5		
	16		86 - 113					7		

Info



In upflow configuration, the injector cap is fitted with a pressure regulator set to 2 bar.

4.2 Sizing a softener (single unit)

4.2.1 Parameters to be considered

Whenever installing a softener, it is preferable to have full water analysis to ensure the inlet water content will not affect the resin bed.

Tip



Please consult your resin manufacturer specification!

To ensure that no additional pretreatment prior to softening is required.

The below sizing method can be applied for both residential and industrial softeners.

The sizing of a softener must be based upon certain parameters:

- inlet water hardness;
- peak flow rate and nominal flow rate;
- service velocity;
- salt dosage.

The softening and regeneration reactions are driven under certain conditions. To allow these reactions to take place, make sure that the velocity is convenient during the different phases for proper ion exchange. This velocity is given in the resin manufacturer specifications sheet.

Depending on the inlet water hardness, the service velocity for standard softening must be between:

Service velocity [bed volume per hour]	Inlet water hardness [mg/l as CaCO ₃]	°TH	°dH
8 - 40	< 350	< 35	< 19.6
8 - 30	350 to 450	35 - 45	19.6 - 25.2
8 - 20	> 450	> 45	> 25.2

Caution - material



Risk of leakage due to unrespected service velocity !

Failure to respect the service velocity will lead to hardness leakage or even total softener inefficiency.

Note that the water supply piping size may also be useful when estimating the nominal flow rate, since the size of the piping allows a maximum flow rate to pass. Assuming the maximum velocity of water in pipes is about 9.84 ft/s (3 m/s), a good estimation for most common pressure 43.51 psi (3 bar) (0.3 MPa) and temperature 60.8° F (16° C) is:

Piping size (internal diameter)		Max. flow rate	
[in]	[mm]	[gpm at 9.84 ft/s]	[m ³ /h at 3 m/s]
0.5	12	5.37	1.22
0.75	20	14.93	3.39
1	25	25.23	5.73
1.25	32	38.26	8.69
1.5	40	59.75	13.57
2.0	50	93.34	21.20
2.5	63	150.58	34.2
3.0	75	216.62	49.2

4.2.2 Determining the required volume of resin

When sizing a softener, make sure that the volume of resin in the tank [bed volume] will be sufficient so that even when the peak flow rate is reached, the velocity is still between the above values depending on the hardness. When sizing a softener, always choose the resin volume and tank size based on the peak flow rate but not on the nominal flow rate.

Caution - material



Risk of leakage due to wrong sizing!

Sizing on the nominal flow rate without taking the peak flow rate into account would result in choosing smaller tank size and resin volume, and may lead in severe hardness leakage during the service cycle when the peak flow is reached.

The maximum softened water flow rate that a softener can produce is given by the following formula:

$$Q_{\text{service max}} = F_{S_{\text{service}}} \times BV$$

with:

$Q_{\text{service max}}$: service flow rate [gpm] ([l/min])

$F_{S_{\text{service}}}$: service velocity [BV/h]

BV: bed volume of resin [ft^3] ([l])

Knowing this required volume of resin, it is possible now to determine the needed tank. Note that at least a third of the total volume of the tank must be kept as free space so that the bed expansion during backwash is sufficient to ensure correct cleaning of the resin.

4.2.3 Resin exchange capacity and capacity of the unit

The resin exchange capacity and capacity of the unit are two different things that should not be confused. The resin exchange capacity is the amount of Ca^{2+} and Mg^{2+} that can be retained by 1/28 ft^3 (1 litre) of resin, which will depend on the resin type and salt dosage, whereas the capacity of the unit is the capacity of the system, which will depend on the volume of resin and resin exchange capacity.

Knowing the required volume of resin, it is possible to determine the exchange capacity of the unit. The capacity of the unit can be expressed in different ways:

- the mass capacity, which corresponds to the weight in equivalent CaCO_3 that can be fixed on the resin, expressed in Grain (or gram) as CaCO_3 ;
- the volume capacity, which represents the maximum amount of water that can be treated between two regenerations. This last capacity takes into account the hardness of the water to be treated and is expressed in ft^3 (m^3 or litre);
- the combined capacity, which represents the volume of water that could be treated between two regenerations if the inlet hardness is 1 gpg ($^{\circ}\text{f}$ or $^{\circ}\text{dH}$). This capacity is expressed in gpg "grains per gallon" ($^{\circ}\text{f} \cdot \text{m}^3$ or $^{\circ}\text{dH} \cdot \text{m}^3$).

The resin exchange capacity will depend on the amount of salt to be injected into the resin bed during the regeneration. This amount of salt is given in grams per litre of resin. The next table is showing the resin exchange capacity in function of the amount of salt for a system with standard efficiency regeneration.

Resin exchange capacity as a function of the salt dosage:

Salt amount [g/l _{resin}]	Corresponding resin exchange capacity [g/l _{resin}] as CaCO_3	$^{\circ}\text{f} \cdot \text{m}^3$ [per l _{resin}]	$^{\circ}\text{dH} \cdot \text{m}^3$ [per l _{resin}]
50	29.9	2.99	1.67
60	34	3.4	1.9
70	37.5	3.75	2.09
80	40.6	4.06	2.27
90	43.4	4.34	2.42
100	45.9	4.59	2.56
110	48.2	4.82	2.69
120	50.2	5.02	2.8

Salt amount [g/l _{resin}]	Corresponding resin exchange capacity [g/l _{resin}] as CaCO ₃	°f.m ³ [per l _{resin}]	°dH.m ³ [per l _{resin}]
130	52.1	5.21	2.91
140	53.8	5.38	3.01
150	55.5	5.55	3.1
170	58.5	5.85	3.27
200	62.7	6.27	3.5
230	66.9	6.69	3.74
260	71	7.1	3.97
290	75.3	7.53	4.21

To calculate the system mass capacity:

$$M_{\text{capacity}} = V_{\text{resin}} \times C_{\text{resin ex}}$$

with:

M_{capacity} : system mass capacity
[lb as CaCO₃] ([g as CaCO₃])

V_{resin} : volume of resin [ft³] ([l])

$C_{\text{resin ex}}$: resin exchange capacity
[lb/ft³ as CaCO₃] ([g/l_{resin} as CaCO₃])

To calculate the system combined capacity:

$$C_{\text{capacity}} = V_{\text{resin}} \times C_{\text{cor resin ex}}$$

with:

C_{capacity} : system combined capacity
[grain] ([°f.m³ or °dH.m³])

V_{resin} : volume of resin [ft³] ([l])

$C_{\text{cor resin ex}}$: corresponding resin exchange capacity
[grain/ft³] ([°f.m³/l or °dH.m³/l])

To calculate the system volume capacity:

$$V_{\text{capacity}} = M_{\text{capacity}} / TH_{\text{inlet}}$$

with:

V_{capacity} : system volume capacity
[gal] ([m³])

Or

M_{capacity} : system mass capacity
[grain as CaCO³] ([gram as CaCO³])

$$V_{\text{capacity}} = C_{\text{capacity}} / TH_{\text{inlet}}$$

C_{capacity} : system combined capacity
[grain] ([°f.m³ or °dH.m³])

TH_{inlet} : inlet water hardness
[GPG as CaCO₃] ([mg/l as CaCO₃ or °f or °dH])

Mandatory


If a mixing device is set on the valve before meter, use $TH = TH_{\text{inlet}} - TH_{\text{outlet}}$!

Having determined the previous capacity allows the operator to know the service cycle duration.

4.2.4 Valve configuration

Knowing the volume of resin, tank size and specifications of the resin, it is possible to determine the required valve configuration. The resin specification will give the backwash velocity, as well as the brine draw and slow rinse velocity that must be respected in order to ensure a proper regeneration of the unit. From this data, determine the required backwash flow rate as well as the brine draw and slow rinse flow rate. In most cases, the fast rinse flow rate will be the same as the backwash flow rate, however for certain valve types the fast rinse flow rate will be the same as the service flow rate.

To determine the backwash flow rate:

$$Q_{\text{backwash}} = F_{\text{S}}_{\text{backwash}} \times S$$

with:

Q_{backwash} : backwash flow rate
[ft³/h] ([m³/h])

$F_{\text{S}}_{\text{backwash}}$: backwash velocity
[ft/h] ([m/h])

S: Tank cross section area
[ft²] ([m²])

The DLFC installed on the valve has to limit the backwash flow rate to the above calculated flow rate.

To determine the injector size:

The velocities to be respected for brine draw and slow rinse are given on the resin manufacturer specifications. Generally speaking, the injector must allow a flow rate of about 4 BV / h (corresponding to the flow rate of brine being drawn added to the flow rate of raw water passing through the injector nozzle to create the suction effect).

$$Q_{\text{Inj}} = 4 \times \text{BV} / \text{h}$$

with:

Q_{Inj} : total flow rate passing through the injector
[ft³/h] ([l/h])

BV: bed volume of resin [ft³] ([l])

Info



This value does not correspond to the brine draw flow rate but to the total flow rate passing through the injector.

Refer to the injector diagrams at the inlet pressure in order to check if the injector will give a correct flow rate.

See chapters Salt dosage definition [→Page 31] and Injector flow rates [→Page 31].

4.2.5 Cycle time calculation

From this point, the volume of resin, the tank size, the capacity of the softener and the valve configuration are determined. Next step is to calculate the regeneration cycle duration, which depends on the valve configuration and the resin specifications.

Info



Several parameters need, potentially, to be adjusted.

For cycle time calculation the valve configuration must be known, which depends on:

- the tank size;
- the resin specifications for the velocity for backwashing the resin bed;
- the velocity of water for brine draw, slow rinse and fast rinse.

Further information needed for cycle time calculation are:

- the resin volume previously determined;
- the salt amount used per regeneration;
- the volume of water to use for backwash, brine draw, slow rinse, and fast rinse.

To calculate the backwash duration:

$$T_{\text{backwash}} = (N_{\text{BVbw}} \times \text{BV}) / Q_{\text{DLFC}}$$

with:

T_{backwash} : backwash duration [min]

N_{BVbw} : number of bed volume for backwash

BV: bed volume [ft^3] ([l])

Q_{DLFC} : drain line flow controller size
[ft^3/min] ([l/min])

Info



The typical value of the volume of water to be used for backwash is between 1.5 and 4 times the bed volume, depending on the inlet water quality.

To calculate the brine draw duration:

Knowing the injector draw flow rate at the working pressure:

$$T_{\text{brine draw}} = V_{\text{brine}} / Q_{\text{draw}}$$

with:

$T_{\text{brine draw}}$: brine draw duration [min]

V_{brine} : brine volume to be drawn [ft^3] ([l]), see Refill Calculation [→Page 30]

Q_{draw} : injection draw flow rate
[ft^3/min] ([l/min])

Tip



Multiply the amount of salt in lb (kg) by 3 to get an approximation of the brine volume to draw!

To calculate slow rinse duration:

The volume of water to be used for slow rinse is given in the resin manufacturers specifications. Generally speaking, it is advised that between 2 and 4 BV of water is used to perform the slow rinse after brine draw. The slow rinse cycle allows brine to be pushed slowly through the resin bed, allowing the resin to be in contact with brine for sufficient time and therefore to be regenerated.

Refer to the injector curve at the common working pressure to determine the slow rinse duration.

$$T_{\text{slow rinse}} = (N_{\text{BVsr}} \times \text{BV}) / Q_{\text{SR}}$$

with:

$T_{\text{slow rinse}}$: slow rinse duration [min]

N_{BVsr} : number of bed volume for slow rinse

BV: bed volume [ft^3] ([l])

Q_{SR} : injector slow rinse flow rate
[ft^3/min] ([l/min])

To calculate fast rinse duration:

The fast rinse is aimed at eliminating an excess of salt in the resin bed and also recompacting the resin in the tank.

Depending on the valve type, the fast rinse flow rate is controlled by the DLFC or it has about the same flow rate as in service. The fast rinse velocity can be the same as the service velocity, and the volume of water to be used for the fast rinse is generally between 1 and 10 BV depending on the salt dosage.

$$T_{\text{fast rinse}} = (N_{\text{BVfr}} \times \text{BV}) / Q_{\text{DLFC}}$$

with:

$T_{\text{fast rinse}}$: fast rinse duration [min]

N_{BVfr} : number of bed volume for fast rinse

BV: bed volume [ft^3] ([l])

Q_{DLFC} : drain line flow controller size
[ft^3/min] ([l/min])

To calculate the refill duration:

The refill flow rate is controlled by the refill controller (BLFC). The relation between the BLFC size, the tank size and the resin volume is given in the valve specifications.

To calculate the refill duration:

$$T_{\text{refill}} = V_{\text{WB}} / Q_{\text{BLFC}}$$

with:

T_{refill} : refill duration [min]

V_{WB} : Volume of water to be refill to prepare the brine
[ft^3] ([l])

Q_{BLFC} : BLFC size
[ft^3/min] ([l/min])

$$V_{WB} = D_{Salt} \times BV / S_{sol}$$

with:

V_{WB} : Volume of water to be refill to prepare the brine
[ft³] ([l])

D_{Salt} : Salt dosage per litre of resin
[lb/ft³] ([g/l])

BV : Bed volume [ft³] ([l])

S_{sol} : 0.79 lb/ft³ (360 g/l) - Solubility of salt per litre of water

Tip



When calculating the time required to draw the brine, take into account that the volume of brine [Vbrine] will be 1.125 bigger than the volume of water refilled!


4.3 Salt dosage definition



The salt settings are controlled through the controller programming. See Resin exchange capacity and capacity of the unit [→Page 26].

4.4 Injector flow rates


The following graphics represent the injectors flow rate as a function of the inlet pressure for the different injector sizes.

4.4.1 1650 injectors

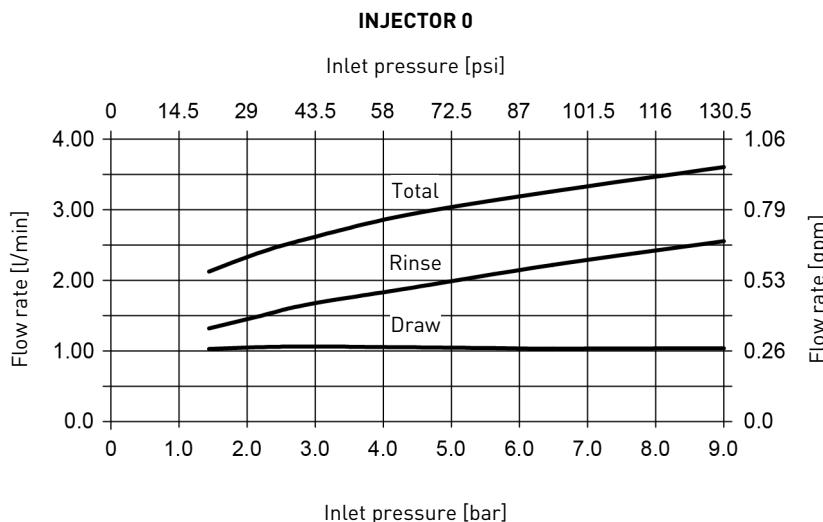

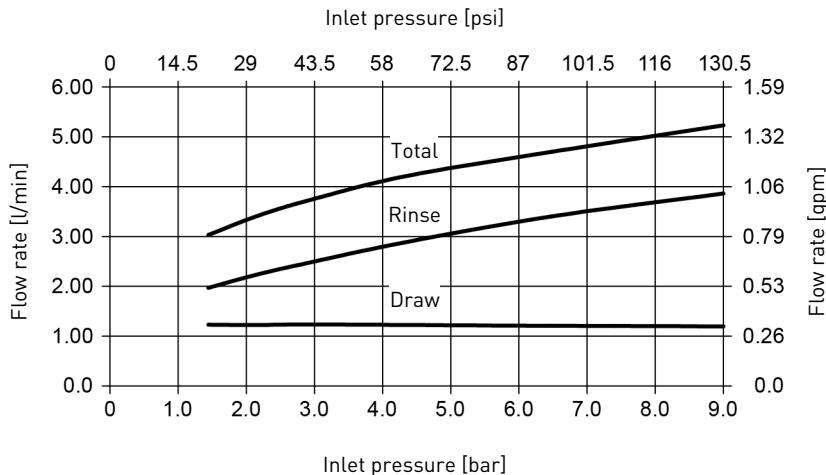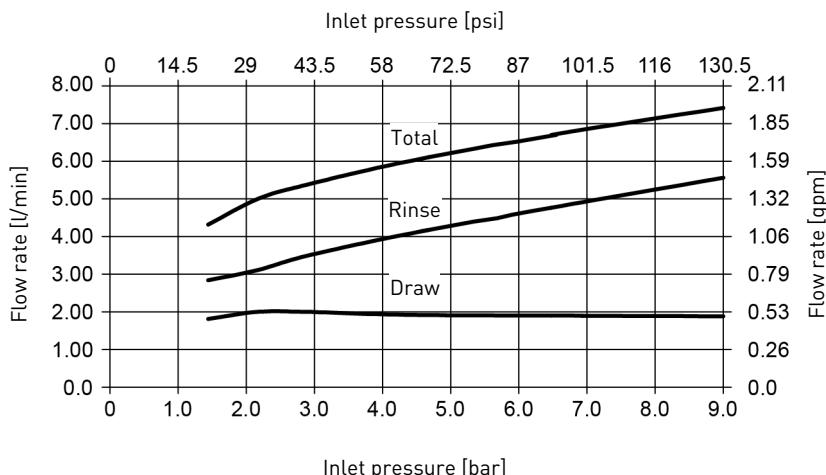INJECTOR 1**INJECTOR 2**

INJECTOR 3

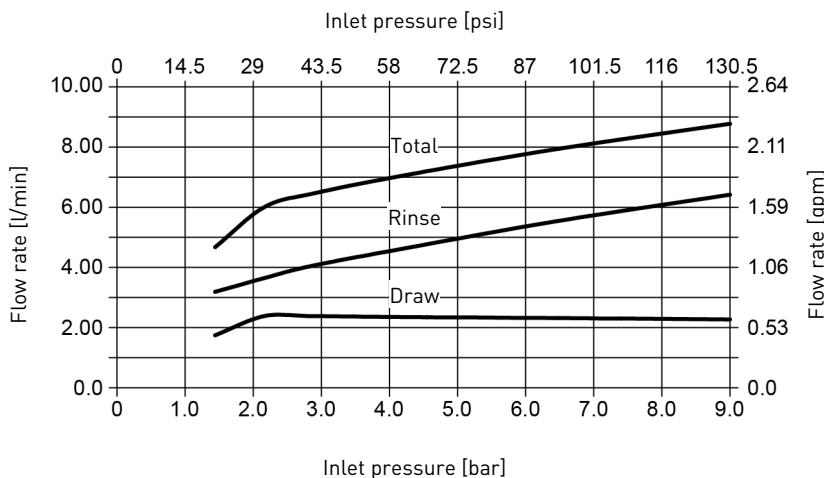

5 Installation

CAUTION

Risk of injury due to electrical shock or pressurized elements !

It is strictly forbidden for not qualified personal, to accede to system's internal parts to perform any kind of technical action.

Be sure to disconnect the electrical power, close the water inlet and depressurize the system before opening the front cover to access internal parts !

5.1 Product identification

Info



The 9100 SXT product is sold in several configurations; It is important to identify your configuration before proceeding with installing the product.

First check whether the product is already equipped with a power supply or not; if it is not present, the product must be powered with the following characteristics:

Output current frequency	50/60 Hz	Minimum power absorption	8 W
Output current voltage	24 VAC	Insulation Class	II

The input characteristics of the power supply depend on the electrical network available on site.

DANGER

The choice of a correct power supply is mandatory to guarantee the safety of users, if you do not feel expert, consult a professional.

The power supplies that Pentair supplies with the product are different and can be recognized by the part number on the power supply data plate; and these are:

Part number	Type	Input electrical rating
BU28597	European Transformer	230 VAC; 50/60 Hz
BU28597-20	United-Kingdom Transformer	230-240 VAC; 50/60 Hz
44147	North American Transformer	24 V, 9.6 VA; 50/60 Hz

Mandatory



Always check first if the supplied transformer is compatible with the local electrical network!

5.2 Warnings

The manufacturer will not be held liable for any damages to people or properties resulting from an improper use of the device not compliant with the following instructions.

Whenever this guide doesn't clarify all doubts about installation, service, or maintenance, please contact the technical support of the company that has installed the device.

Device installation must be done by a qualified technician according to the current standards and regulations, using tools compliant with a device for safe use and referring to that technician also for device maintenance.

In case of out of order or malfunction, before performing any kind of action on the device, please ensure that you have disconnected the transformer from the power source, shut off the inlet water supply to the valve and drained water pressure by opening a tap down-line of the valve.

1. Be careful when removing the valve from the box and during subsequent handling, weight is liable to cause damage to property and persons in case of accidental impact.
2. Before sending the water on the valve, make sure that all plumbing connections are tight and properly implemented in order to avoid dangerous leaks of pressurized water.
3. Use caution when installing welded metal piping near the valve, the heat may damage the plastic body of the valve and the bypass.
4. Be careful not to let the full weight of the valve rest on fittings, pipes, or bypass.
5. Make sure that the environment in which the valve is installed does not reach freezing temperatures of the water, the valve may be damaged.
6. Make sure that the tank containing the resin is vertical; otherwise, the resin could enter the valve and damage it.

5.3 Safety notices for installation

- Observe all warnings that appear in this manual;
- only qualified and professional personnel are authorized to carry out installation work.

5.4 Installation environment

5.4.1 General

- Use only regenerant salts designed for water softening. Do not use ice melt, block, or rock salts;
- keep the media tank in an upright position. Do not turn on its side, upside down, or drop it. Turning the tank upside down may cause media to enter the valve or might clog the upper screen;
- follow State and local codes for water testing. Do not use water that is micro-biologically unsafe or of unknown quality;
- when filling the media tank with water, first place the valve in the backwash position, then partly open the manual valve. Fill the tank slowly to prevent media from exiting the tank;
- when installing the water connection (bypass or manifold), first connect to the plumbing system. Allow heated parts to cool and cemented parts to set before installing any plastic parts. Do not get primer or solvent on O-rings, nuts, or the valve.

5.4.2 Water

- Water temperature must not exceed 109.4° F (43° C);
- a minimum of 20.3 psi (1.4 bar) (dynamic pressure on injector) of water pressure is required for the valve to operate effectively.

Mandatory



Do not exceed a maximum of 124.7 psi (8.6 bar) inlet pressure. In such cases, it is necessary to install a pressure regulator upstream the system.

5.4.3 Electrical

There are no user-serviceable parts in the AC/AC transformer, motor, or controller. In the event of a failure, these should be replaced.

- all electrical connections must be completed according to local codes;
- use only the power AC/AC transformer that is supplied;

Mandatory



The use of any power transformer other than the one supplied void the warranty of all electronic parts of the valve!

- the power outlet must be grounded;
- to disconnect power, unplug the AC/AC transformer from its power source;
- an uninterrupted current supply is required. Please make sure that the voltage supply is compatible with the unit before installation;
- make sure the controller power source is plugged in;
- if the electrical cable is damaged, it is imperative that it is replaced by qualified personnel.

5.4.4 Mechanical

Caution - material



Risk of damage due to wrong lubricant use



Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Use only approved silicone grease or soapy water!

- all plastic connections should be hand-tightened. PTFE (plumber's tape) may be used on connections that do not use an O-ring seal. Do not use pliers or pipe wrenches;
- existing plumbing should be in a good shape and free from limescale. In case of doubt, it is preferable to replace it;
- all plumbing must be completed according to local codes and installed without tension or bending stresses;
- soldering near the drain line should be done before connecting the drain line to the valve. Excessive heat will cause interior damage to the valve;
- do not use lead-based solder for sweat solder connections;
- the riser tube should be cut flush with the top of the tank. Slightly bevel the ridge in order to avoid deterioration of the seal whilst fitting the valve;
- the drain line must be a minimum of $1/2"$ (12.7 mm) in diameter. Use $3/4"$ (19 mm) pipe if the backwash flow rate is greater than 26.5 lpm or the pipe length is greater than 236.2" (6 m);
- do not support the weight of the system on the valve fittings, plumbing, or the bypass;
- it is not recommended to use sealants on the threads. Use PTFE (plumber's tape) on the threads of the drain elbow, and other NPT/BSP threads;
- the installation of a pre-filter is always recommended (100 μ nominal);

- valve inlet/outlet must be connected to main piping via flexible.

5.5 Integration constraints

Location of a water treatment system is important. The following conditions are required.

CAUTION

 **The surface for installation (platform or floor) must be solid, flat and level.**


Mandatory

 **Drain must be capable of handling a backwash flow rate of 5 gpm (19 l/min).**

- locate the softener as close as possible from drain discharge point and within 40 ft (12.2 m) maximum of drain discharge point, respecting minimum drain line diameter advises given at chapter Drain line connection [→Page 43];
- room to access equipment for maintenance and adding brine (salt) to tank;
- constant electrical supply to operate the controller;
- local drain for discharge as close as possible;
- water line connections with shut off or bypass valves;
- must meet any local and state codes for site of installation;
- valve is designed for minor plumbing misalignments. Do not support weight of system on the plumbing;
- use flexible piping to connect main piping to softener;
- be sure all soldered pipes are fully cooled before attaching plastic valve to the plumbing.


5.6 Block diagram and configuration example

Block diagram

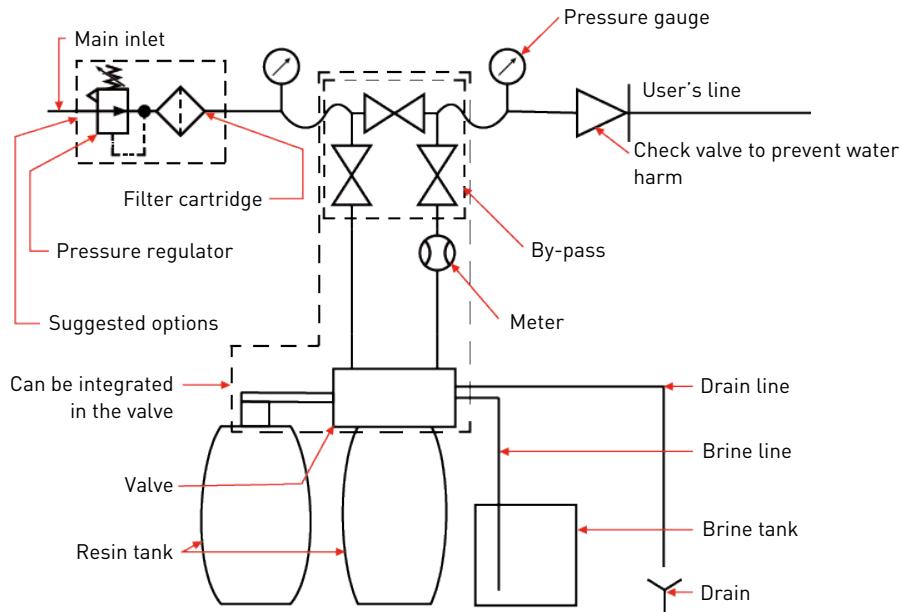

Top mounted configuration example

For EMEA

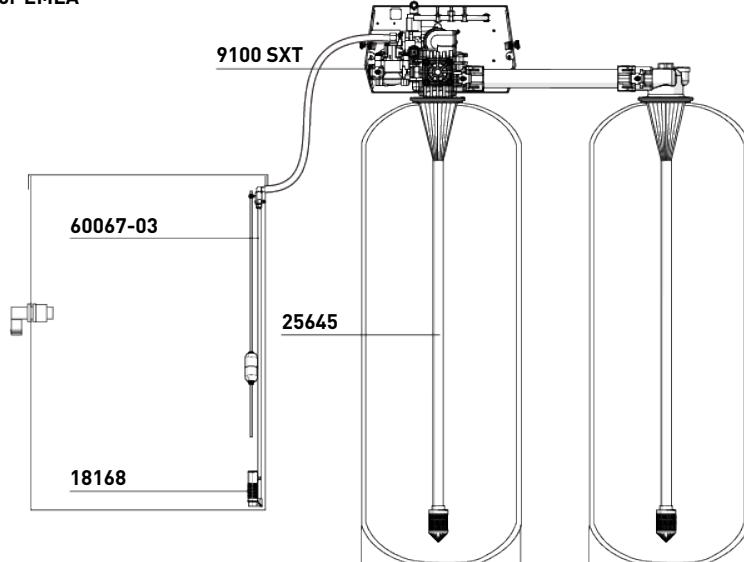

5.7 Valve on tank assembly

1. Lubricate the seals with approved silicone grease.
2. Spin the valve (1) onto the tank (2), ensuring the threads are not cross-threaded.
3. Rotate the valve (1) clockwise and freely, without using force until it comes to a stop.


Info

i This stop position is considered point zero.

4. Rotate the valve (1) clockwise from point zero to between $\frac{1}{4}$ turn and $\frac{1}{2}$ turn.

Caution - material**Risk of damage due to excessive force!**

Do NOT exceed 19.9 ft-lb (27 Nm) of torque when installing the valve. Exceeding this limit may damage the threads and cause failure.

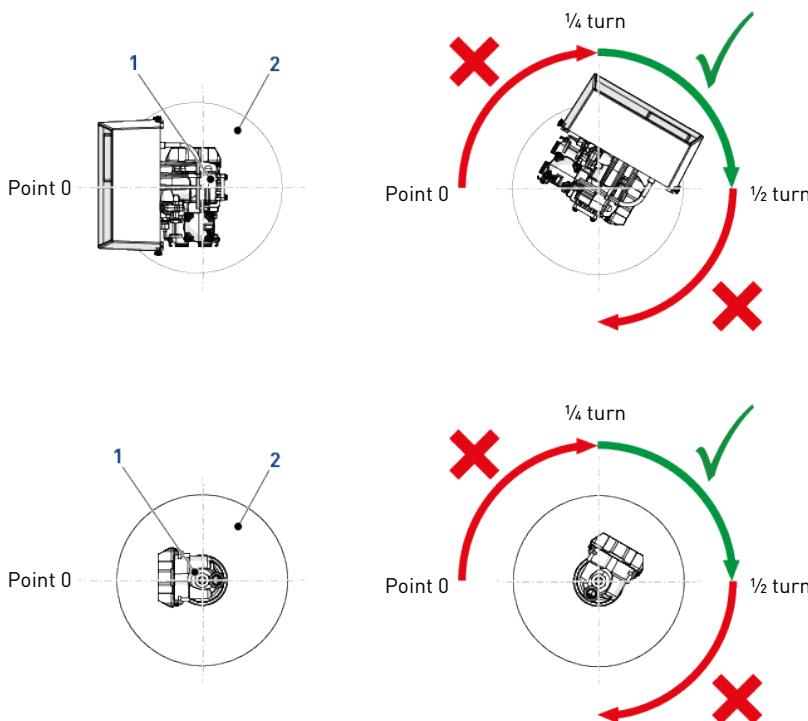

5.8 Valve connection to piping

The connections should be hand tightened using PTFE (plumber's tape) on the threads if using the threaded connection type.

In case of heat welding (metal type connection), the connections should not be made to the valve when soldering.



Tip

See chapter Components description and location [→Page 18] to identify the connections.

When pressurized, any composite tank will expand both vertically and circumferential. In order to compensate the vertical expansion, the piping connections to the valve must be flexible enough to avoid overstress on the valve and tank.


5.8.1 Top-mounted valve installation

The valve and tank should not be supporting any part of the piping weight. This is hence compulsory to have the piping fixed to a rigid structure (e.g. frame, skid, wall, etc.) so that the weight of it is not applying any stress on the valve and tank.

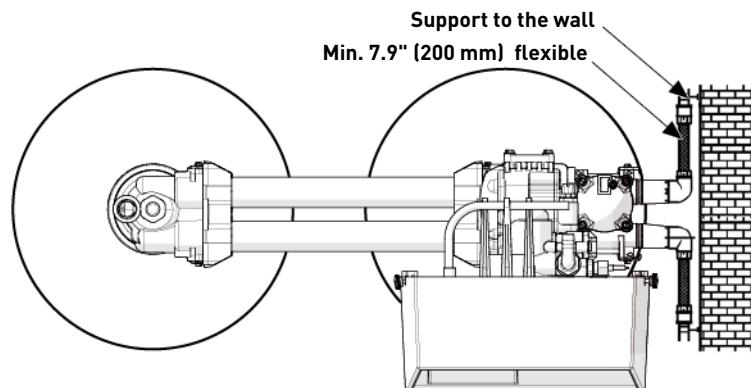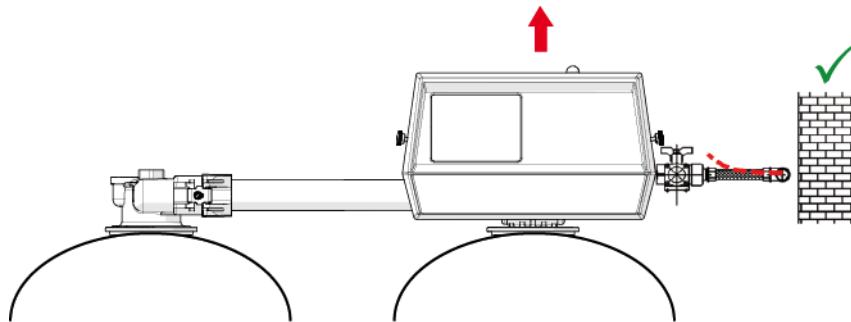

- The diagrams above illustrate how the flexible piping connection should be mounted;
- in order to adequately compensate the tank elongation, the flexible tubes must be installed **horizontally**;

- should the flexible piping connection be installed in vertical position, instead of compensating the elongation, it will create additional stresses on the valve & tank assembly. Therefore, this is to be avoided;
- the flexible piping connection must also be installed stretched, avoiding excessive length. For instance, 7.9" to 15.8" (20 to 40 cm) is enough;
- excessively long and non-stretched flexible piping connection will create stresses on the valve and tank assembly when the system is pressurized, as illustrated in the below picture: on the left the assembly when the system is unpressurised, on the right the flexible piping connection when put under pressure tends to lift up the valve when stretching up. This configuration is even more dramatic when using semi-flexible piping;
- failure to provide enough vertical compensation may lead to different kinds of damage, either on the valve thread which is connected to the tank, or on the female thread connection of the tank. In some cases, damage may also be seen on the valve inlet and outlet connections;

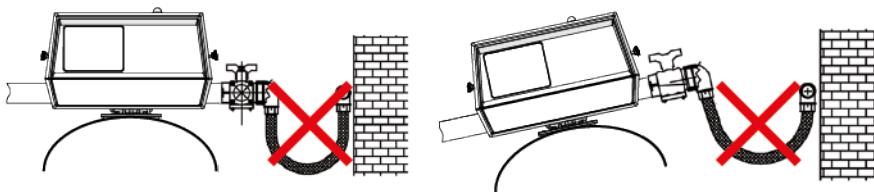

- in any case, any failure caused by improper installations and/or piping connections may void the warranty of Pentair products;
- in the same way, using lubricant* on the valve thread is not allowed and will void the warranty for the valve and tank. Indeed, using lubricant there will cause the valve to be over-torqued, which may lead to valve thread or tank thread damage even if the connection to piping has been done following the above procedure.

*Note: do not use petroleum or hydrocarbon-based lubricants. Using these types of lubricants will structurally damage valve and cause failures. Use only 100 % silicone lubricants.


5.9 Regeneration mode

Metered

The controller monitors the volume of water used. Once it calculates that there is not enough capacity for the next operation day, a regeneration cycle will be initiated immediately or at a pre-set time:

- **immediate control:** the controller measures water usage and regenerates the system as soon as the system capacity is reached.

5.10 Electrical connections

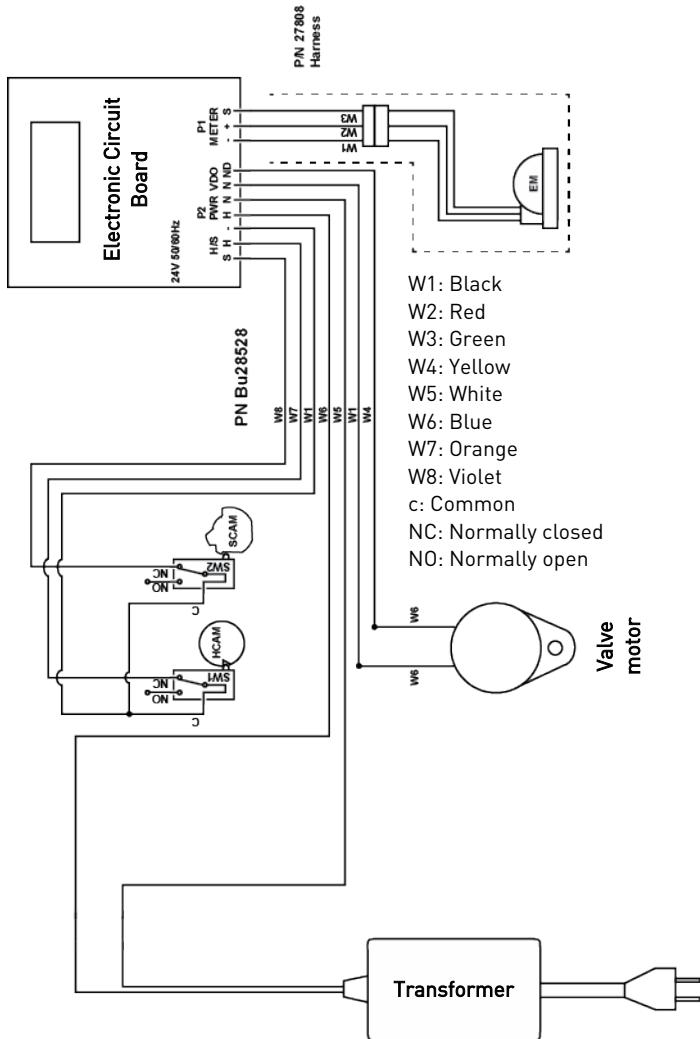


5.11 Bypassing

A bypass valve system should be installed on all water conditioning systems. Bypass valves isolate the softener from the water system and allow unconditioned water to be used. Service or routine maintenance procedures may also require that the system is bypassed.


Normal operation

Softening System

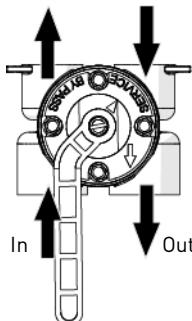

In Bypass

Softening System

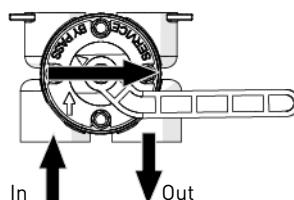

Caution - material



Risk of damage due to bad mounting!

Do not solder pipes with lead-based solder.

Do not use tools to tighten plastic fittings. Over time, stress may break the connections.
When the bypass valve is used, only hand tighten the plastic nuts.

Do not use petroleum grease on gaskets when connecting bypass plumbing. Use only 100% silicone grease products when installing any plastic valve. Non-silicone grease may cause plastic components to fail over time.

5.12 Drain line connection

Info



Standard commercial practices are expressed here.

Local codes may require changes to the following suggestions.

Check with local authorities before installing a system.

Mandatory




The drain line must be built with 1/2" semi rigid or rigid piping! An air gap must be present at the drain!

Caution - material**Risk of damage due to over-force!**

The drain line plastic elbow must always be hand-tighten without using the elbow as a lever.

The drain plastic elbow is not designed to support the weight of the tube. The tube has to have its own support.

Do not over tighten the hose tightening ring on its plastic support.

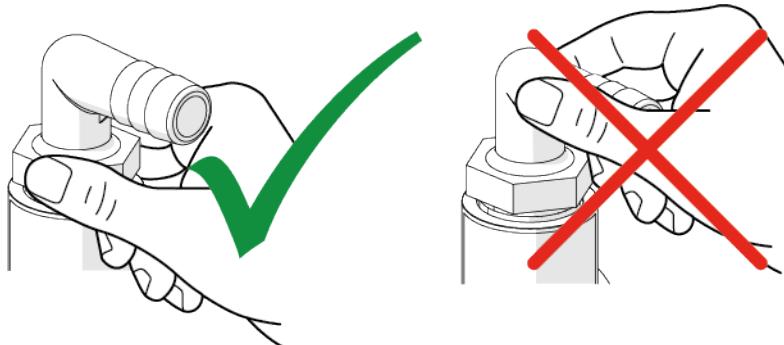

Apply sealing tape on the male thread of the plastic elbow.

Preferably, the unit should not be more than 6.1 m from the drain. Use an appropriate adapter fitting to connect plastic tubing to the drain line connection of the valve.

If the backwash flow rate exceeds 91 Lpm or if the unit is located 6.1-12.2 m from the drain, use 31.75 mm (1 1/4") tubing. Use appropriate fittings to connect the 31.75 mm (1 1/4") tubing to the 25.4 mm (1") NPT drain connection on the valve.

The drain line may be elevated up to 40" (1.8 m) providing the run does not exceed 157.5" (4.6 m) and water pressure at the softener is not less than 29 psi (2.76 bar) (0.276 MPa). Elevation can increase by 23.6" (61 cm) for each additional 8.7 psi (0.69 bar) (0.069 MPa) of water pressure at the drain connector.

Where the drain line is elevated but empties into a drain below the level of the valve, form a 3.9" (18 cm) loop at the far end of the line so that the bottom of the loop is level with the drain line connection. This will provide an adequate siphon trap.

Where the drain empties into an overhead sewer line, a sink-type trap must be used.


Secure the end of the drain line to prevent it from moving.

Mandatory

Waste connections or the drain outlet shall be designed and constructed to provide connection to the sanitary waste system through an air-gap of 2 pipe diameters or 2" (50.8 mm), whichever is larger.

Caution - material**Risk of damage due to lack of gap!**

Never insert the drain line directly into a drain, sewer line or trap. Always allow an air gap between the drain line and the waste water to prevent the possibility of sewage being back-siphoned into the softener.

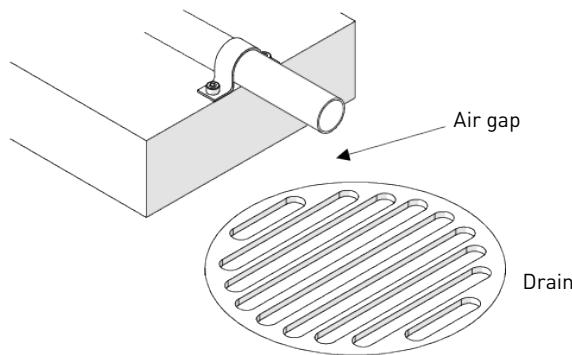


5.13 Overflow line connection

In the event of a malfunction, the brine tank overflow fitting will direct "overflow" to the drain instead of spilling on the floor. This fitting should be on the side of the brine tank. Most brine tank manufacturers feature a pre-drilled hole for the tank overflow connector.

To connect the overflow line, locate the hole on the side of the tank. Insert the overflow fitting into the tank and tighten with plastic thumb nut and gasket as shown below. Attach a $1/2"$ (12.7 mm) I.D. tubing (not supplied) to fitting and run to drain.

Do not elevate overflow higher than overflow fitting.

Do not tie into the drain line of the controller unit. The overflow line must be a direct, separate line from overflow fitting to drain, sewer or tub. Allow an air gap as per drain line instructions.

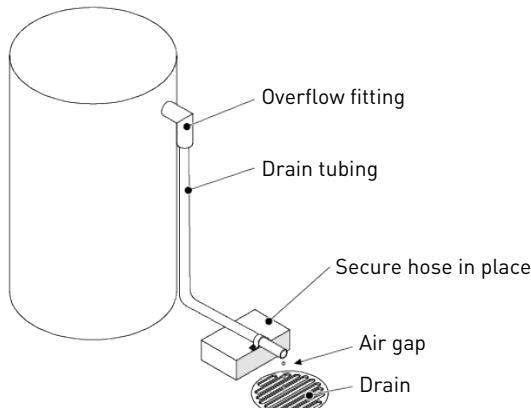

Caution - material**Risk of flooding due to lack of floor drain!**

Floor drain is always recommended to avoid flooding in case of overflow.

5.14 Brine line connection

Mandatory**The brine line must be built with 3/8" semi rigid piping!****Caution - material****Risk of malfunction due to the use of wrong equipment!**


Flexible and semi-flexible hoses may shrink because of the vacuum during brine draw.

The brine line connects the valve to the brine tank. Make the connections and hand tighten. Be sure that the brine line is secure and free from air leaks. Even a small leak may cause the brine line to drain out, and the softener will not draw brine from the tank. This may also introduce air into the valve, causing problems with the valve operation.

Brine line must be equipped with brine tank air check in the brine tank.

6 Programming

6.1 Display

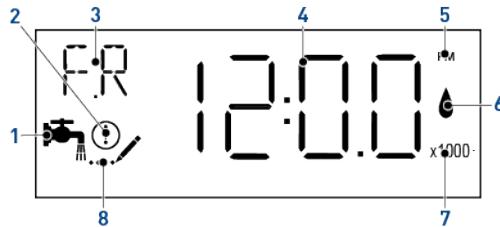

1. Service icon

- Appears in service mode;
- flashes if a regeneration cycle has been queued.

2. Error / Information icon

- Appears in case of error, see Troubleshooting [→Page 92], or in diagnostic mode, see Diagnostic [→Page 59].

3. Parameter display

Master programming and diagnostic modes:

- C: Unit capacity;
- CD: Current day;
- CT: Regeneration control type;
- DF: Display format;
- Dn, n = 1 to 7: Day of week;
- DO: Days override;
- FM: Flow meter;
- FR: Current flow rate;
- H: Feedwater hardness;
- HR: Hours in service;
- K: Meter pulse;
- NT: Number of tanks;
- PF: Peak flow rate;
- RC: Reserve capacity;
- RF: Regeneration flow;
- RS: Reserve selection;
- RT: Regeneration time;
- SF: Safety factor;
- SV: Software version;
- TD: Time of day;
- TS: Tank in service;
- V: Filter capacity;
- VU: Volume used.

Regeneration cycles:

- B1: First backwash (for dF2b regeneration flow);
- B2: Second backwash (for dF2b regeneration flow);
- BD: Brine draw;
- BF: Brine fill;
- BW: Backwash;
- RR: Rapid rinse.

4. Data display**5. PM indicator**

- Appears if controller set in US unit.

6. Flow indicator

- Flashes when outlet flow is detected.

7. x1000 indicator

- Appears when the displayed number is bigger than 9999.

8. Programming icon • Appears in programming modes.

6.2 Commands


Info
<p>Info Menus are displayed in a defined and incremental order. If none of the buttons are pushed for 5 minutes in the Programming mode, or if there is a power failure, the controller returns to Service mode without saving.</p>
Mandatory
<p>! In order to store the new settings in the programming mode, it is necessary to go through all the parameters !</p>

1. Press  to pass to the next step.
2. Use  and  to adjust the values.

6.3 Setting the time of the day (TD)

Set the time in the system.

1. Press and hold  or  until the programming icon replaces the service icon and the parameter display reads TD.
2. Set the time with  or .
3. Press  to validate the selection and return to the service mode, or wait for 10 seconds.



6.4 Basic programming

6.4.1 Basic programming mode chart

Parameter		Options	Definition	Note
DO	Days override	0 to 99	Day	-
RT	Regeneration time	00:00:00 to 23:59:59	Hour	Regeneration time will not appear unless regeneration day override is on.
H	Feedwater hardness	1 to 1990	°TH, ppm or grains	Only displayed for volumetric regenerations.
RC	Fixed reserve capacity	0 to 50	%	Only displayed for volumetric regenerations and if set in reserve selection.
SF	Safety factor	0 to 50	%	Only available if set in reserve selection.
CD	Current day	1 to 7	Day of the week	-

6.4.2 Day of override (DO)

Set the maximum number of days of operation without regeneration according to local regulation.

1. Press  and  simultaneously for 5 seconds to enter the menus sequence.
2. Select the number of days of override with  and .
3. Press  to validate the selection and advance to the next parameter.

DO	
----	---

6.4.3 Regeneration time (RT)

Determine the time of regeneration at a time of low or no water usage.

1. Adjust the regeneration time with  and .
2. Press  to validate the selection and advance to the next parameter.

RT	2:00
----	------

6.4.4 Feed water hardness (H)

Set the feed water hardness in °TH.

1. Adjust the feed water hardness with  and .
2. Press  to validate the selection and advance to the next parameter.

H	30
---	----

6.4.5 Reserve capacity (RC) or (SF)

Determine the reserve capacity in litre or in percentage.

1. Adjust the reserve capacity with  and .
2. Press  to validate the selection and advance to the next parameter.

RC	23
----	----

6.4.6 Current day of the week (CD)

Determine the day of regeneration.

Info



Appears only if the softener is set to "weekly time clock".

1 for Monday, 2 for Tuesday, 3 for Wednesday, 4 for Thursday, 5 for Friday, 6 for Saturday and 7 for Sunday.

1. Adjust the day of the week with  and .
2. Press  to validate the selection and exit the basic programming mode.

CD	
----	---

6.5 Master programming mode

Info



As soon as programming mode is entered, all parameters can be displayed or set to suit the needs.

Depending on the current programming, some functions will not be displayed or will not be selectable.

6.5.1 Master programming mode chart


Parameter		Options	Definition	Note
DF	Display format	GAL	US units	-
		Ltr	Metric units	-
RF	Regeneration flow	dF1b	Std DF single backwash	Standard for 9100 twin valve.
		dF2b	Std DF double backwash	-
		FLtr	Filter	Not to be used with twin valve.
		UFbd	UF brine first	-
		UFlt	UF filter	Not to be used with twin valve.
		Othr	Other	-
CT	Regeneration control type	Fd	Metered delayed	-
		FI	Metered immediate	Standard for 9100 twin valve.
		tc	Time clock	-
		dAY	Day of the week	-
NT	Number of tanks	1	Single tank system	-
		2	Double tanks system	Standard for 9100 twin valve.
TS	Tank in service	U1	Tank 1 in service	Only displayed for double tanks system.
		U2	Tank 2 in service	
C	Unit capacity	0.1 to 9'999	(°TH/°dH).L x1'000	Only displayed for volumetric regenerations with DF set in Ltr.
		1 to 9'999	x1'000 grains	Only displayed for volumetric regenerations with DF set in GAL.
V	Filter capacity	0.1 to 9'999	x1'000 L	Only displayed for filter with DF set in Ltr.
		1 to 9'999 1 to 9'999	GAL x1'000 GAL	Only displayed for filter with DF set in GAL.

Parameter		Options	Definition	Note
H	Feedwater hardness	1 to 1'990	°TH/°dH	Only displayed for volumetric regenerations with DF set in Ltr.
		1 to 199	grains per gallon	Only displayed for volumetric regenerations with DF set in GAL.
RS	Reserve selection	SF	Safety factor	-
		rc	Fixed reserve capacity	-
SF	Safety factor	0 to 50	%	Only available if set in reserve selection.
RC	Fixed reserve capacity	0 to 50	%	Only displayed for volumetric regenerations and if set in reserve selection.
DO	Days override	0 to 99	Day	-
RT	Regeneration time	00:00:00 to 23:59:59	Hour	Regeneration time will not appear unless regeneration day override is on.
B1	First backwash	0 to 199	Minute	Only displayed for dF2b regeneration flow. In case of dF1b regeneration flow, the screen shows BW.
BD	Brine draw			BD consist of time for brine draw and slow rinse.
B2	Second backwash			Only shown in dF2b regeneration flow.
RR	Rapid rinse			-
BF	Brine fill	0 to 199	Minute	-
BW	Backwash			-
Rn	Cycle number n=1 to 6			Only if "Othr" is chosen under VT . R1, R2, R3, etc... will be displayed instead.
Dn	Day of week, n=1 to 7	ON - OFF	-	Regeneration setting for each day of the week. OFF by default. Not available for 9000 serie valves.
CD	Current day	1 to 7	Day of the week	Not available for 9000 serie valves
FM	Flow meter type	P0.7	¾" paddle wheel	-
		t0.7	¾" turbine	-
		P1.0	1" paddle wheel	-
		t1.0	1" turbine	-
		P1.5	1½" paddle wheel	-
		t1.5	1½" turbine	-
		P2.0	2" paddle wheel	-
		Gen	Generic or non-Fleck	-

Parameter	Options	Definition	Note
K	Meter pulse	0.1 to 999.9	Litre Only displayed for generic flow meter type.

6.5.2 Entering master programming mode

1. Press and hold or until the programming icon replaces the service icon and the parameter display reads TD.
2. Set the time to 12:01 PM with or .
3. Press to validate the selection and return to the service mode, or wait for 10 seconds.
4. Press and hold and until the programming icon replaces the service icon and the display format screen appears.




6.5.3 Display format mode (DF)

Select the unit of measure.

Options:

- GAL: U.S. gallons and 12-Hour AM/PM;
- Ltr: litres and 24-Hour.

1. Press or to select the unit.
2. Press to validate the selection and move to the next parameter.




6.5.4 Regeneration flow (RF)

Select the regeneration flow.

Options:

- dF1b: standard downflow single backwash (standard);
- Othr: other;
- UFtr: upflow filter (for 5000 filter);
- UFbd: upflow brine first;
- FLtr: filter, to be used with standard piston only (except 5000);
- dF2b: standard downflow double backwash.

1. Press or to select the regeneration flow.
2. Press to validate the selection and move to the next parameter.



6.5.5 Regeneration control type (CT)

Select the regeneration controller type.

Options:

- Fd: meter delayed;
- Fl: meter immediate;

- tc: time clock;
- dAY: day of the week.

Mandatory


Due to the usage of twin tanks, set regeneration control type to meter immediate.

1. Press or to select **FI**.
2. Press to validate the selection and move to the next parameter.

CT	FI
----	----

6.5.6 Number of tanks (NT)

Select the number of tanks.

Options:

- NT 1: single tank system;
- NT 2: double tanks system.

Mandatory


Due to the 9100 valve being designed for double tanks system only, set valve type to 2.

1. Press or until "---2" is displayed.
2. Press to validate the selection and move to the next parameter.

NT	---	2
----	-----	---

6.5.7 Tank in service (TS)

Info


This parameter appears only if number of tanks (NT) is set to 2.

If it does not appear, the 9100 valve being a double tanks system, go back to number of tanks (NT) and set it to 2.

Select which of the two tanks is in service.

1. Press or to select which tank is in service.
2. Press to validate the selection and move to the next parameter.

TS	-	0		-
----	---	---	--	---

6.5.8 Unit capacity (C)

Set the unit capacity.

Mandatory


Enter the capacity of the media bed in $m^3 \times {}^{\circ}TH$ or g as $CaCO_3$ for softener system (C is displayed in the upper left corner) or in litres for filter (V is displayed in the upper left corner)!

Info



The unit capacity parameter is only available if the controller type has been programmed for volumetric regeneration.

The unit capacity can be set from 0.1 to $9'999 \times 1'000$ °TH.L if **DF = Ltr**, or from 1 to $9'999 \times 1'000$ grains if **DF = GAL**.

1. Press or to select the unit capacity.

2. Press to validate the selection and to move the next parameter.

6.5.9 Feedwater hardness (H)

Set the feedwater hardness.

Mandatory



Enter the feedwater hardness in °TH, ppm or grains of hardness for softener system!

Info



The feedwater hardness parameter is only available if the controller type has been programmed for volumetric regeneration.

The feedwater hardness can be set from 1 to $1'990$ °TH/dH if **DF = Ltr**, or 1 to 199 in grains per gallon if **DF = GAL**.

1. Press or to set the feedwater hardness in accordance with display format (DF), see Display format mode (DF) [→Page 53].

2. Press to validate the selection and to move the next parameter.

6.5.10 Reserve selection (RS)

Info



This parameter is not useful when regeneration control type (CT) is set to FI.

Set the reserve type.

Options:

- SF: safety factor;
- RC: fixed reserve capacity.

1. Press or to set the reserve type.

2. Press to validate the selection and move to the next parameter.

6.5.10.1 Safety factor (SF)

Info



This parameter is not shown if RS is set to RC.

The safety factor can be set from 0 to 50% of the initial volumetric capacity.

1. Press or to set the reserve type.

2. Press to validate the selection and move to the next parameter.

SF	20
----	----

6.5.10.2 Reserve capacity (RC)

Info



This parameter is not shown if RS is set to SF.

The fixed reserve capacity can be set up to a volume equivalent to 50% of the initial volumetric capacity.

1. Press or to set the reserve type.

2. Press to validate the selection and move to the next parameter.

RC	23
----	----

6.5.11 Days override (DO)

Set the maximum number of days between regeneration cycles.

Info



This parameter allows setting the maximum amount of days that the system can stay in service mode without regeneration.

Mandatory



In time clock mode, this parameter must be set and the controller will need at least one regeneration day activated.

Setting the parameter to "OFF" disables this function.

The number of days can be set from OFF, or 1 to 99 days.

1. Press or to set the days override.

2. Press to validate the selection and move to the next parameter.

DO	
----	--

6.5.12 Regeneration time (RT)

Set the regeneration time.

Info



Regeneration time is the time of the day when regenerations occur for delayed regeneration of any type and calendar override regeneration.

1. Press or to set the regeneration time.
2. Press to validate the selection and move to the next parameter.



6.5.13 Regeneration cycle step duration

Set the duration in minutes of each regeneration cycle.

Info

Setting a cycle step to 0 will cause the controller to skip that step during regeneration, but keeps the following steps available.
The different regeneration cycles are listed in sequence based on the regeneration flow selected for the system.
All cycles can be set from 0 to 199 minutes.

6.5.13.1 Regeneration abbreviations

B1	First backwash	BF	Brine fill
B2	Second backwash	BW	Backwash
BD	Brine draw	RR	Rapid rinse

6.5.13.2 For pre-set regeneration cycles

1. Press or to set the regeneration cycle time.
2. Press to validate the selection and move to the next parameter.
3. Repeat the two previous steps for each cycle.




6.5.13.3 For regeneration flow Other

Info

The regeneration cycles are identified as R1 to R6.

1. Press or to set the regeneration time of this cycle.
2. Press to validate the selection and move to the next regeneration cycle.
3. Repeat the two previous steps for each cycle.




6.5.14 Day of week (Dn, n = 1 to 7)

Set the day of week for regeneration.

Info

The day of week parameter is only available if "day" mode has been set in controller type selection.

1. Press  or  to set "ON" or "OFF" to set the day as a regeneration day.
2. Press  to validate the selection.
3. Repeat the two previous steps until **D7** is set.
4. Press  to validate the selection and move to the next parameter.



6.5.15 Current day (CD)

Set the current day.

Info

 The current day is defined from D1 (Monday) to D7 (Sunday).

1. Press  or  to set the current day.
2. Press  to validate the selection and move to the next parameter.



6.5.16 Flow meter type (FM)

Select the flow meter type.

Options:

- P0.7: ¾" paddle wheel meter (Standard setting for 4600, 5600 and 9100);
- t0.7: ¾" turbine meter;
- P1.0: 1" paddle wheel meter (Standard setting for 2750 and 9000);
- t1.0: 1" turbine meter;
- P1.5: 1½" paddle wheel meter ;
- t1.5: 1½" turbine meter;
- P2.0: 2" paddle wheel meter;
- Gen: generic or other non-Fleck meter.

1. Press  or  to set the flow meter type.
2. Press  to validate the selection and move to the next parameter or exit master programming mode and save modifications done.



6.5.17 Meter pulse (K)

Set the meter pulse for a non-standard flow meter.

Info

 The meter pulse parameter is only available if the Gen option has been set in flow meter type selection.

1. Press or to set the meter constant in pulses per unit of volume.
2. Press to validate the selection and to exit the master programming mode.

6.6 Diagnostic

Info



Depending on current settings, some displays cannot be viewed.

If none of the buttons are pushed for 1 minute in the diagnostic mode the controller returns to Service mode.

6.6.1 Commands

1. Press and hold and for five seconds to enter the diagnostic mode.
2. Press or to navigate in the diagnostic mode.
3. Press to exit the Diagnostic mode at any time.

6.6.2 Current flow rate (FR)

Info



The display is updated every second.

1. Current flow rate display (l/min or gpm depending on display format programmed):

6.6.3 Peak flow rate (PF)

Info



The controller registers the highest flow rate (l/min) since the last regeneration.

1. Peak flow rate display:

6.6.4 Hours since last regeneration (HR)

Info



Shows the number of hours since the last regeneration, indicating the length of the current service cycle.

1. Hours since last regeneration display:

6.6.5 Volume since last regeneration (VU)

Info



Shows the volume used since the last regeneration (l).

1. Volume since last regeneration display (l or Gal depending on display format programmed):

VU
25

6.6.6 Reserve capacity (RC)

Info



Shows the remaining reserve volume until next regeneration (l).

1. Volume until next regeneration display (l or gal depending on display format programmed):

RC
200

6.6.7 Software version (SV)

Info



Shows the version of the software used by the controller.

1. Software version display:

SV
3.0

6.7 Resetting the controller

Mandatory



Once you have completed this operation, check all programming steps!

Info



There are two options to reset: partial and hard reset.

Partial reset will set all the parameters to default values, except volume remaining in volumetric systems and days since last regeneration in time clock systems.

Hard reset will set all the parameters to default values.

6.7.1 Soft reset (SR)

1. Press and hold and for 25 seconds while in normal service mode until **SR** is displayed.

SR - - - -

2. Reprogram all parameters in Master programming mode.

6.7.2 Hard reset (HR)

1. Hold  while powering up the unit.
2. The display shows **HR**.
3. Reprogram all parameters in Master programming mode.

A rectangular box representing a digital display. The text "HR" is displayed in the top-left corner, followed by a horizontal line with four dashes to its right.

7 Commissioning

Info



This chapter is available for standard regeneration flows. Contact your supplier if the actual regeneration is not standard and if you need assistance.

7.1 Water filling, draining and waterproofness inspection

1. With the bypass still in bypass position (inlet and outlet of the valve closed), plug in the SXT controller to the power source.
2. Proceed to programming according to your system specification if not done yet.
3. Start a manual regeneration by pressing the regen button for 5 seconds. The piston will move into backwash position. If the first cycle is not backwash, quick cycle the valve until the piston is in backwash position. Once in this position, unplug the SXT controller from the power source.
4. With the bypass still in bypass position, put the bypass slowly in service position.
5. Open the nearest faucet close to the system.
The valve and tank will slowly get filled with raw water, allowing air to be purged by the drain and/or by the open faucet next to the system. Open the inlet progressively until fully open position.
6. Once the drain runs clear and the bypass valve is fully in service position, plug in again the SXT controller to the power source.
7. Push on the regen button once to move the piston to the next regeneration cycle position. Leave the valve 1 minute in each position and move to the next one, until RF (brine refill cycle) is displayed. When RF is displayed, let the valve run the entire cycle and check the level of water in the brine tank or cabinet. The level of water in the brine tank should be about 1.96" (5 cm) above the salt platform. You may want to mark the level on the brine tank as this can be used as an indicator for the future lifetime of the softener.
8. Once RF is completed, the valve will automatically go back into service position (unless non-standard regen sequence is programmed). Start again a manual regeneration by pressing for 5 seconds on the regen button. The valve will move to backwash position.
9. Press the regen button once to move to brine draw position. Check to see in the brine tank is the water level decrease.
10. Once the draw function is observed and confirmed (level of water in the brine tank or cabinet has decreased), you may go through each cycle pushing on the regen button until RF, leave the water come back to the "full" level, and then push on the regen button so that the valve returns into service position.
11. Repeat above procedure, from its second step, for the second tank.
12. Slowly open the outlet manual valve, and close the bypass manual valve. The system is now in service.
13. Close the faucet.

14. Fill the brine tank or cabinet with salt. You may want to mark the level of water in the brine tank/cabinet when completely refilled with water and full of salt. In the future, after each regeneration, you can visually control that the quantity of water refilled should be between the two marks done. Marking is optional, but may allow to visually detect any irregularity during regeneration that may lead to softener inefficiency.
15. With the brine tank completely refilled and full of salt, adjust the safety brine valve in the brine well. Make sure the overflow elbow is installed above the float level.
16. After the softener has been running a few minutes in service, proceed to hardness test on outlet water to make sure the water is treated as per requirements.

The system is ready and in service.

7.2 Sanitization

7.2.1 Disinfection of water softeners

The materials of construction of the modern water softener will not support bacterial growth, nor will these materials contaminate a water supply. In addition, during normal use, a softener may become polluted with organic matter, or in some cases with bacteria from the water supply. This may result in an off-taste or odour in the water.

Thus, the softener may need to be disinfected after installation. Some softeners will require periodic disinfection during their normal lifetime. Consult the installing dealer for more information on softener disinfection.

Depending on the conditions of use, the softener type, the type of ion exchanger and the disinfectant available, a choice can be made among the following methods.

7.2.2 Sodium or calcium hypochlorite

These materials are satisfactory for use with polystyrene resins, synthetic gel zeolite, greensand and bentonites.

5.25 % Sodium hypochlorite

If stronger solutions are used, such as those sold for commercial laundries, adjust the dosage accordingly.

Dosage

- **For EMEA**

- Polystyrene resin: set 1.25 ml fluid per 1 l of resin.
 - Non-resinous exchangers: set 0.85 ml fluid per 1 l.

- **For NAM**

- Polystyrene resin: set 1.2 fluid ounce (35.5 ml) per ft³.
 - Non-resinous exchangers: set 0.8 fluid ounce (23.7 ml) per ft³.

Brine tank softeners

Backwash the softener and add the required amount of hypochlorite solution to the well of the brine tank. The brine tank should have water in it to permit the solution to be carried into the softener.

Proceed with the normal regeneration.

Calcium hypochlorite

Calcium hypochlorite, 70 % available chlorine, is available in several forms including tablets and granules. These solid materials may be used directly without dissolving before use.

Do not let the disinfectant stand for more than 3 hours in the brine tank before the regeneration start.

Dosage

- **For EMEA**
 - Measure two grains (~ 0.11 ml) for 1 l.
- **For NAM**
 - Measure two grains (~ 0.1 ounce (3 ml)) per ft³.

Brine tank softeners

Backwash the softener and add the required amount of hypochlorite to the well of the brine tank. The brine tank should have water in it to permit the chlorine solution to be carried into the softener.

Proceed with the normal regeneration.


8 Operation

8.1 Display


8.1.1 Display during operation

Examples:

- Valve in service with day time:
- Valve in service with volume remaining before regeneration:
- Remaining days before next regeneration:
- In volumetric regeneration flow, reserve 1223 litres remaining:
- In volumetric regeneration flow, exhausted reserve, immediate or delayed start in regeneration depending on the adjustment:
- Tank in service:




12:13



20.1




3



RC 1223



RC - - -



TS - 0 1-

Mandatory



Ensure that the tank in service displayed corresponds to the physical position indicator on the valve!

Info



In delayed volumetric mode, the icon  flashes as soon as the reserve begins to be used.

8.1.2 Display during regeneration


During a regeneration the display shows the current cycle step and the time remaining for that cycle. The countdown for the time remaining starts only when the valve is in the cycle displayed.

Examples:


- Valve going to rapid rinse. **RR** are flashing:
- Refill cycle, 12 min 38 sec. left:
- Rapid rinse cycle, 2 min 17 sec. left:



RR - - -



RF 12:38



RR 2:17

8.2 Recommendations

- Use only regeneration salts designed for water softening in accordance with EN 973;
- for optimal system operation, the use of clean salt, free from impurities, is recommended (for example salt pellets);
- do not use ice melt, block, or rock salts;
- the sanitizing process may introduce chlorine compounds which may reduce the life of the ion exchange resins. Refer to media manufacturer specifications sheet for more information.

8.3 Manual regeneration

Mandatory



The controller must be in service in order to enable this procedure!

8.3.1 Manual delayed regeneration

Info



This option is not available in mode Fl.

8.3.2 Manual immediate regeneration

1. Press and hold  for 5 seconds to initiate immediate manual regeneration regardless from the programmed regeneration control type.

8.3.3 To advance regeneration cycles

1. Press  to pass to the next regeneration cycle.

8.4 Operation during a power failure

- Current valve position, cycle step time elapsed, and time of day is stored 24 hours during a power failure, and will be restored upon power restoration;
- in regeneration, when power is shutting down, the controller saves the current regeneration data. When power is restored, the controller resumes the regeneration cycle at the point where power failed;

Caution - material



Risk of damage due to power failure!

Without power, the valve stays in its current position until power is restored.

The system should include all required safety components to prevent overflows resulting from a power failure during regeneration.

- all the program settings are stored in a permanent memory;
- time is kept during a power failure and the time of day is adjusted upon restoration of the power (as long as the power is restored within 24 hours);
- the time of day on the main display screen will flash when there has been a power failure;
- the flashing of the time of day can be stopped by pressing any button on the display.

9 Maintenance

Mandatory



Cleaning, maintenance and service operation shall take place at regular intervals and must be done by qualified personnel only in order to guarantee the proper functioning of the complete system.

Report maintenance done in the Maintenance chapter of the User Guide document.

Failure in respecting above instructions may void the warranty!

9.1 General system inspection

Mandatory



Must be done, at minimum, once a year!

9.1.1 Water quality

1. Raw water total hardness.
2. Treated water hardness.

9.1.2 Mechanical checks

1. Inspect general condition of softener/filter and associated ancillaries and check for any leaks, ensure valve connection to piping is made with adequate flexibility as per manufacturer instruction.
2. Inspection of electrical connections, verify wiring connections and search for evidence of overloading.
3. Verify settings of electronic timer, verify regeneration frequency, and make sure the valve configuration is appropriate for media and tank size.
4. Check water meter, if present, report water meter settings and compare with previous inspection.
5. If water meter is present, verify total water consumption compared to previous visit.
6. If pressure gauges are installed before and after softening/filtering system, verify and record static and dynamic pressure, reporting pressure drop. Verify that inlet pressure respects valve and softening/filtering system limits. Verify that pressure drop stay stable year on year, adapt backwash duration if required.
7. If pressure gauges are not present, but suitable points exist, install temporary pressure gauge(s) to perform precedent point.

9.1.3 Regeneration test

1. Check condition of brine tank and any associated equipment.
2. Check salt level in brine tank.
3. Initiate regeneration test.
 - ⇒ Check brine draw during brine draw stage.
 - ⇒ Check brine tank refill.
 - ⇒ Check operation of safety brine valve, where fitted.
 - ⇒ Check for brine draw off levels.
 - ⇒ Check for resin loss at the drain during regeneration.
 - ⇒ Where fitted, check for satisfactory operation of solenoid, i.e. outlet shut off during regeneration and/or brine line shut off valve(s).
4. Test and record Total Hardness of outlet water from softener vessel(s).

9.2 Recommended maintenance plan

9.2.1 Valve used for softening

Items	1 year	2 year	3 year	4 year	5 year
Injector & filter	Clean	Clean	Clean	Clean	Clean/ replace if necessary
BLFC***	Clean	Clean	Clean	Clean	Clean/ replace if necessary
DLFC***	Clean	Clean	Clean	Clean	Clean/ replace if necessary
Bypass (if present, contains Orings***)	Clean	Clean	Clean	Clean	Clean/replace if necessary
Piston*	Check/clean/ replace if necessary	Replace	Check/clean/ replace if necessary	Replace	Check/clean/ replace if necessary
Seals & spacers*	Check/clean/ replace if necessary	Replace	Check/clean/ replace if necessary	Replace	Check/clean/ replace if necessary
Brine valve	Check/clean/ replace if necessary	Replace			
O-rings***	Check for watertightness /clean or replace in case of leakage	Check for watertightness /clean or replace in case of leakage	Check for watertightness /clean or replace in case of leakage	Check for watertightness /clean or replace in case of leakage	Check for watertightness /clean or replace in case of leakage
Motors	Check	Check	Check	Check	Replace
Gearing	Check	Check	Check	Check	Check/ replace if necessary
Inlet hardness	Check	Check	Check	Check	Check
Residual hardness	Check/adapt mixing screw if necessary				
Electronic/ settings**	Check	Check	Check	Check	Check/ replace if necessary
Transformer**	Check	Check	Check	Check	Check/ replace if necessary
Microswitches	Check	Check	Check	Check	Replace
Meter(s)* (if present)	Check and Clean	Check and Clean	Check and Clean	Check and Clean	Replace
Meter cable(s)* (if present)	Check	Check	Check	Check	Replace

Items	1 year	2 year	3 year	4 year	5 year
Valve watertightness	Check	Check	Check	Check	Check
Valve to piping watertightness	Check	Check	Check	Check	Check

* Wear parts - durability strongly affected by raw water quality and regeneration frequency.

** Electronic parts - durability strongly affected by power source quality and stability.

*** Elastomer durability is strongly affected by raw water concentration in chlorine and its derivative.

9.3 Recommendations

9.3.1 Use original spare parts

Caution - material



Risk of damage due to use of non-genuine spare parts

To ensure correct operation and safety of the device, only use original spare parts and accessories recommended by the manufacturer.

Usage of non-genuine spare parts voids all warranties.

Parts to keep in stock for potential replacements are the pistons, S&S kit, injectors, micro-switches and motors. Refer to maintenance sheet.

9.3.2 Use original approved lubricants

- Dow corning #7 Release Agent;
- spare part: p/n 1014081 (NAM) – 42561 (EMEA), (SILICONE LUBRICANT PACK).

9.3.3 Maintenance instructions

- Disinfect and clean the system at least once a year or if the treated water has an off-taste or an unusual odor;
- perform a hardness test every year at both inlet and treated water.

9.4 Cleaning and maintenance

9.4.1 First steps

Before any cleaning or maintenance procedure, complete the following steps:

Mandatory




These operations must be performed before any cleaning or maintenance procedure!

1. Unplug the wall-mounted transformer.
2. Shut off water supply or put bypass valve(s) into bypass position.
3. Relieve system pressure before performing any operations.


9.4.2 Controller motor replacement

1. Loosen the wheels (1) and open the valve cover (2).
2. Disconnect the motor (4).
3. Unscrew (5) and pull out the old motor (4) and the plate (3).
4. Change the motor (4).
5. Reverse above procedure steps to rebuild.

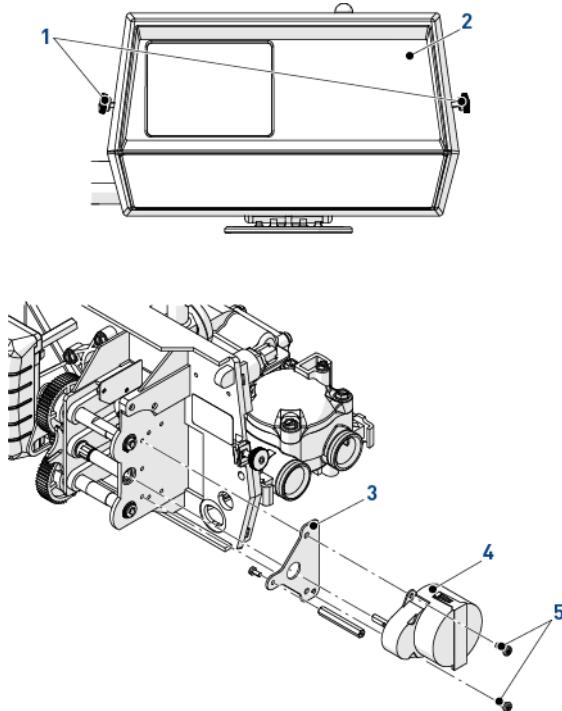

9.4.3 Controller replacement

1. Loosen the wheels **[1]** and open the valve cover **[2]**.
2. Push the controller **[3]**.
3. Press the controller clips **[5]** and open the controller cover **[4]**.
4. Disconnect the old controller **[7]** and remove it opening the card clips **[6]**.
5. Connect the new controller, see Electrical connections [→Page 42].
6. Reverse above procedure steps to rebuild.


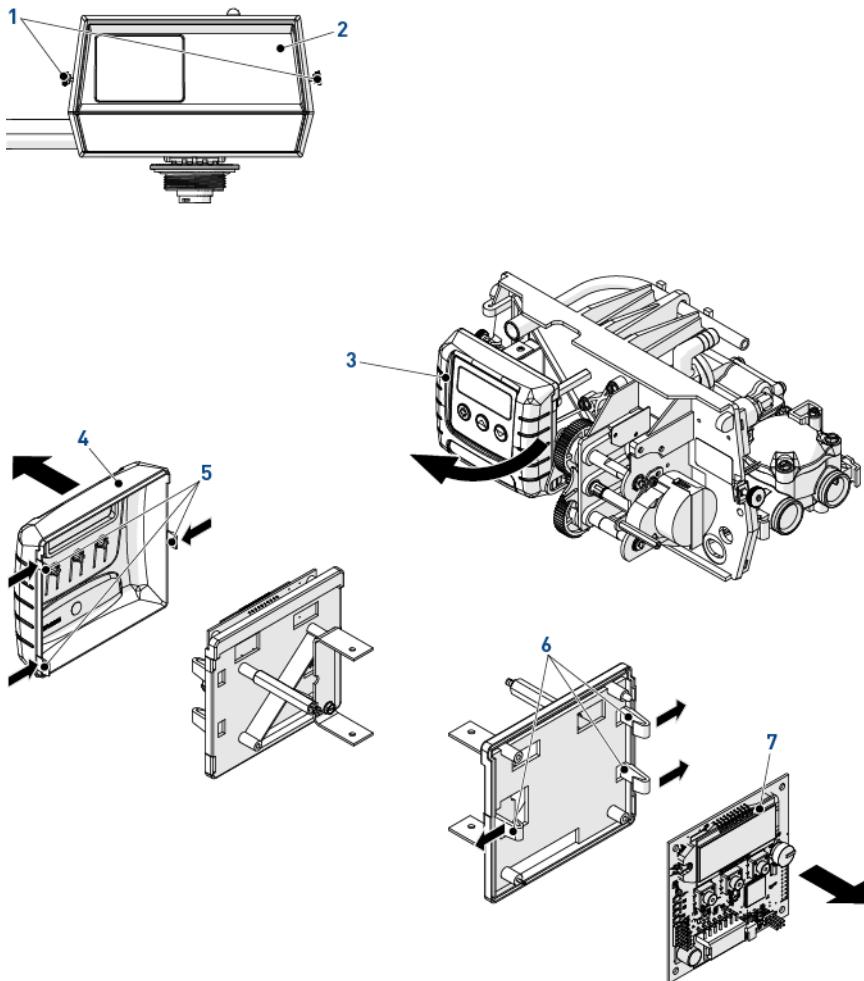



9.4.4 Power head disassembly/replacement

1. Loosen the wheels (1) and open the valve cover (2).
2. Push the controller (3).
3. Using a 9/32" (7 mm) wrench or flat screwdriver, unscrew (4) to free the meter cable (5) and the controller (3).
4. Using a 9/32" (7 mm) wrench or flat screwdriver, unlock the pistons from the screws (6).
5. Using a flat screwdriver, remove (7) and free the upper piston plate (8).
6. Using a 5/16" (8 mm) wrench or flat screwdriver, unscrew (9).
7. Separate the backplate (11) from the valve body (10).
8. Change the backplate (11).
9. Reverse above procedure steps to rebuild.

Tip

These operations need to be performed before any cleaning or maintenance procedure.

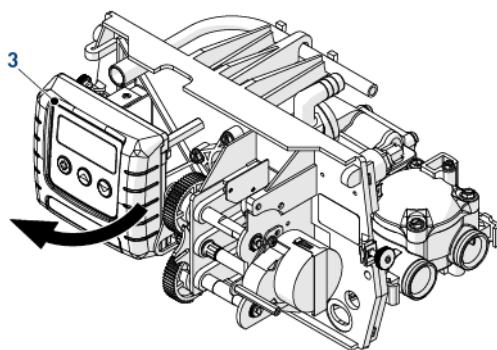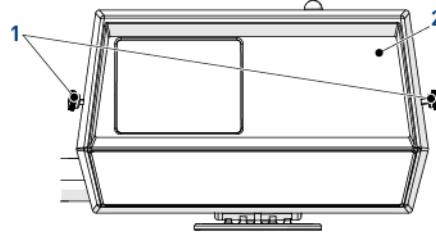

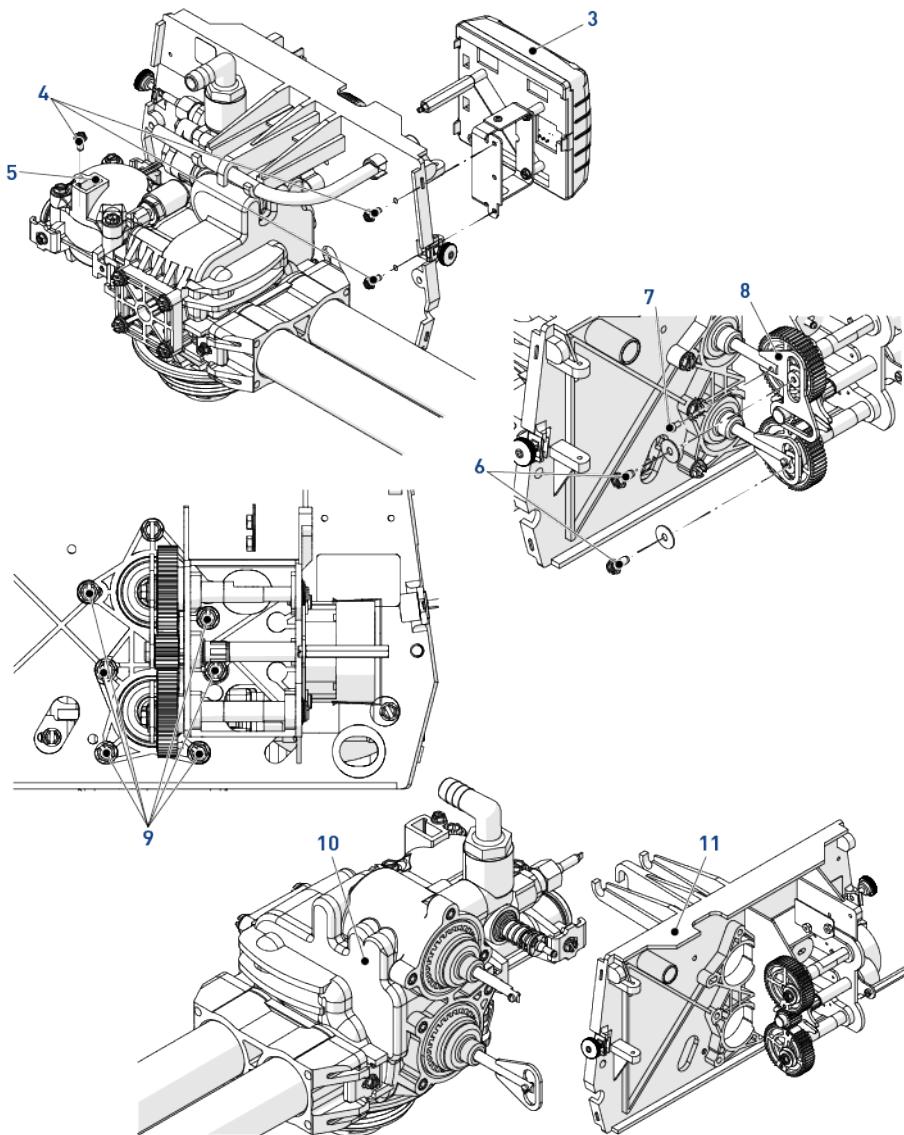

9.4.5 Upper piston and/or seal and spacer kit replacement

Caution - material




Risk of damage due to wrong lubricant use

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.


Use only approved silicone grease or soapy water!

1. Remove the power head, see Power head disassembly/replacement [→Page 75].
2. Using pliers, remove the piston (4).
3. Remove the cover cup (3) from the piston (4).
4. Using a small hook, remove a seal (5).
5. Using the puller (1), remove a spacer (6).
6. Repeat the two previous steps for all the seals and spacers.
7. Lubricate all seals (5) with approved lubricant only.
8. Put back a new seal (5) using the stuffer (2).
9. Put back a spacer (6) using the stuffer (2).
10. Repeat the two previous steps for all the seals and spacers.
11. Lubricate the piston (4) with approved lubricant only.
12. Put back the piston (4).
13. Put back the cover cup (3).
14. Rebuild the power head, see Power head disassembly/replacement [→Page 75].

9.4.5.1 Special tools needed

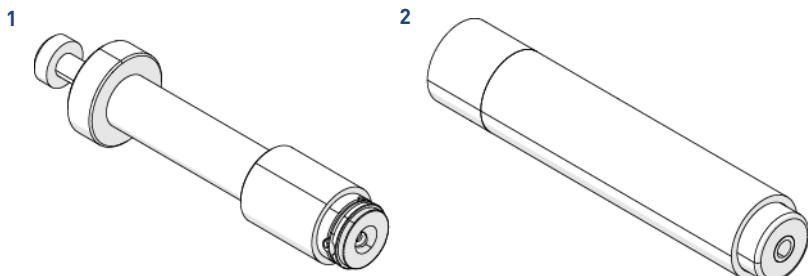

Item	Part number	Description	Packaging quantity
1	13061	Puller	1
2	12763	Stuffer	1

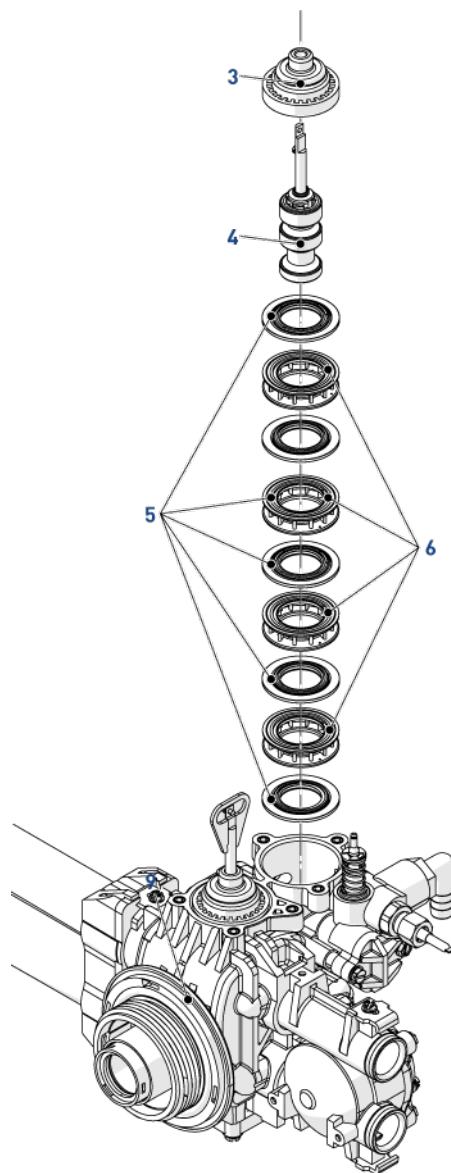

9.4.6 Lower piston and/or front side seal and spacer kit replacement

Caution - material



Risk of damage due to wrong lubricant use


Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Use only approved silicone grease or soapy water!


1. Remove the power head, see Power head disassembly/replacement [→Page 75].
2. Using pliers, remove the piston (6).
3. Remove the screw (3) and the piston plate (4).
4. Remove the cover cup (5) from the piston (6).
5. Using a small hook, remove a seal (7).
6. Using the puller (1), remove a spacer (8).
7. Repeat the two previous steps for all the seals and spacers.
8. Lubricate all seals (7) with approved lubricant only.
9. Put back a new seal (7) using the stuffer (2).
10. Put back a spacer (8) using the stuffer (2).
11. Repeat the two previous steps for all the seals and spacers.
12. Lubricate the piston (6) with approved lubricant only.
13. Put back the piston (6).
14. Put back the cover cup (5).
15. Put back the piston plate (4) and the screw (3).
16. Rebuild the power head, see Power head disassembly/replacement [→Page 75].

9.4.6.1 Special tools needed


1

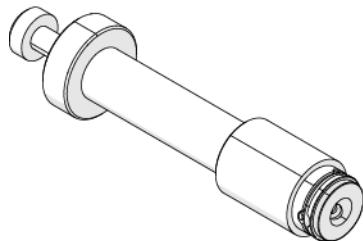

2


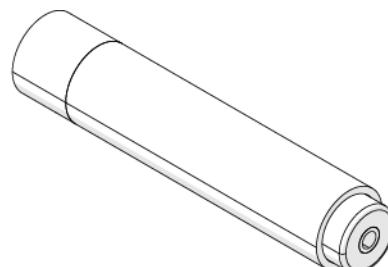


Item	Part number	Description	Packaging quantity
1	13601	Puller	1
2	12763	Stuffer	1

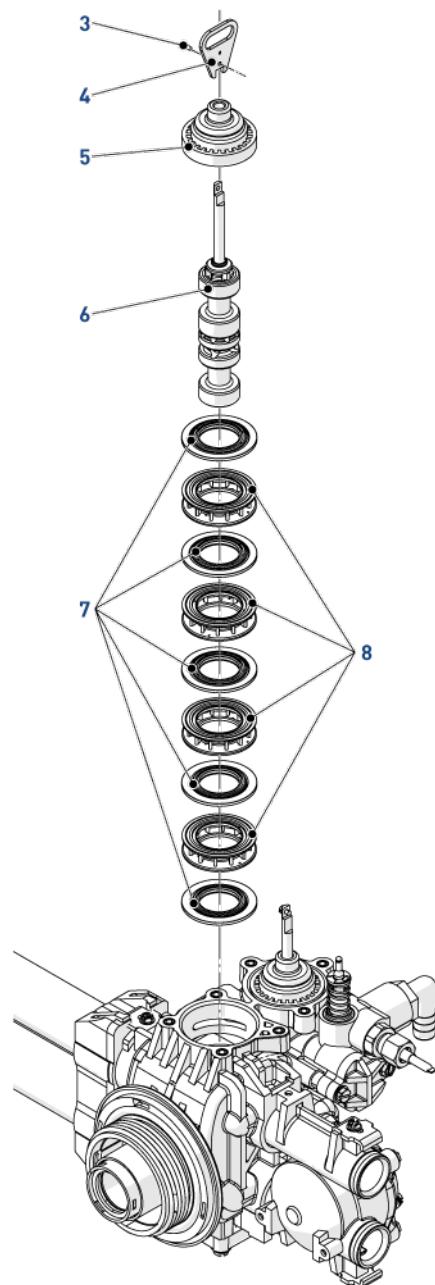

9.4.7 Back side seal and spacer cartridge replacement

9.4.7.1 Special tools needed

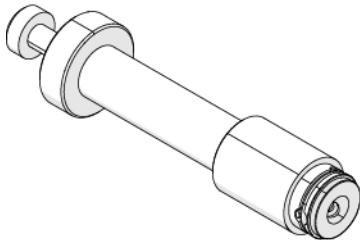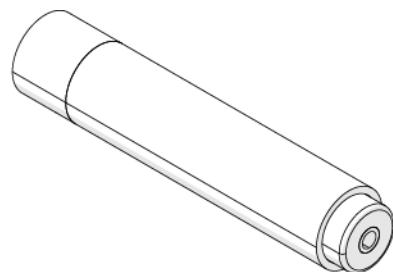1**2**

Item	Part number	Description	Packaging quantity
1	13601	Puller	1
2	12763	Stuffer	1

9.4.7.2 Valve produced before November 2009

Info



The seal & spacer cartridge for downflow and upflow are different.

Caution - material




Risk of damage due to wrong lubricant use

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Use only approved silicone grease or soapy water!

1. Remove the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].
2. Using a 0.3" [8 mm] wrench or flat screwdriver, unscrew **[3]** and remove the end cap **[4]**.
3. Remove the sub end plug **[5]**.
4. Using a small hook, remove a seal **[6]**.
5. Using the puller **[1]**, remove a spacer **[7]**.
6. Repeat the two previous steps for all the seals and spacers.
7. Lubricate all seals **[6]** with approved lubricant only.
8. Put back a new seal **[6]** using the stuffer **[2]**.
9. Put back the new plain spacer **[8]** using the stuffer **[2]**.
10. Put back a new seal **[6]** using the stuffer **[2]**.
11. Put back a new spacer **[7]** using the stuffer **[2]**.
12. Repeat the two previous steps for all the seals and spacers.
13. Put back the sub end plug **[5]**.
14. Put back the end cap **[4]** and screw **[3]** using an 8 mm wrench or flat screwdriver.
15. Put back the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].

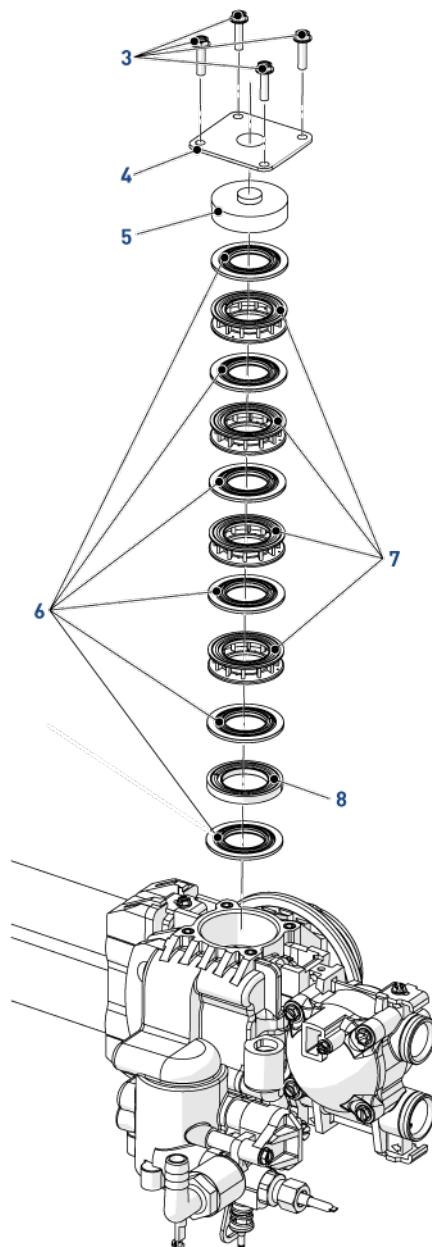

9.4.7.3 Valve produced from November 2009 until April 2015

Info



The seal & spacer cartridge for downflow and upflow are different. Upflow valves still have the two pieces end cap and requires all the seals.

Caution - material



Risk of damage due to bad component or wrong lubricant use!

One of the seals contained in the cartridge will not be used for downflow.


For downflow, using this extra seal may damage the valve and its components.

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Do not use silicon grease.

Use only P-80® Emulsion lubricant (water-based lubricant)!

1. Remove the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].
2. Using a 0.3" (8 mm) wrench or flat screwdriver, unscrew **[3]** and remove the end cap **[4]**.
3. Using the puller **[1]**, remove a spacer **[7]**.
4. Using a small hook, remove a seal **[6]**.
5. Repeat the two previous steps for all the seals and spacers.
6. Lubricate all seals **[6]** with approved lubricant only.
7. Put back a new seal **[6]** using the stuffer **[2]**.
8. Put back the new plain spacer **[8]** using the stuffer **[2]**.
9. Put back a new seal **[6]** using the stuffer **[2]**.
10. Put back a new spacer **[7]** using the stuffer **[2]**.
11. Repeat the two previous steps for all the seals and spacers.
12. Lubricate the end cap O-ring **[3]**.
13. Put back the end cap **[4]** and screw **[3]** using an 0.3" (8 mm) wrench or flat screwdriver.
14. Put back the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].

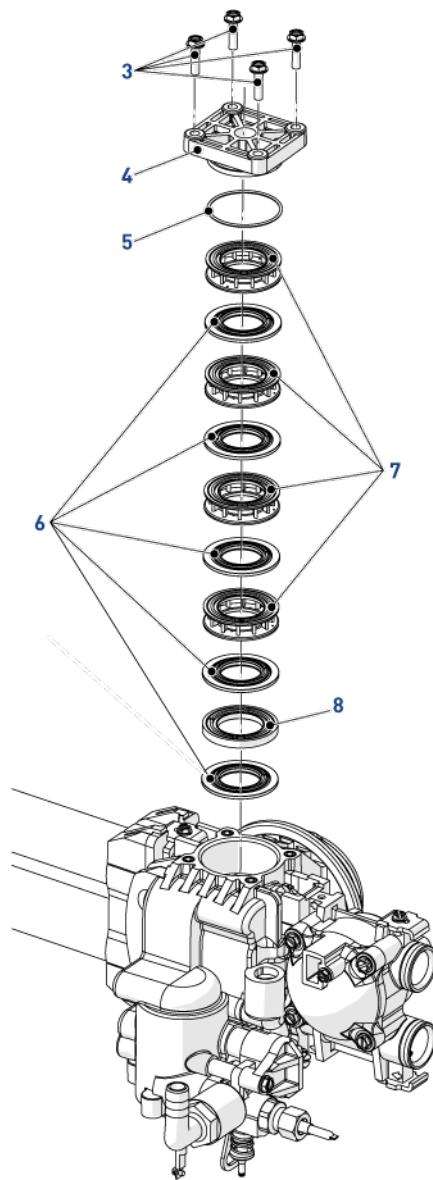

9.4.7.4 Valve produced after April 2015

Caution - material




Risk of damage due to wrong lubricant use

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.


Use only approved silicone grease or soapy water!

1. Remove the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].
2. Using a 0.3" (8 mm) wrench or flat screwdriver, unscrew **(3)** and remove the end cap **(4)**.
3. Using a small hook, remove a seal **(6)**.
4. Using the puller **(1)**, remove a spacer **(7)**.
5. Repeat the two previous steps for all the seals and spacers.
6. Lubricate all seals **(6)** with approved lubricant only.
7. Put back a new seal **(6)** using the stuffer **(2)**.
8. Put back the new plain spacer **(8)** using the stuffer **(2)**.
9. Put back a new seal **(6)** using the stuffer **(2)**.
10. Put back a new spacer **(7)** using the stuffer **(2)**.
11. Repeat the two previous steps for all the seals and spacers.
12. Lubricate the end cap O-ring **(5)**.
13. Put back the end cap **(4)** and screw **(3)** using a 0.3" (8 mm) wrench or flat screwdriver.
14. Put back the lower piston, see Lower piston and/or front side seal and spacer kit replacement [→Page 79].

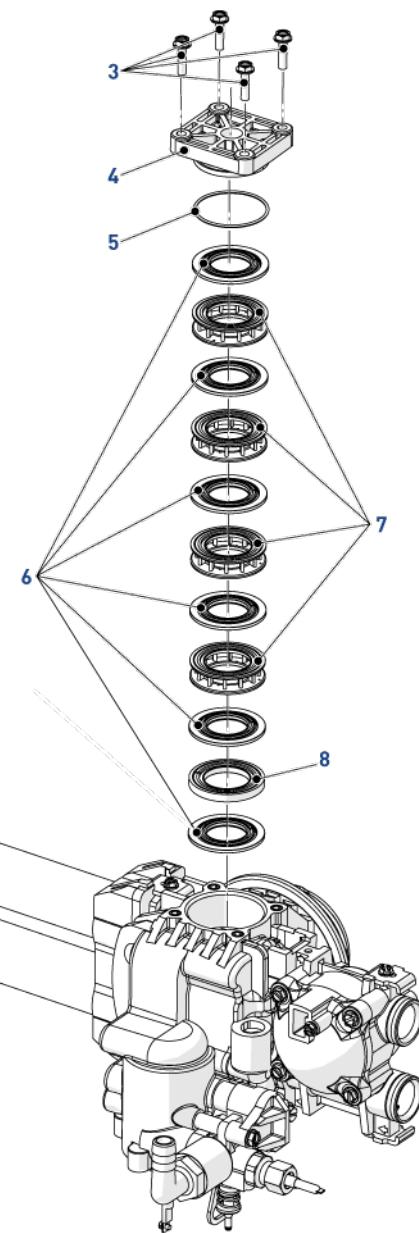

9.4.8 Micro-switches replacement

1. Loosen the wheels **[1]** and open the valve cover **[2]**.
2. Unscrew **[4]** and pull out the old micro-switches **[3]**.
3. Disconnect the micro-switches **[3]**.
4. Change the micro-switches **[3]**.
5. Reverse above procedure steps to rebuild.

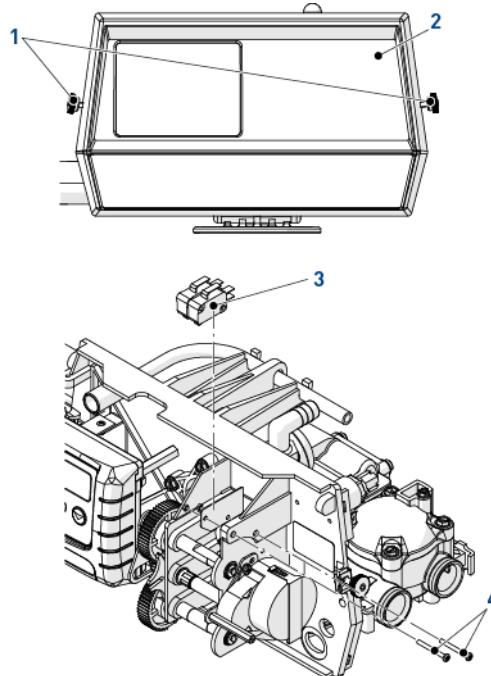

9.4.9 Injector cleaning



1. Remove the screws **(1)**.
2. Remove the injector block **(2)** and the spacer **(3)**.
3. Remove the o-rings **(4)** and **(5)**.
4. Remove the cap **(6)**.
5. Remove the injector filter **(10)** and clean it immersing it in limescale.
6. Unscrew the nozzle **(8)** and the injector **(9)** and clean them blowing inside and immersing them in limescale.
7. Screw the injector **(9)** back.
8. Screw the nozzle **(8)** back.
9. Put the injector filter **(10)** back.
10. Lubricate the o-ring **(7)** with approved lubricant only.

Caution - material**Risk of damage due to wrong lubricant use**

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Use only approved silicone grease or soapy water!

11. Put back the o-ring **(7)** on the cap **(6)**.
12. Put back the cap **(6)**.
13. Lubricate the o-rings **(4)** and **(5)** with approved lubricant only.
14. Put back the o-rings **(4)** and **(5)**.
15. Put back the injector block **(2)** with the spacer **(3)**.
16. Put back the screws **(1)**.

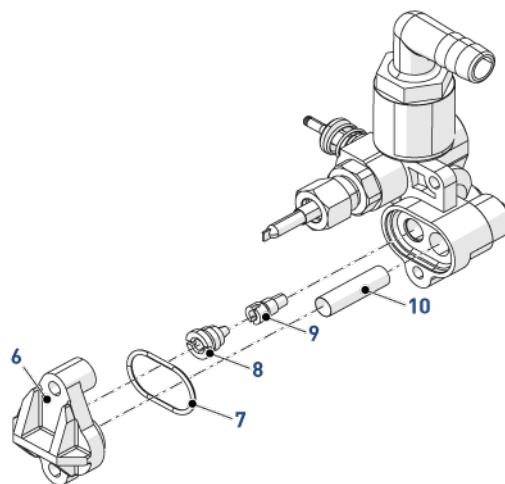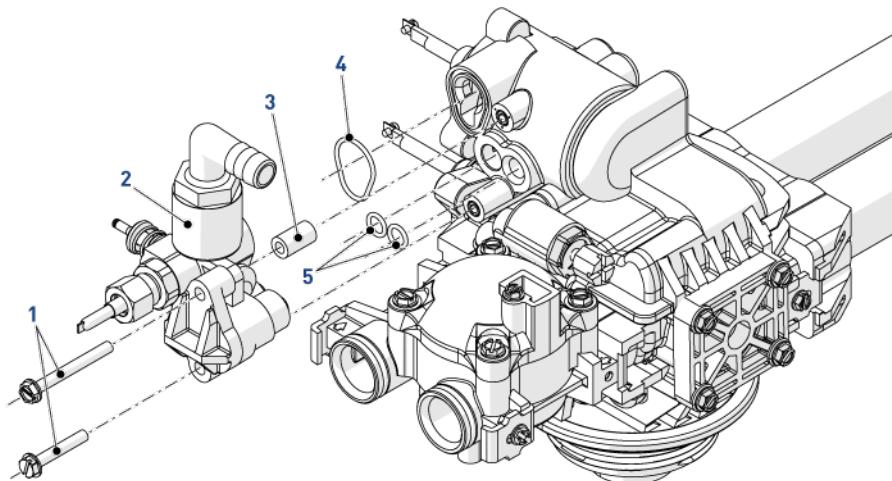

9.4.10 BLFC cleaning

1. Using a wrench, remove the BLFC holder (1).
2. Using pliers, remove the grid (4) from BLFC holder (1).
3. Remove the BLFC washer (3) from the grid (4).
4. Clean with a terry cloth or change the BLFC washer (3) and the seal (2).
5. Clean the grid (4).
6. Lubricate the seal (2) with approved lubricant only.

Caution - material



Risk of damage due to wrong lubricant use

Do not use petroleum-based lubricants such as Vaseline, oils, or hydrocarbon-based lubricants.

Use only approved silicone grease or soapy water!


7. Reverse above procedure steps to rebuild.

Mandatory



The washers (3) have to be installed with their chamfered side upfront the water stream flow.

Flow indication must be visible after the washer (3) is placed on the holder (1).

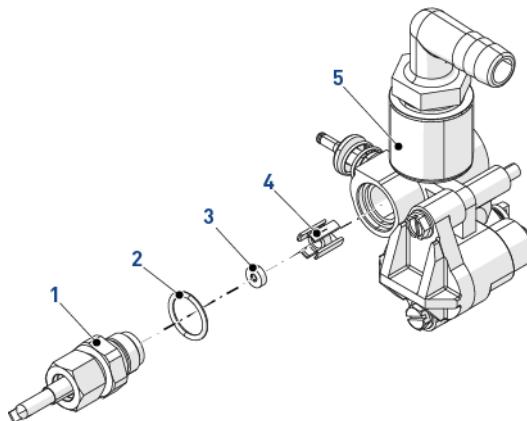

10 Troubleshooting

Problem	Cause	Solution
Softener fails to regenerate automatically	Interrupted power or switched off power source.	Restore the controller and connect to constant power source.
	Disconnected/faulty meter cable.	Check connections in the power head and on the meter cover. Change the cable.
	Defective power cord.	Replace cord.
	Defective motor.	Change motor.
	Defective controller.	Change controller.
	Blocked meter.	Clean or change meter.
Softener delivers hard water	Bad programming.	Program correctly.
	By-pass valve is open.	Close by-pass valve.
	No salt in the brine tank.	Add salt in the brine tank and keep salt level above water level.
	Plugged injector and/or filter.	Clean or replace injector and/or filter.
	Insufficient water flowing into brine tank.	Check brine tank filling time and clean flow regulator.
	Hot water tank hardness.	Repeated flushing of the hot water tank.
	Leak at the distributor hose.	Ensure the distributor tube has no cracks. Check the O-ring.
	Internal valve leak.	Change seals & spacers and/or piston assembly.
	Blocked meter.	Clean or change meter.
	Disconnected/faulty meter cable.	Check connections in the power head and on the meter cover. Change the cable.
Excessive salt consumption	Bad programming.	Program correctly.
	Improper brine refill setting.	Check use of salt and setting of brine refill.
	Too much water in the brine tank.	See problem below: Too much water in the brine tank.
Water pressure drop	Bad programming.	Program correctly.
	Iron deposit in the valve inlet.	Clean the inlet.
	Iron deposit in the valve.	Clean the valve and resin.
	Valve inlet obstructed by foreign elements.	Remove piston and clean the valve.

Problem	Cause	Solution
Resin loss through drain line	Top distributor missing or broken.	Add or replace the top distributor.
	Air in water system.	Ensure the presence of air check system in the brine tank.
	Improperly sized drain line flow control.	Size the drain line flow control correctly.
Iron presence in the valve/treated water	The resin bed is dirty.	Check backwash, brine draw, and brine refill. Regenerate more often and increase backwash cycle time.
	Iron concentration exceeds recommended parameters.	Contact your local dealer.
Too much water in the brine tank	Plugged drain line flow control.	Clean drain line flow control.
	Plugged injector system.	Clean injector and screen, change if necessary.
	Faulty brine valve.	Change brine valve.
	Bad programming.	Program correctly.
	Controller is not cycling.	Change controller.
	Foreign material in the brine valve.	Replace brine valve seat and clean the valve.
	Foreign material in the brine line flow control.	Clean brine line flow control.
Salted water in service line	Plugged injector and/or filter.	Clean or replace injector and/or filter.
	Power head not operating properly.	Change power head.
	Foreign material in the brine valve.	Replace brine valve seat and clean the valve.
	Foreign material in the brine line flow control.	Clean brine line flow control.
	Low water pressure.	Raise inlet pressure to 1.8 bar minimum.
	Bad programming.	Program correctly.

Problem	Cause	Solution
Softener fails to draw brine	Plugged drain line flow control.	Clean drain line flow control.
	Plugged injector and/or filter.	Clean or replace injector and/or filter.
	Low water pressure.	Raise inlet pressure to 1.8 bar minimum.
	Internal valve leak.	Change seals & spacers and/or piston assembly.
	Bad programming.	Program correctly.
	Power head not operating properly.	Change power head.
Controller cycles continuously	Power head not operating properly.	Change power head.
	Faulty microswitch or wiring loom.	Change microswitch or wiring loom.
	Defective or badly set cycle cam.	Reposition or change cycle cam.
Drain flows continuously	Foreign elements in the valve.	Clean valve and check it in the different regeneration positions.
	Internal valve leak.	Change seals & spacers and/or piston assembly.
	Valve blocked in brine refill or backwash.	
	Defective or blocked motor.	Change motor and check gear teeth.
	Power head not operating properly.	Change power head.
Upper drive synchronization	Power failure while the electronic was compiling data.	System will recover automatically within a few minutes.
	The board doesn't receive the signal from the homing microswitch (motor runs for the 6 first minutes of UD display then shows ER 0).	Check microswitches and associated wiring.
	ER 0 was shown, power switch off and on: UD---- is displayed at power restoration and motor runs for 6 minutes looking for its position, finally shows ER 0 again if expected signals from microswitches aren't received.	

10.1 Error detection

Errors codes appear on the service display.

Info



It can take up to 1 minute before an error can be detected and displayed.

10.1.1 Motor stall/cam sense error

Info



The valve drive takes more than 6 minutes to go to the next regeneration cycle and the board hasn't received expected signals from microswitches.

1. Unplug the unit and plug back in. Allow the controller to attempt to find position again.
2. Unplug the unit and examine the power head, especially look at homing/step microswitches and motor.
3. Verify all circuit board connections.
4. Verify the motor and gearing components are in good condition and assembled properly.
5. Check the valve and verify that the piston travels freely.
6. Replace/reassemble the various components as necessary.
7. Plug the unit back in and observe its behaviour.
8. If the error reoccurs, unplug the unit.
9. Put it into bypass.
10. Contact dealer.



10.1.2 Motor run-ON error/cycle sense error

Info



The valve performed an unforeseen cycle.

This error message is only valid until controller version 2.6.

1. Unplug the unit and plug back in. Allow the controller to attempt to find position again.
2. Unplug the unit and examine the power head.
3. Verify all circuit board connections.
4. Enter master programming mode.
5. Verify that the valve type and system type are set correctly with regard to the unit itself.
6. Step the unit to a manual regeneration.
7. Verify that it functions correctly.
8. If the error reoccurs, unplug the unit.
9. Put it into bypass.
10. Contact dealer.



10.1.3 Regeneration failure

Info



The system has not regenerated for more than 99 days or 7 days if the regeneration control type has been set to day of week.

1. Perform a manual regeneration to reset the error code.
2. If the system is metered, verify that it is measuring flow by running service water and watching for the flow indicator on the display.
3. If the unit doesn't measure flow, verify that the meter is working properly and its cable is well connected.
4. Enter master programming mode.
5. Verify that the unit is configured properly.
6. Check that system capacity has been selected.
7. Check that day override is set properly.
8. Check that meter is identified correctly.
9. If the unit is configured as a day of week system, verify that at least one day is set ON.
10. Correct the setting as necessary.



10.1.4 Memory error

Info




The controller board has a memory failure.

1. Perform a master reset.
2. Reconfigure the system via master programming mode.
3. Step the valve through a manual regeneration.
4. If the error reoccurs, unplug the unit.
5. Put it into bypass.
6. Contact dealer.



11 Spare parts and options

11.1 Valve parts list

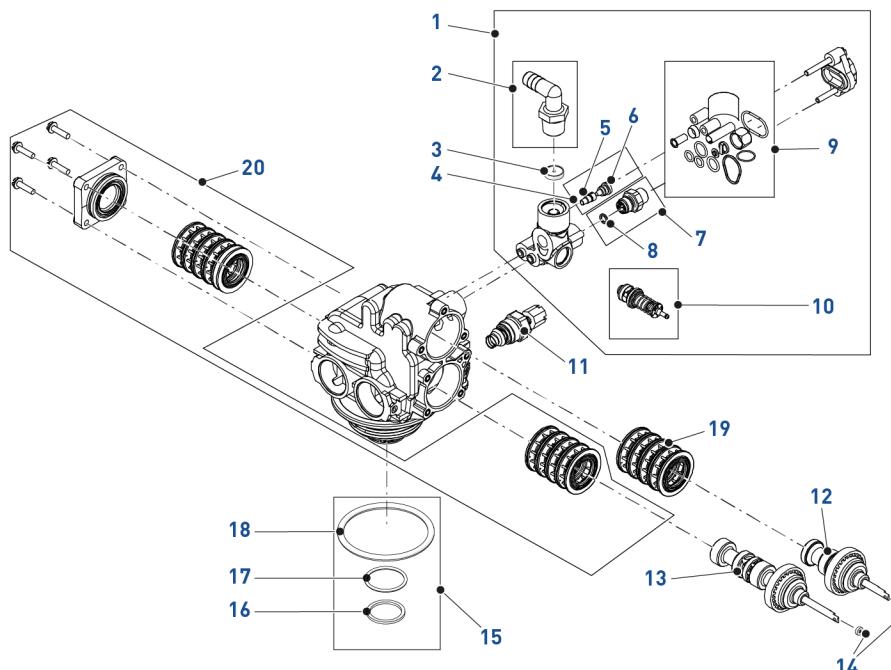

Info



The sizes of the injector, the drain line flow control and the brine line flow control must be specified.

Item	Part number NAM	Part number EMEA	Description
1	/	29177	Injector assy, 9100, #1/2/0.50 (w/washer 1.5 & 2.4 - BLFC 0.25)
-	/	29179	Injector assy, 9100, #3/5.0/1.0 (w/washer 7.0)
-	60385-0131	/	Injector drain, 9000, 9100, 0.25 BLFC, #1 INJ, 2.0 DLFC
-	60385-0141	/	Injector drain, 9000, 9100, 0.25 BLFC, #1 INJ, 2.4 DLFC
-	60385-0122	/	Injector drain, 9000, 9100, 0.50 BLFC, #1 INJ, 1.5 DLFC
-	60385-0132	/	Injector drain, 9000, 9100, 0.50 BLFC, #1 INJ, 2.0 DLFC
-	60385-0142	/	Injector drain, 9000, 9100, 0.50 BLFC, #1 INJ, 2.4 DLFC
-	60385-0242	/	Injector drain, 9000, 9100, 0.50 BLFC, #2 INJ, 2.4 DLFC
-	60385-0243	/	Injector drain, 9000, 9100, 1.0 BLFC, #2 INJ, 2.4 DLFC


Item	Part number NAM	Part number EMEA	Description
-	60385-0393	/	Injector drain, 9000, 9100, 1.0 BLFC, #3 INJ, 7.0 DLFC
2	12338	21511SP	Hose barb 90°, 1/2" x 1/2", Black and grey
3	/	19151SP	Washer, 1 gpm, Diameter 0.7" (17.5 mm)
-	19152	19152SP	Flow washer, 0.8 gpm
-	12085	12085SP	Flow washer, 1.2 gpm
-	12088	12088SP	Flow washer, 2.4 gpm
-	12090	12090SP	Flow washer, 3.5 gpm
-	12091	12091SP	Flow washer, 4 gpm
-	17814	17814SP	Flow washer, 6 gpm
-	12408	12408SP	Flow washer, 7 gpm
4	/	29143	Injector nozzle & throat, #1, White
-	/	29144	Injector nozzle & throat, #2, Blue
-	/	29145	Injector nozzle & throat, #3, Yellow
5	10913-00	/	Nozzle, Injector, #00, Violet, 7" tank
-	10913-0	/	Nozzle, Injector, #0, Red, 8" tank
-	10913-1	/	Nozzle, Injector, #1, White, 9" and 10" tank
-	10913-2	/	Nozzle, Injector, #2, Blue, 12" tank
-	10913-3	/	Nozzle, Injector, #3, Yellow, 13" tank
-	10913-4	/	Nozzle, Injector, #4, Green, 14" tank
6	10914-00	/	Throat, Injector, #00, Violet, 7" tank
-	10914-0	/	Throat, Injector, #0, Red, 8" tank
-	10914-1	/	Throat, Injector, #1, White, 9" and 10" tank
-	10914-2	/	Throat, Injector, #2, Blue, 12" tank
-	10914-3	/	Throat, Injector, #3, Yellow, 13" tank
-	10914-4	/	Throat, Injector, #4, Green, 14" tank
7	/	18332-0.12	BLFC assy, 0.12 gpm, 1600
-	/	18332-0.25	BLFC assy, 0.25 gpm, 1600
8	/	17307SP	Flow washer BLFC, 0.125 gpm
-	/	12095SP	Flow washer BLFC, 0.50 gpm
-	/	12097SP	Flow washer BLFC, 1 gpm, Diameter 0.3" (7.5 mm)
9	/	29115	Injector service kit, Residential, 9000/9100
10	/	24509-01	Brine valve, 1600 assy, 9000/9100
11	60350	24526	Mixing assy, Residential
12	60400-001	24234-US	Piston assy, 9000/9100, Upper, DF
13	60401-001	24235-US	Piston assy, 9000/9100, Lower, DF
14	/	10209-01SP	Quad ring, 560 CD

Item	Part number NAM	Part number EMEA	Description
15	62225	29152	Kit O-rings, Tank adapter, 5800/5000/9100/2510
16	13030	13030SP	O-ring, Retainer, Residential
17	13304-01	13304-01SP	O-ring, 560 CD
18	/	18303-01SP	O-ring, Top of tank
19	60125	24115	S&S kit, Residential
20	62228	/	S&S kit, 9000/9100, Lower
19 + 20	/	25642	S&S kit, 9000/9100, Upper and lower
*	/	29073	UPK, 9000/9100, SXT PH, US piston, S&S
*	/	Kit 160	Kit meter test, All valves (except 3900)

*not shown

/not available


11.2 Power head parts list

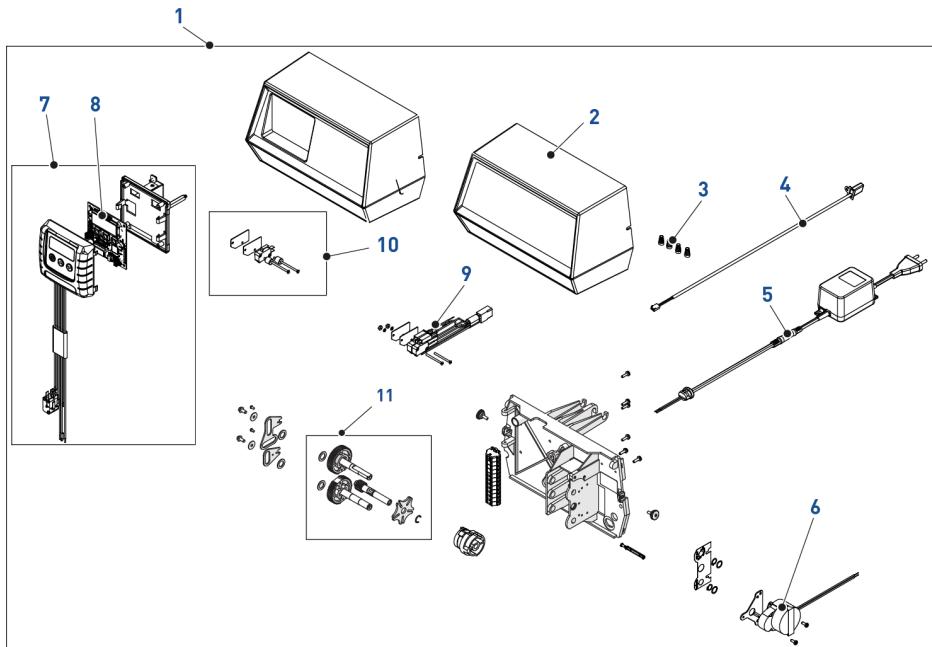

Item	Part number NAM	Part number EMEA	Description
1	62103-76	PH900SI-001	Powerhead, 9000/9100, SXT
-	62103-72	/	Powerhead, Twin, Mech, 24 V, Less timer, Less cord
2	60232-110	/	Cover, 9000/9100/9500, Black
3	/	40422SP	Wire nut tan
4	/	19121-01SP	Electronic meter cable, 185" (0.47 m)
-	19121-08	19121-08SP	Electronic meter cable, 35.8" (0.91 m), BF
-	/	19791-02SP	Turbine meter cable assy, 29.5" (0.75 m)
5	44147	BU28597	Kit transfo, 10 VA, 400 mA, Residential
6	/	26503-24	Drive motor assy, 24 V, 50/60 Hz, Twin
7	42777	/	Timer assy, SXT, 9000/9100/9500
8	/	BR43346-E0	Circuit board, SXT programmed, Eco
9	/	16433SP	Microswitch, 9000/9100/9500
10	/	10218SP	Microswitch
11	/	29237	Repair kit, Drive gears/Geneva wheel, 9000/9100/9500

/not available


11.3 Safety brine valves list

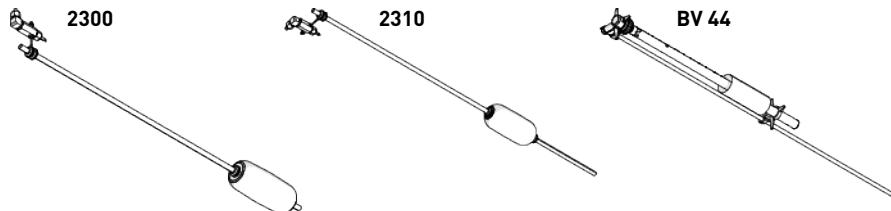

Item	Brine system	Part number NAM	Part number EMEA	Description
-	1600	60027-FFA	27833	Safety Brine Valve, 2300, Without air-check
-		60067-03	60067-03	Safety Brine Valve, 2310, Without air-check
-		/	25687	Brine Valve 44, 36" (914 mm)
-		/	18961	Brine Valve 44, 49.2" (1250 mm)

/not available

11.4 Safety brine valves 2310 parts list

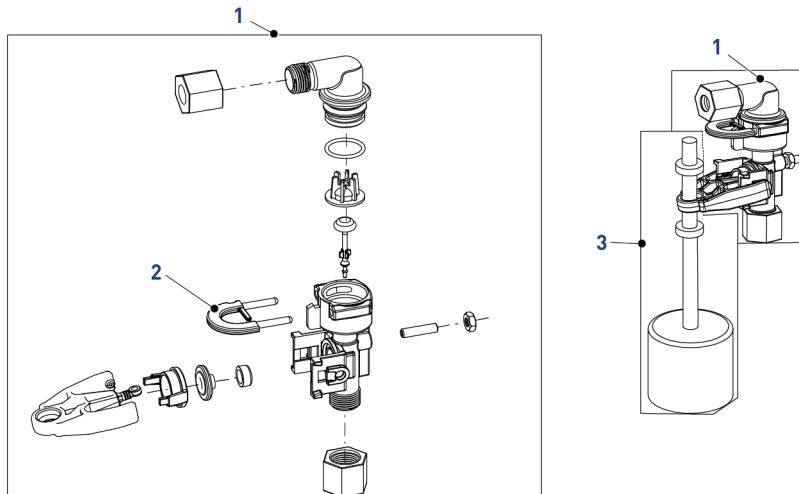


Item	Part number NAM	Part number EMEA	Description
1	60014	60014SP	Body assy SBV, 2310
2	18312	/	Retainer, Drain
3	60068-30	60068-30SP	New float assy, 2310

/not available

11.5 Bypass valve assembly list


11.5.1 1" BSP female stainless steel bypass

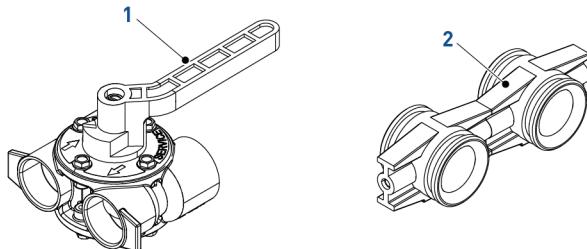

Item	Part number NAM	Part number EMEA	Description
1	/	BU28502	Bypass, 1", BSP, Female, Stainless steel
-	60041SS	/	Bypass, 1", BSP, Female, Stainless steel
2	60900-41	13709	Coupling assy, Residential

/not available


11.5.2 1" BSP female brass bypass with mixing

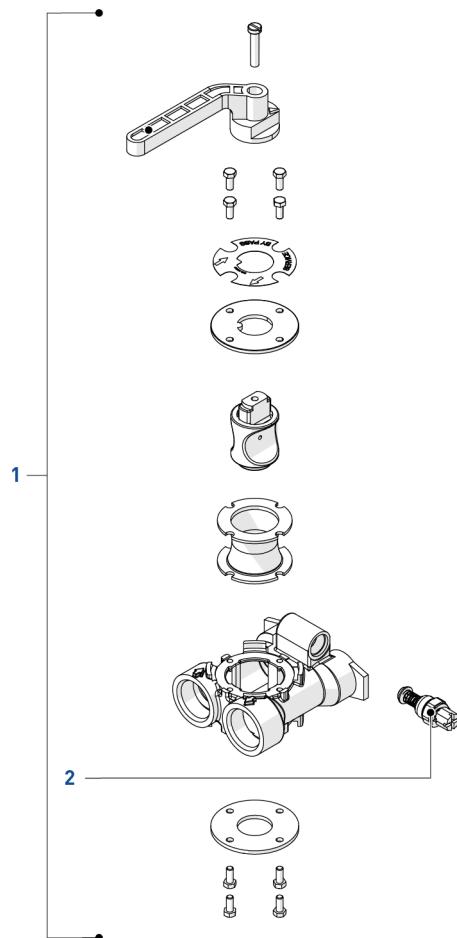

Item	Part number NAM	Part number EMEA	Description
1	/	24734-10	Bypass, 1", BSP, Female, Brass with mixing
2	/	24509-01	Mixing assy, Residential

/not available


11.5.3 Plastic bypass (no yoke)

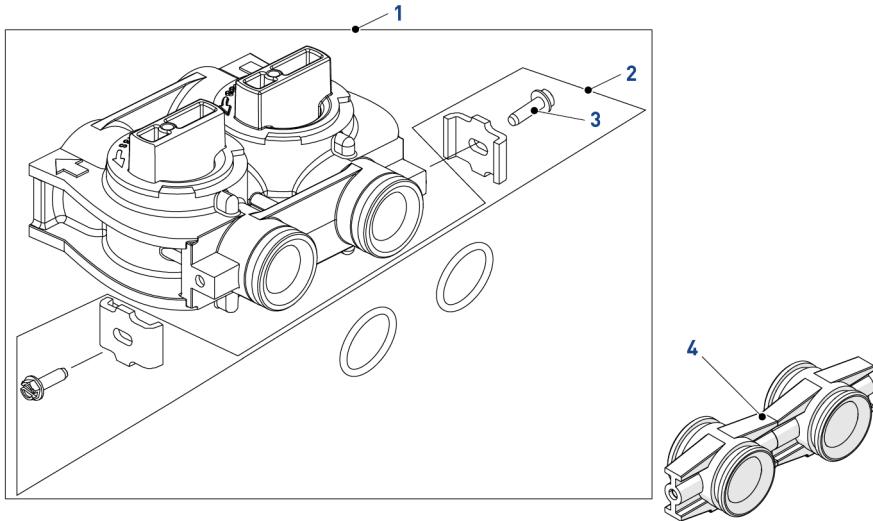

Item	Part number NAM	Part number EMEA	Description
1	60049	BU26054	Bypass, Plastic
2	18600	/	Kit mounting/adapter, 2 clips and 2 screws, 9000/9100, Residential
3	/	14202-01SP	Screw adapt clip, 9000/9100
4	60900-41	13709	Coupling assy, Residential

/not available


11.6 Distribution systems parts list

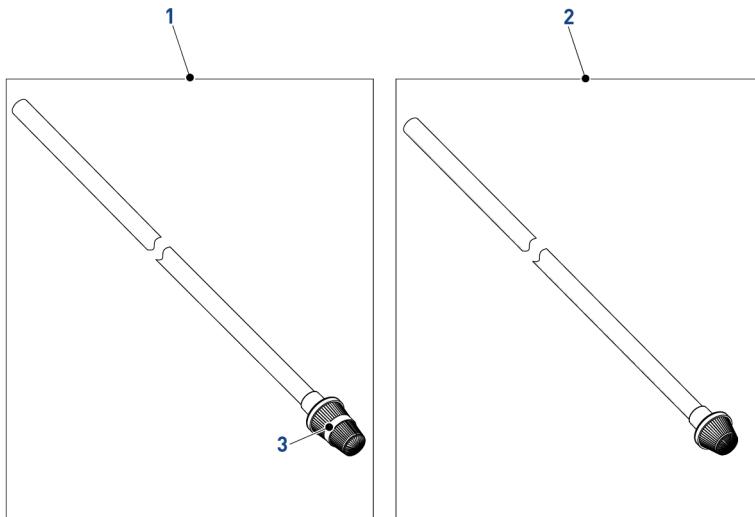

Item	Part number NAM	Part number EMEA	Description
1	60795-00	27827-DW	Distributor assy, 1", High flow, 43.3" (1.10 m)
-	/	25645-DW	Distributor assy, 1", High flow, 76.8" (1.95 m)
2	/	27828-DW	Distributor assy, 1", UF & high capacity, 43.3" (1.10 m)
3	13851	/	Bottom distributor, 1", High flow

/not available


11.7 Second tank adapter parts list

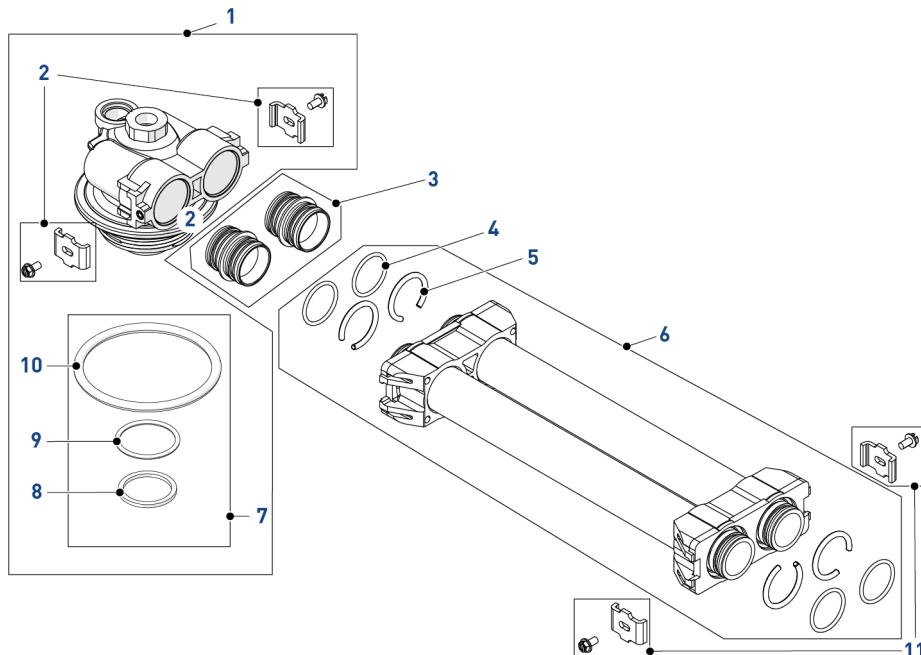

Item	Part number NAM	Part number EMEA	Description
1	/	28242	2 nd tank adapter assy, 9100
2 + 11	18600	29104	Kit mounting/adapter clips & screws, Residential, 9000/9100
3	/	15078-01	Coupling assy, 9000
4	62225	/	O-ring, 560, CD, QC
5	62225	40678SP	Ring, 9100, Yoke, Retainer
6	60425-9	28243-09	Tube connector, 9100 assy, Up to 9" tank
-	60425-12	28243-12	Tube connector, 9100 assy, Up to 12" tank
-	60425-16	28243-16	Tube connector, 9100 assy, Up to 16" tank
7	62225	29152	Kit O-rings tank adapter, 5800/5000/9100/2510
8	/	13030SP	O-ring, Retainer, Residential
9	/	13304-01SP	O-ring, 560, CD
10	/	18303-01SP	O-ring, Top of tank


/not available

11.8 Air checks list

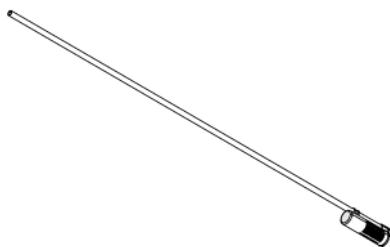

Item	Part number NAM	Part number EMEA	Description
-	60002-36	18168	Air checks 500A, 36" (0.915 m)
-	60002-48	26773	Air checks 500A, 49.2" (1.25 m)

11.9 Meters parts list

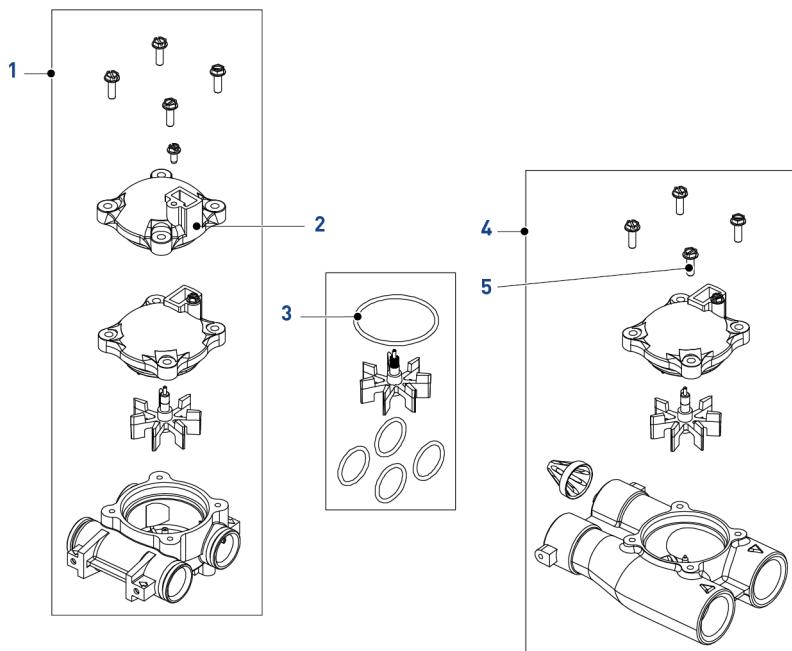


Item	Part number NAM	Part number EMEA	Description
1	60086-50	26702	Meter assy, 3/4", Electronic
2	14716	/	Meter cap assy, Electronic, Plastic
3	/	13305-01SP	O-ring, 560 CD, Adapt coupling
4	/	27130	Meter assy, 1", Electronic, 9000/9100
5	/	28533SP	Screw
*	/	KIT 160	Kit meter test, All valves (except 3900)

*not shown

/not available


11.10 Additional parts list

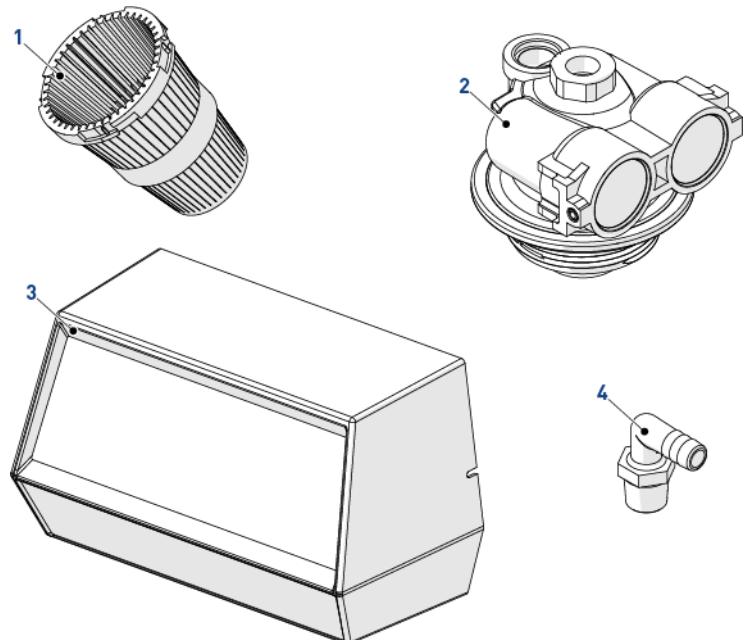

Item	Part number NAM	Part numbe EMEA	Description
1	18280	18280SP	Top distributor, 1", Grey
2	/	24242	Second tank adapt assy, 9100
3	60232-110	/	Cover, 9000/9100/9500, Black
4	12338	21511SP	Hose barb, 90°, 1/2" x 1/2", Black or grey

/not available

11.11 Yokes

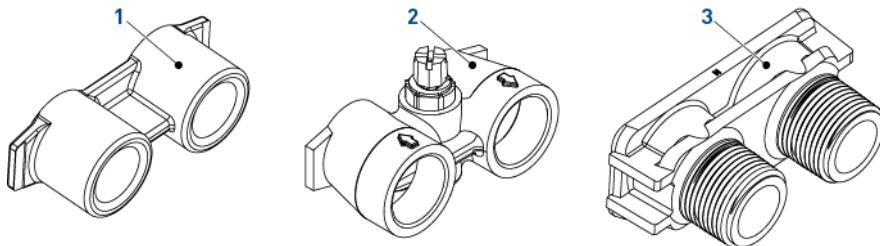

Item	Part number NAM	Part number EMEA	Description
1	/	13398-10	Yoke, 1", BSP, Female, Brass
2	/	24735	Yoke, 1", BSP, Female, Brass, Mixing
3	18706-12	18706-12	Yoke, 3/4", BSP, Male, Plastic
-	18706-10	18706-10	Yoke, 1", BSP, Male, Plastic
-	18706	/	Yoke, 1", NPT, Plastic

12 Disposal

The device must be scrapped in accordance with directive 2012/19/EU or the environmental standards in force in the country of installation. The components included in the system must be separated and recycled in a waste recycling center that conforms with the legislation in force in the country of installation. This will help to reduce the impact on the environment, health, safety and help to promote recycling. Pentair does not collect used product for recycling. Contact your local recycling center for more information.



Notes

**WWW.PENTAIR.EU
WWW.PENTAIR.COM**