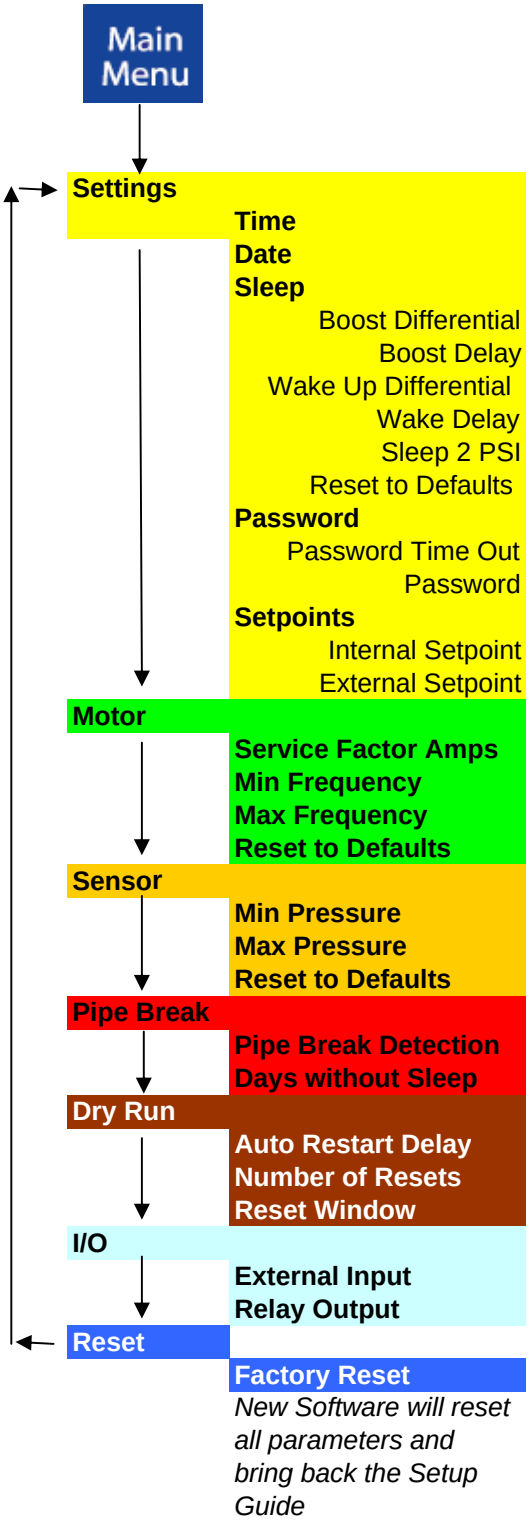
Main Menu
Settings
Time
Date
Sleep
Boost Differential
Boost Delay
Wake Up Differential
Wake Delay
Sleep 2 PSI
Reset to Defaults
Password
Password Time Out
Password
Setpoints
Internal Setpoint
External Setpoint
Motor
Service Factor Amps
Min Frequency
Max Frequency
Reset to Defaults
Sensor
Min Pressure
Max Pressure
Reset to Defaults
Pipe Break
Pipe Break Detection
Days without Sleep
Dry Run
Auto Restart Delay
Number of Resets
Reset Window
I/O
External Input
Relay Output
Reset
Factory Reset
New Software will reset all parameters and bring back the Setup Guide

PENTEK
Pump Out
PSI Preset
Main Menu
Fault Log
Back
Pass-word
OK
Enter
Lan-guage
Warn.
Fault
Status
Stop
Auto Start
Fault Reset