


AURORA®

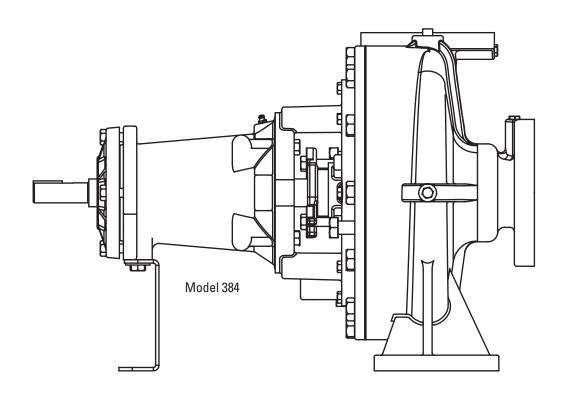

911.5 SERIES END SUCTION FIRE PUMP

REPAIR PARTS INDEX

Read and understand the pump and motor instructions before attempting to install, disassemble or repair the pump.

911.5 SERIES REPAIR PARTS INDEX

TABLE OF CONTENTS


PUMP Model	DESCRIPTION	PAGE
384	Horizontal Power Frame Mounted	
	Exploded view and piece numbers	3
PUMP SIZE		PAGE
2.5-384-7 thr	rough 6-384-9.5 Part Numbers	4
2-384-11 thre	ough 6-384-13.5 Part Numbers	5
8-384-13.5 P	art Numbers	6

MODEL 384 FRAME MOUNTED PUMPS:

A cross reference table for the Power Frames by pump size can be found in the 384 Dimension Pages, reference AF-01-10-911.5-201 through AF-01-10-911.5-211.

911.5 SERIES

MODEL 384 PIECE NUMBERS

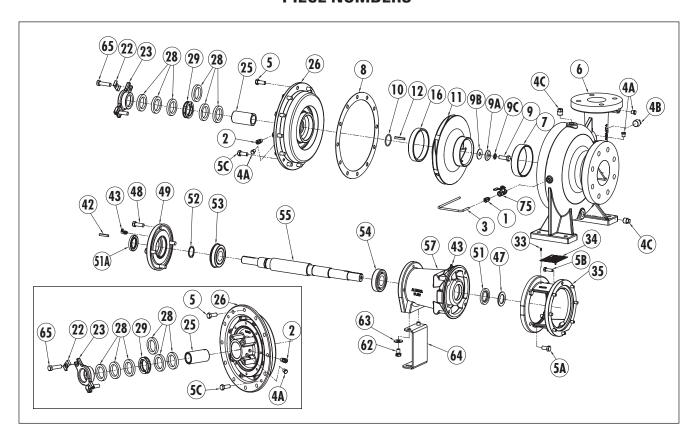

MODEL 384 LIST OF PARTS

1.	Compression Fitting	12.	Impeller Key	48.	Capscrew
2.	Compression Fitting	16.	Back Wear Ring	49.	Bearing Cap
3.	Tubing	22.	Gland Clamp	51/51A.	Lip Seal
4A/4B/4C.	Pipe Plug	23.	Packing Gland	52.	Retaining Ring
5/5A/B/C.	Capscrew	25.	Shaft Sleeve	53.	Bearing
6.	Casing	26.	Pump Packing Cover	54.	Bearing
7.	Wear Ring	28.	Packing	55.	Shaft
8.	Gasket	29.	Lantern Ring	57.	Frame
9.	Impeller Screw	33.	Nameplate Screw	62.	Capscrew
9A.	Washer	34.	Nameplate	63.	Washer
9B.	Gasket	35.	Motor Bracket	64.	Foot Support
9C.	Capscrew Seal	42.	Key	65.	Capscrew
10.	O-Ring	43.	Grease Fitting	75.	Ball Valve
11.	Impeller	47.	Water Slinger		

AURORA PUMP RESERVES THE RIGHT TO SUBSTITUTE MATERIALS WITHOUT NOTICE.

NOTE: WHEN ORDERING SPARE PARTS ALWAYS INCLUDE THE PUMP TYPE, SIZE, SERIAL NUMBER, AND THE PIECE NUMBER FROM THE EXPLODED VIEW IN THIS MANUAL. ORDER ALL PARTS FROM YOUR LOCAL AUTHORIZED DISTRIBUTOR OR THE FACTORY AT NORTH AURORA, ILLINOIS.



911.5 SERIES MODEL 384 2.5-384-7 – 6-384-9.5

PARTS LIST

		Q					
PC.		Т	2.5-384-7	4-384-7	4-384-9.5	5-384-9.5	6-384-9.5
NO.	DESCRIPTION	Υ	PF#3 (L)	PF#3 (L)	PF#21 (XL)	PF#21 (XL)	PF#21 (XL)
6	CASING	1					
	CASING (125/125)		180-8362-055	180-8376-055	180-8378-055	180-8386-055	180-8392-055
	CASING (125/250)		180-8363-055	180-8377-055	180-8379-055	180-8387-055	180-8393-055
	CASING (250/250)		180-8494-055	180-8501-055	180-8502-055	180-8506-055	180-8509-055
7	WEAR RINGS	1					
	WEAR RING (Back)		676-2167-208	676-2170-208	676-2158-208	676-2158-208	676-2171-208
	WEAR RING (Front)		676-8104-208	676-8109-208	676-8109-208	676-8111-208	676-8113-208
8	CASING GASKET	1	364-8004-603	364-8004-603	364-8000-603	364-8000-603	364-8017-603
11	IMPELLER	1	443-8114-104	443-8132-104	443-8135-104	443-8146-104	443-8153-104
23	PACKING GLAND	1	372-0377-208	372-0377-208	372-0544-208	372-0544-208	372-0544-208
25	SHAFT SLEEVE	1	756-0524-208	756-0524-208	756-0705-208	756-0705-208	756-0705-208
26	PACKING COVER	1	812-1121-010	812-1121-010	812-1143-010	812-1143-010	812-1142-010
28	PACKING*	6	564-0110-802	564-0110-802	564-0154-802	564-0154-802	564-0154-802
29	LANTERN RING*	1	676-0009-512	676-0009-512	676-0972-512	676-0972-512	676-0972-512
42-57	POWER FRAME	1	355-0014-644	355-0014-644	355-0301-644	355-0301-644	355-0301-644
55	PUMP SHAFT	1	728-4986-063	728-4986-063	728-7509-063	728-7509-063	728-7509-063

N/A	PACKING SEAL KIT	1	476-1065-644	476-1065-644	476-1066-644	476-1066-644	476-1066-644
N/A	POWER FRAME REPAIR KIT						
	GREASE LUBE	1	476-1068-644	476-1068-644	476-1069-644	476-1069-644	476-1069-644

^{*}Not all pump assemblies contain a lantern ring. When lantern ring is present, subtract 1 piece of packing.

PACKING SEAL KIT CONTAINS:

PC# DESCRIPTION 8 Gasket 9 Capscrews Washer 9A 9B Gasket Capscrew Seal 9C 0-Ring 10 Impeller Key 12 Gland Clamp 22 25 Sleeve 28 **Packing** 29 Lantern Ring 65 Capscrews

POWER FRAME REPAIR KIT CONTAINS:

PC#	DESCRIPTION
47A	Slinger
50	Gasket
51	Seal
51A	Seal
52	Retaining Ring
53	Bearing
54	Bearing



911.5 SERIES MODEL 384 2-384-11 – 6-384-13.5

PARTS LIST

PC. NO.	DESCRIPTION	Q T Y	2-384-11 PF#3 (L)	3-384-11 PF#21 (XL)	2.5-384-13.5 PF#3 (L)	3-384-13.5 PF#21 (XL)	6-384-13.5 PF#21 (XL)
6	CASING	1					
	CASING (125/125)		180-8358-055	180-8372-055	180-8366-055	180-8374-055	180-8396-055
	CASING (125/250)		180-8359-055	180-8373-055	180-8367-055	180-8375-055	180-8397-055
	CASING (250/250)		180-8492-055	180-8499-055	180-8496-055	180-8500-055	180-8511-055
7	WEAR RINGS	1					
	WEAR RING (Back)		N/A	676-2165-208	N/A	676-2169-208	676-2168-208
	WEAR RING (Front)		676-8103-208	676-8108-208	676-8105-208	676-8108-208	676-8114-208
8	CASING GASKET	1	364-8009-603	364-8009-603	364-8011-603	364-8011-603	364-8011-603
11	IMPELLER	1	443-8110-104	443-8127-104	443-8119-104	443-8130-104	443-8156-104
23	PACKING GLAND	1	372-0377-208	372-0544-208	372-0377-208	372-0544-208	372-0544-208
25	SHAFT SLEEVE	1	756-0524-208	756-0705-208	756-0524-208	756-0705-208	756-0705-208
26	PACKING COVER	1	812-1132-010	812-1136-010	812-1137-010	812-1139-010	812-1140-010
28	PACKING*	6	564-0110-802	564-0154-802	564-0110-802	564-0154-802	564-0154-802
29	LANTERN RING*	1	676-0009-512	676-0972-512	676-0009-512	676-0972-512	676-0972-512
42-57	POWER FRAME	1	355-0014-644	355-0301-644	355-0014-644	355-0301-644	355-0301-644
55	PUMP SHAFT	1	728-4986-063	728-7509-063	728-4986-063	728-7509-063	728-7509-063

N/A	PACKING SEAL KIT	1	476-1065-644	476-1066-644	476-1065-644	476-1066-644	476-1066-644
N/A	POWER FRAME REPAIR KIT						
	GREASE LUBE	1	476-1068-644	476-1069-644	476-1068-644	476-1069-644	476-1069-644

^{*}Not all pump assemblies contain a lantern ring. When lantern ring is present, subtract 1 piece of packing.

PACKING SEAL KIT CONTAINS:

PC# DESCRIPTION 8 Gasket Capscrews 9 Washer 9A 9B Gasket Capscrew Seal 9C 10 0-Ring Impeller Key Gland Clamp 12 22 Sleeve 25 **Packing** 28 29 Lantern Ring

Capscrews

65

POWER FRAME REPAIR KIT CONTAINS:

PC#	DESCRIPTION
47A	Slinger
50	Gasket
51	Seal
51A	Seal
52	Retaining Ring
53	Bearing
54	Bearing



911.5 SERIES MODEL 384 8-384-13.5

PARTS LIST

PC. NO.	DESCRIPTION	0 T Y	8-384-13.5 PF#21 (XL)
6	CASING	1	
	CASING (125/125)		180-8398-055
	CASING (125/250)		180-8399-055
	CASING (250/250)		180-8512-055
7	WEAR RINGS	1	
	WEAR RING (Back)		676-8115-208
	WEAR RING (Front)		676-8115-208
8	CASING GASKET	1	364-8011-603
11	IMPELLER	1	443-8158-104
23	PACKING GLAND	1	372-0544-208
25	SHAFT SLEEVE	1	756-0705-208
26	PACKING COVER	1	812-1140-010
28	PACKING*	6	564-0154-802
29	LANTERN RING*	1	676-0972-512
42-57	POWER FRAME	1	355-0301-644
55	PUMP SHAFT	1	728-7509-063

N/A	PACKING SEAL KIT	1	476-1066-644
N/A	POWER FRAME REPAIR KIT		
	GREASE LUBE	1	476-1069-644

^{*}Not all pump assemblies contain a lantern ring. When lantern ring is present, subtract 1 piece of packing.

PACKING SEAL KIT CONTAINS:

8 Gasket 9 Capscrews 9A Washer 9B Gasket 9C Capscrew Seal 10 0-Ring 12 Impeller Key 22 **Gland Clamp** 25 Sleeve 28 Packing 29 Lantern Ring 65 Capscrews

PC# DESCRIPTION

POWER FRAME REPAIR KIT CONTAINS:

PC#	DESCRIPTION
47A	Slinger
50	Gasket
51	Seal
51A	Seal
52	Retaining Ring
53	Bearing
54	Bearing





WARRANTY

Seller warrants equipment (and its component parts) of its own manufacture against defects in materials and workmanship under normal use and service for one (1) year from the date of installation or start-up, or for eighteen (18) months after the date of shipment, whichever occurs first. Seller does not warrant accessories or components that are not manufactured by Seller; however, to the extent possible, Seller agrees to assign to Buyer its rights under the original manufacturer's warranty, without recourse to Seller. Buyer must give Seller notice in writing of any alleged defect covered by this warranty (together with all identifying details, including the serial number, the type of equipment, and the date of purchase) within thirty (30) days of the discovery of such defect during the warranty period. No claim made more than 30 days after the expiration of the warranty period shall be valid. Guarantees of performance and warranties are based on the use of original equipment manufactured (OEM) replacement parts. Seller assumes no responsibility or liability if alterations, non-authorized design modifications and/or non-OEM replacement parts are incorporated If requested by Seller, any equipment (or its component parts) must be promptly returned to Seller prior to any attempted repair, or sent to an authorized service station designated by Seller, and Buyer shall prepay all shipping expenses. Seller shall not be liable for any loss or damage to goods in transit, nor will any warranty claim be valid unless the returned goods are received intact and undamaged as a result of shipment. Repaired or replaced material returned to customer will be shipped F.O.B., Seller's factory. Seller will not give Buyer credit for parts or equipment returned to Seller, and will not accept delivery of any such parts or equipment, unless Buyer has obtained Seller's approval in writing. The warranty extends to repaired or replaced parts of Seller's manufacture for ninety (90) days or for the remainder of the original warranty period applicable to the equipment or parts being repaired or replaced, whichever is greater. This warranty applies to the repaired or replaced part and is not extended to the product or any other component of the product being repaired. Repair parts of its own manufacture sold after the original warranty period are warranted for a period of one (1) year from shipment against defects in materials and workmanship under normal use and service. This warranty applies to the replacement part only and is not extended to the product or any other component of the product being repaired. Seller may substitute new equipment or improve part(s) of any equipment judged defective without further liability. All repairs or services performed by Seller, which are not covered by this warranty, will be charged in accordance with Seller's standard prices then in effect.

THIS WARRANTY IS THE SOLE WARRANTY OF SELLER AND SELLER HEREBY EXPRESSLY DISCLAIMS AND BUYER WAIVES ALL OTHER WARRANTIES EXPRESSED, IMPLIED IN LAW OR IMPLIED IN FACT, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Seller's sole obligation under this warranty shall be, at its option, to repair or replace any equipment (or its component parts) which has a defect covered by this warranty, or to refund the purchase price of such equipment or part. Under the terms of this warranty, Seller shall not be liable for (a) consequential, collateral, special or liquidated losses or damages; (b) equipment conditions caused by normal wear and tear, abnormal conditions of use, accident, neglect, or misuse of said equipment; (c) the expense of, and loss or damage caused by, repairs or alterations made by anyone other than the Seller; (d) damage caused by abrasive materials, chemicals, scale deposits, corrosion, lightning, improper voltage, mishandling, or other similar conditions; (e) any loss, damage, or expense relating to or resulting from installation, removal or reinstallation of equipment; (f) any labor costs or charges incurred in repairing or replacing defective equipment or parts, including the cost of reinstalling parts that are repaired or replaced by Seller; (g) any expense of shipment of equipment or repaired or replacement parts; or (h) any other loss, damage or expense of any nature.

The above warranty shall not apply to any equipment which may be separately covered by any alternate or special warranties.

PERFORMANCE: In the absence of Certified Pump Performance Tests, equipment performance is not warranted or guaranteed. Performance curves and other information submitted to Buyer are approximate and no warranty or guarantee shall be deemed to arise as a result of such submittal. All testing shall be done in accordance with Seller's standard policy under Hydraulic Institute procedures.

LIABILITY LIMITATIONS: Under no circumstances shall the Seller have any liability under the Order or otherwise for liquidated damages or for collateral, consequential or special damages or for loss of profits, or for actual losses or for loss of production or progress of construction, regardless of the cause of such damages or losses. In any event, Seller's aggregate total liability under the Order or otherwise shall not exceed the contract price.

ACTS OF GOD: Seller shall in no event be liable for delays in delivery of the equipment or other failures to perform caused by fires, acts of God, strikes, labor difficulties, acts of governmental or military authorities, delays in transportation or procuring materials, or causes of any kind beyond Seller's control.

COMPLIANCE WITH LAW: Seller agrees to comply with all United States laws and regulations applicable to the manufacturing of the subject equipment. Such compliance shall include: The Fair Labor Standards Acts of 1938, as amended; Equal Employment Opportunity clauses of Executive Order 11246, as amended; Occupational Safety and Health Act of 1970 and the standards promulgated thereunder, if applicable. Since compliance with the various Federal, State, and Local laws and regulations concerning occupational health and safety, pollution or local codes are affected by the use, installation and operation of the equipment and other matters over which Seller has no control, Seller assumes no responsibility for compliance with those laws and regulations, whether by way of indemnity, warranty, or otherwise. It is incumbent upon the Buyer to specify equipment which complies with local codes and ordinances.



AURORA®

800 Airport Road North Aurora, Illinois 60542 630-859-7000 www.aurorapump.com