

EVERPURE® 4C-X CARTRIDGE

PROVIDES CLEAR, FRESH, QUALITY INGREDIENT WATER FOR DRINKING WATER APPLICATIONS

4C-X Cartridge: EV9590-06



APPLICATIONS

Cold cup vending machine

For drinking water applications requiring enhanced particulate reduction

FEATURES • BENEFITS

Exclusive filter removes particles as small as 1/2 micron in size

Sanitary cartridge replacement is simple, quick and clean. Internal filter parts are never exposed to handling or contamination

INSTALLATION TIPS

Never use saddle valve for connection

Use 3/8" (9.53 mm) water line

Install vertically with cartridge hanging down

Allow 2½" (63.5 mm) clearance below the cartridge for easy cartridge replacement

Flush 4C-X cartridge by running water through filter for three minutes at full flow

OPERATION TIPS

Change cartridges on a regular 6 month preventative maintenance program


Change cartridges when pressure falls below 10 psi (0.69 bar)

Service flow rate must not exceed 0.5 gpm (1.89 Lpm)

Always flush the filter cartridge at time of installation and cartridge change

EVERPURE® 4C-X CARTRIDGE

FV9590-06

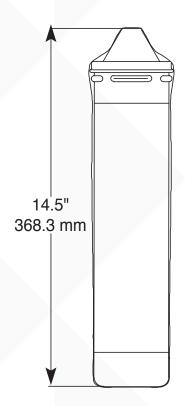

SPECIFICATIONS

Overall Dimensions

Length: 14.5" (393.7 mm)

Diameter: 3.25" (82.55 mm)

Service Flow Rate

Maximum 0.5 gpm (1.9 Lpm)

Pressure Requirements

10 - 125 psi (0.7 - 8.6 bar), non-shock

Temperature

35 - 100°F (2 - 38°C)

Electrical Connection

None required

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

Pentair reserves the right to modify specifications and pricing, or make substitutions without notice."

WARRANTY

Everpure water treatment systems (excluding replaceable elements) are covered by a limited warranty against defects in material and workmanship for a period of five years after date of purchase. Everpure replaceable elements (filter cartridges and water treatment cartridges) are covered by a limited warranty against defects in material and workmanship for a period of one year after date of purchase. See printed warranty for details. Everpure will provide a copy of the warranty upon request.

ORDERING INFORMATION

4C-X Replacement Cartridge EV9590-06 (6-pack)



WATER SOLUTIONS

EVERPURE-SHURFLO WORLD HEADQUARTERS, 1040 MUIRFIELD DRIVE, HANOVER PARK, IL 60133 USA • WWW.EVERPURE.COM 800.942.1153 MAIN (US ONLY) • 630.307.3000 MAIN • 630.307.3030 FAX • CSEVERPURE@PENTAIR.COM EMAIL

EVERPURE-SHURFLO AUSTRALIA, 2 REDWOOD DRIVE, NOTTING HILL, VICTORIA, 3168, AUSTRALIA 011.61.39.574.4000 TEL • 011.61.39.562.7237 FAX • AU.EVERPURE@PENTAIR.COM EMAIL

EVERPURE-SHURFLO CHINA, 21F CLOUD 9 PLAZA, NO 1118, SHANGHAI, 200052, CHINA

86.21.3211.4588 TEL • 86.21.3211.4580 FAX • CHINA.WATER@PENTAIR.COM EMAIL

EVERPURE-SHURFLO INDIA, GREEN BOULEVARD, B-9/A, 7TH FLOOR - TOWER B SECTOR 62, NOIDA - 201301

91.120.419.9444 TEL • 91.120.419.9400 FAX • INDIACUSTOMER@PENTAIR.COM EMAIL

EVERPURE-SHURFLO EUROPE, PENTAIR WATER BELGIUM BVBA, INDUSTRIEPARK WOLFSTEE, TOEKOMSTLAAN, 30 B-2200 HERENTALS, BELGIUM +32.(0).14.283.500 TEL • +32.(0).14.283.505 FAX • SALES@EVERPURE-EUROPE.COM EMAIL

EVERPURE-SHURFLO JAPAN INC., HASHIMOTO MN BLDG. 7F, 3-25-1 HASHIMOTO, MIDORI-KU, SAGAMIHARA-SHI KANAGAWA 252-0143, JAPAN 81.(0)42.775.3011 TEL • 81.(0)42.775.3015 FAX • INFO@EVERPURE.CO.JP EMAIL

EVERPURE-SHURFLO SOUTHEAST ASIA, 18 BOON LAY WAY, #04-110/111, TRADEHUB 21, 609966, SINGAPORE 65,6795.2213 TEL • FAX: 65,6795.2219 FAX • CSEVERPURE@PENTAIR.COM EMAIL

All Pentair trademarks and logos are owned by Pentair, Inc. All other brand or product names are trademarks or registered marks of their respective owners. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

© 2012 Pentair Filtration Solutions, LLC EV9590-06 AU12