
SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4H-UF10, UF12, UF14, UF20, UF22, UF24, UF34, UFH0, UFH2, UF40, UF42



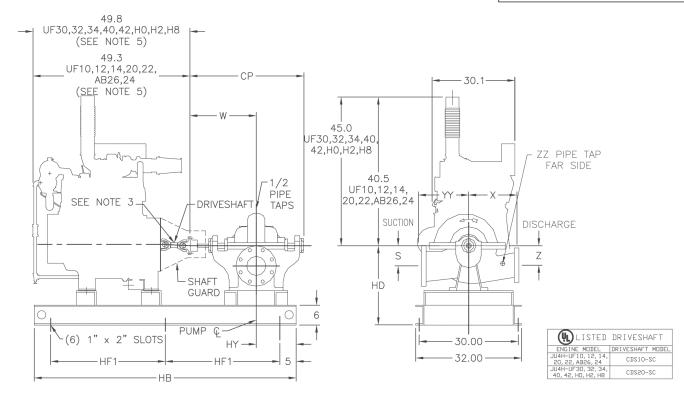


	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	CP	YY	77	НВ	HD	HF1	HY
2-1/2	481	10B	3	2	4	13-1/2	9-3/4	4	24	10	1-1/4	78	20	34	16-1/2
3	481	10	4	2	4-1/2	13-1/2	10	4-1/2	24	11	1-1/4	78	20	34	16-1/2
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	78	20	34	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	78	20	34	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	78	20	34	15-1/2
5	481	11	6	4	5-1/2	16	11-1/4	5-1/2	28-1/2	13-1/4	1-1/4	78	20	34	14
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	78	20	34	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	78	20	34	14
6	481	11	8	4	6-1/4	16	11-3/4	6-1/4	28-1/2	14-1/2	1-1/4	78	21	34	14
6	481	11HH	8	-	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	78	23	34	11-7/8
6	481	14HH	8	-	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	88	23	39	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	78	22	34	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	78	22	34	12
8	481	12	10	5	8	18	17	9	32	17-3/4	1-1/4	78	24	34	12
8	481	17	10	5	8	18	17	8	32	17-3/4	2	78	24	34	12

- All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25"±0.08 inches vertically above the pump shaft and 0.00"±0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF10,UF12,UF14, UF20, UF22, AB26, AB24



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD
IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT
PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

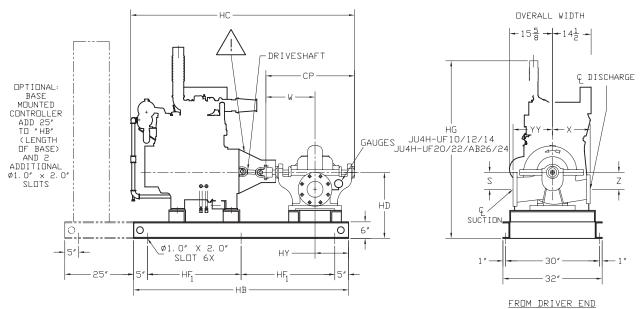

UL LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UF10, 12, 14, 20, 22, AB26, 24	CDS10-SC

	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	НВ	НС	HD	HF1	HG	HY	YY
3	491	9	5	-	6-1/8	14-5/8	11	6-1/8	25-15/16	78	75-1/8	20	34	60-7/8	15-3/8	12
4	491	14	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	88	80-7/8	20	39	60-7/8	22-3/8	15-1/4
4	491	8	6	-	5-3/4	14-5/8	10	5-1/2	25-15/16	78	75-1/8	20	34	60-7/8	15-3/8	11-1/4
4	491	11	6	-	6-7/8	16-5/8	11-1/4	7-1/8	29-11/16	78	78-7/8	21	34	61-7/8	13-3/8	14
4	491	14	5	-	7-3/8	18-3/8	13-1/2	7-3/8	33-3/16	78	82-3/8	20	34	60-7/8	11-5/8	14
4	491	18	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	88	82-7/16	22	39	62-7/8	21-5/8	14
4	491	10	6	-	6-1/2	16-7/8	10-1/4	6-1/2	29-13/16	78	79	20	34	60-7/8	13-1/8	11
5	491	14	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	88	80-7/8	23	39	63-7/8	22-3/8	17-1/4
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	88	82-9/16	23	39	63-7/8	21-1/8	18-3/4
5	491	10	8	-	8	20	12-1/2	7	35-1/2	88	84-11/16	23	39	63-7/8	20	13
6	491	14	10	-	9-3/8	20-1/8	13-1/4	10	35-7/8	88	85-1/16	25	39	65-7/8	19-7/8	18
6	491	12	10	-	6-7/8	16-5/8	20-1/2	7-1/8	29-11/16	78	78-7/8	23	34	63-7/8	13-3/8	14
6	491	15	8	-	8-3/4	22-1/2	15-1/2	8-3/4	40-1/4	88	89-7/16	23	39	63-7/8	17-1/2	15
6	491	10	10	-	9	20-5/8	13	7-1/2	36-3/4	88	85-15/16	25	39	65-7/8	19-3/8	15
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	88	85-3/4	28	39	68-7/8	19-1/2	22

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25"±0.09 inches vertically above the pump shaft and 0.00"±0.09 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

C. W. ROTATION VIEWED

SINGLE-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF30, UF32, UF34 UF40, UF42, JU4H-UFH0, UFH2, UFH8



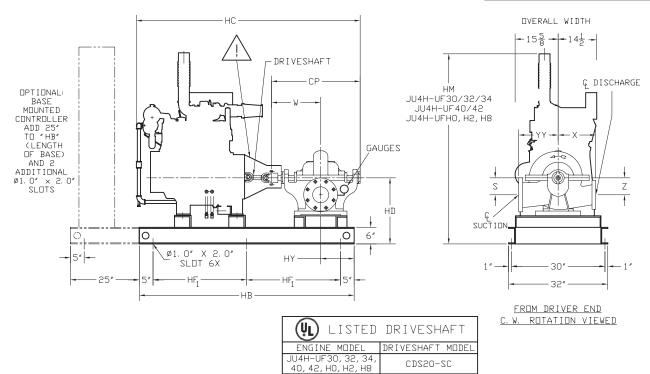

	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	НС	HD	HF1	HM	HY	YY
3	491	9	5	-	6-1/8	14-5/8	11	6-1/8	25-15/16	78	78-5/8	20	34	65-3/8	15-3/8	12
4	491	14	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	88	81-3/8	20	39	65-3/8	22-3/8	15-1/4
4	491	8	6	-	5-3/4	14-5/8	10	5-1/2	25-15/16	78	75-5/8	20	34	65-3/8	15-3/8	11-1/4
4	491	11	6	-	6-7/8	16-5/8	11-1/4	7-1/8	29-11/16	78	79-3/8	21	34	66-3/8	13-3/8	14
4	492	14	5	-	7-3/8	18-3/8	13-1/2	7-3/8	33-3/16	78	82-7/8	20	34	65-3/8	11-5/8	14
4	492	18	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	88	82-15/16	22	39	67-3/8	21-5/8	14
4	492	10	6	-	6-1/2	16-7/8	10-1/4	6-1/2	29-13/16	78	79-1/2	20	34	65-3/8	13-1/8	11
5	491	14	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	88	81-3/8	23	39	68-3/8	22-3/8	17-1/4
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	88	83-1/16	23	39	68-3/8	21-1/8	18-3/4
5	492	10	8	-	8	20	12-1/2	7	35-1/2	88	85-3/16	23	39	68-3/8	20	13
6	491	14	10	-	9-3/8	20-1/8	13-1/4	10	35-7/8	88	85-9/16	25	39	70-3/8	19-7/8	18
6	491	12	10	-	6-7/8	16-5/8	20-1/2	7-1/8	29-11/16	78	79-3/8	23	34	68-3/8	13-3/8	14
6	492	15	8	-	8-3/4	22-1/2	15-1/2	8-3/4	40-1/4	88	89-15/16	23	39	68-3/8	17-1/2	15
6	492	10	10	-	9	20-5/8	13	7-1/2	36-3/4	88	86-7/16	25	39	70-3/8	19-3/8	15
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	88	86-1/4	28	39	73-3/8	19-1/2	22

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25^{\circ}\pm0.08$ inches vertically above the pump shaft and $0.00^{\circ}\pm0.08$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4H-UF50, UF52, UF54, UF58



DD NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

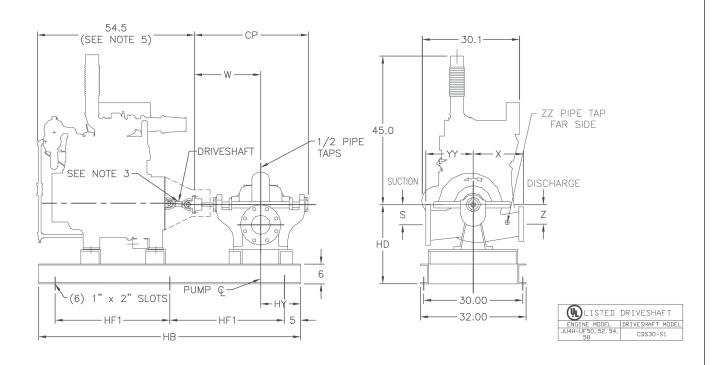


	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF1	HY
2-1/2	481	10B	3	2	4	13-1/2	9-3/4	4	24	10	1-1/4	78	20	34	16-1/2
3	481	10	4	2	4-1/2	13-1/2	10	4-1/2	24	11	1-1/4	78	20	34	16-1/2
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	78	20	34	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	78	20	34	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	78	20	34	15-1/2
5	481	11	6	4	5-1/2	16	11-1/4	5-1/2	28-1/2	13-1/4	1-1/4	78	20	34	14
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	78	20	34	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	78	20	34	14
6	481	11	8	4	6-1/4	16	11-3/4	6-1/4	28-1/2	14-1/2	1-1/4	78	21	34	14
6	481	11HH	8	-	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	78	23	34	11-7/8
6	481	14HH	8	-	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	88	23	39	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	78	22	34	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	78	22	34	12
8	481	12	10	5	8	18	17	9	32	17-3/4	1-1/4	78	24	34	12
8	481	17	10	5	8	18	17	8	32	17-3/4	2	78	24	34	12

- All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.35"±0.10 inches vertically above the pump shaft and 0.00"±0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF50, UF52, UF54, UF58



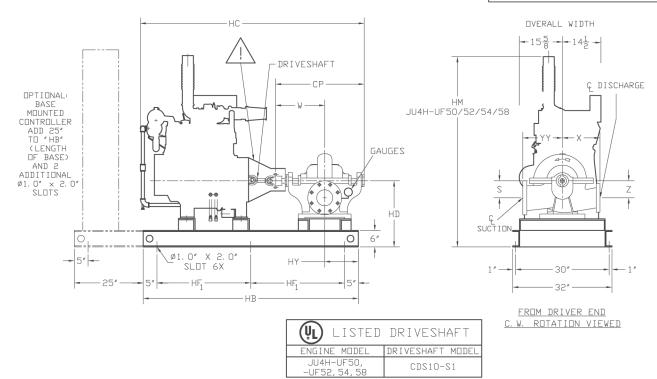

	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	НС	HD	HF1	HM	HY	YY
3	491	9	5	-	6-1/8	14-5/8	11	6-1/8	25-15/16	78	80-3/8	20	34	65-3/8	15-3/8	12
4	491	14	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	88	86-1/8	20	39	65-3/8	22-3/8	15-1/4
4	491	8	6	-	5-3/4	14-5/8	10	5-1/2	25-15/16	78	80-3/8	20	34	65-3/8	15-3/8	11-1/4
4	491	11	6	-	6-7/8	16-5/8	11-1/4	7-1/8	29-11/16	78	84-1/8	21	34	66-3/8	13-3/8	14
4	492	14	5	-	7-3/8	18-3/8	13-1/2	7-3/8	33-3/16	78	87-5/8	20	34	65-3/8	11-5/8	14
4	492	18	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	88	87-11/16	22	39	67-3/8	21-5/8	14
4	492	10	6	-	6-1/2	16-7/8	10-1/4	6-1/2	29-13/16	78	84-1/4	20	34	65-3/8	13-1/8	11
5	491	14	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	88	86-1/8	23	39	68-3/8	22-3/8	17-1/4
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	88	87-13/16	23	39	68-3/8	21-1/8	18-3/4
5	492	10	8	-	8	20	12-1/2	7	35-1/2	88	89-15/16	23	39	68-3/8	20	13
6	491	14	10	-	9-3/8	20-1/8	13-1/4	10	35-7/8	88	90-5/16	25	39	70-3/8	19-7/8	18
6	491	12	10	-	6-7/8	16-5/8	20-1/2	7-1/8	29-11/16	78	84-1/8	23	34	68-3/8	13-3/8	14
6	492	15	8	-	8-3/4	22-1/2	15-1/2	8-3/4	40-1/4	88	94-11/16	23	39	68-3/8	17-1/2	15
6	492	10	10	-	9	20-5/8	13	7-1/2	36-3/4	88	91-3/16	25	39	70-3/8	19-3/8	15
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	88	91	28	39	73-3/8	19-1/2	22

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.35^{\circ}\pm0.10$ inches vertically above the pump shaft and $0.00^{\circ}\pm0.10$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

TWO-STAGE FIRE PUMPS
CLARKE MODELS JU4H-UF10, UF12, UF14, UF20,
UF22, UFAB26, UF24, UF30, UF32, UF34,
UFH8, UFH0, UFH2, UF40, UF42



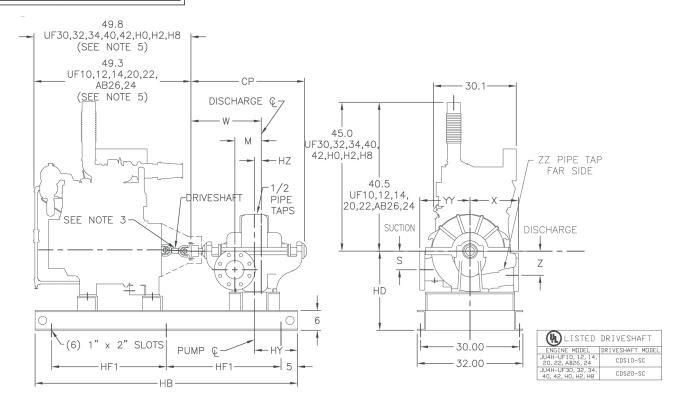



	PUMP SIZE																
		CASE		POWER													
DISCH	MODEL	BORE	SUCTION	SERIES	M	S	W	X	Z	CP	YY	HZ	HB	HD	HF1	HY	ZZ
4	485	15	5	3	7.13	5	18.88	13	6.5	31	13.5	1.88	78	20	34	13	1.25
5	485	12	5	4A	6.63	7	20.88	13	7	35.38	13	1.38	88	20	39	20.5	1.25
5	485	15	6	5	7.13	5.5	21.13	15	7.5	34.5	15.44	2.13	78	20	34	11	1.25
6	485	17A	8	5	11	7	24.5	16	9	38	16.5	3.5	88	22	39	19	1.25

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

MULTI-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF10, UF12, UF14 UF20, UF22, AB26, AB24



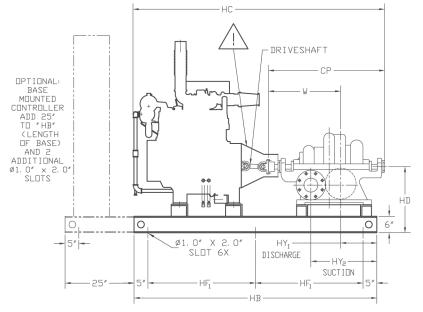

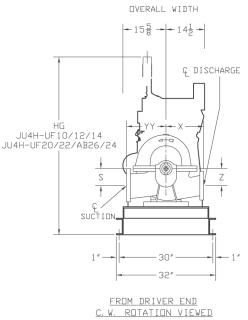

(IL) LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UF10, 12, 14, 20, 22, AB26, 24	CDS10-SC

	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Х	Z	СР	НВ	HC	HD	HF1	HG	HY	YY
5	495	15	6	-	9	28-3/8	15	9	46-7/8	98	96-1/16	23	44	63-7/8	32-5/8	15
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	98	101-11/16	25	44	65-7/8	31-3/8	16-1/2

NOTES

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:


The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25^{\circ}\pm0.09$ inches vertically above the pump shaft and $0.00^{\circ}\pm0.09$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

MULTI-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF30, UF32, UF34 UF40, UF42, UFH0, UFH2, UFH8



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

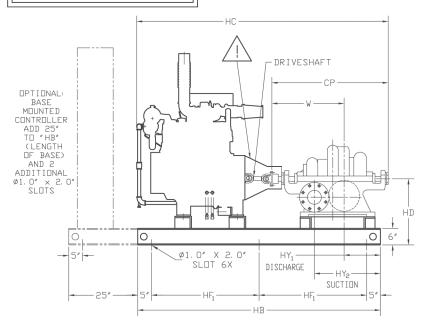

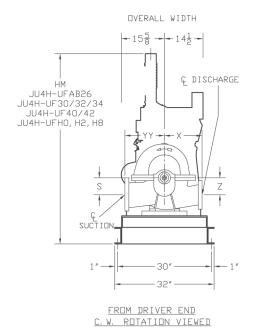

(UL LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UF30, 32, 34, 40, 42, H0, H2, H8	CDS50-2C

	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	НС	HD	HF1	НМ	HY	YY
5	495	15	6	-	9	28-3/8	15	9	46-7/8	98	96-3/8	23	44	68-3/8	32-5/8	15
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	98	102-3/16	25	44	70-3/8	31-3/8	16-1/2

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25"\pm0.08$ inches vertically above the pump shaft and $0.00"\pm0.08$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 485 PUMPS TWO-STAGE FIRE PUMPS CLARKE MODELS JU4H-UF50, UF52, UF54, UF58

WARNING DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

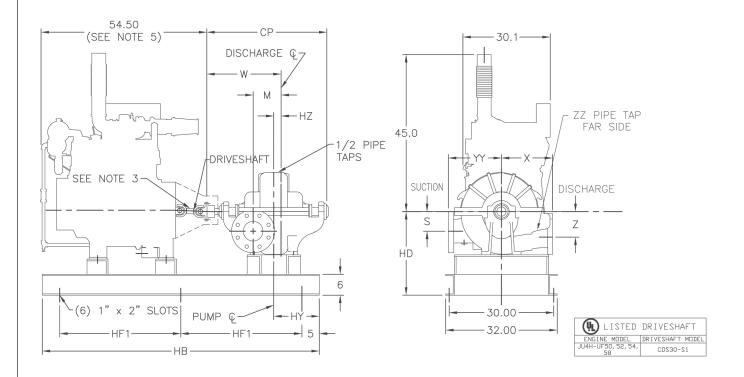


F	PUMP SIZE																
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	М	S	W	X	Z	СР	YY	HZ	НВ	HD	HF1	HY	ZZ
4	485	15	5	3	7.13	5	18.88	13	6.5	31	13.5	1.88	78	20	34	13	1.25
5	485	12	5	4A	6.63	7	20.88	13	7	35.38	13	1.38	88	20	39	20.5	1.25
5	485	15	6	5	7.13	5.5	21.13	15	7.5	34.5	15.44	2.13	78	20	34	11	1.25
6	485	17A	8	5	11	7	24.5	16	9	38	16.5	3.5	88	22	39	19	1.25

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.35" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- Pump suction and discharge flanges are ANSI Standard flat face. Refer to individual engine dimension print for reference point used to determine engine overall length.
- Left-hand (counterclockwise) rotation is not available.

MULTI-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UF50, UF52, UF54, UF58



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

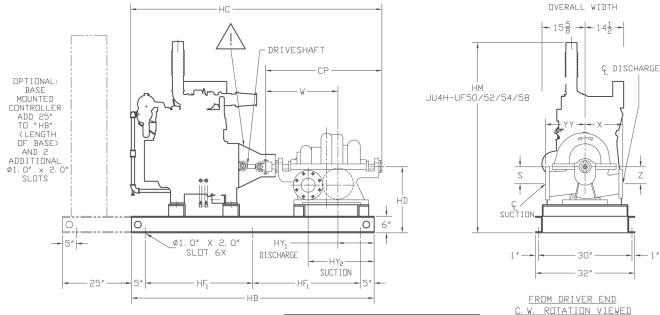

(IL) LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UF50, 52, 54, 58	CDS30-S1

	PUMP SIZI															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	HC	HD	HF1	HM	HY	YY
5	495	15	6	-	9	28-3/8	15	9	46-7/8	98	101-5/16	23	44	68-1/2	32-5/8	15
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	98	106-15/16	25	44	70-1/2	31-3/8	16-1/2


NOTES:

- 1. Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $035"\pm0.10$ inches vertically above the pump shaft and $0.00"\pm0.10$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4R-UF09, UF11, UF13, UF19, UF21, UF23

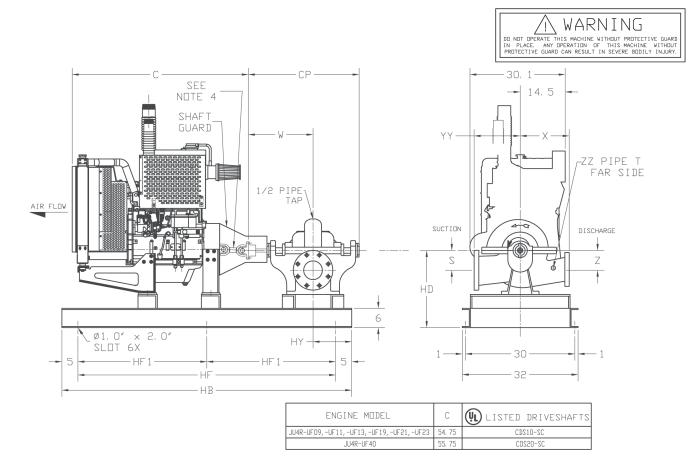


	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER	S	W	Х	Z	CP	YY	77	HB	HD	HF	HF1	HY
	MODEL			SERIES	3			L								
2-1/2	481	10B	3	2	4	13-1/2	9-3/4	4	24	10	1-1/4	88	20	78	39	16-1/2
3	481	10	4	2	4-1/2	13-1/2	10	4-1/2	24	11	1-1/4	88	20	78	39	16-1/2
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	88	20	78	39	15-1/2
5	481	11	6	4	5-1/2	16	11-1/4	5-1/2	28-1/2	13-1/4	1-1/4	88	20	78	39	14
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
6	481	11	8	4	6-1/4	16	11-3/4	6-1/4	28-1/2	14-1/2	1-1/4	88	21	78	39	14
6	481	11HH	8	-	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	88	23	78	39	11-7/8
6	481	14HH	8	-	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	98	23	88	44	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	88	21	78	39	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	88	22	78	39	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	88	22	78	39	12
8	481	12	10	5	8	18	17	9	32	17-3/4	1-1/4	88	24	78	39	12
8	481	17	10	5	8	18	17	8	32	17-3/4	2	88	24	78	39	12

- 1. All dimensions are in inches.
- 2. Dimensions may vary ± 3/8".
- 3. Not for construction purposes, unless certified.
- 4. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 5. Pump suction and discharge flanges are ANSI Standard flat face.
- 6. Refer to individual engine dimension print for reference point used to determine "C" dimension.
- 7. Left-hand (counterclockwise) rotation is not available.



SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4R-UF49, UF51, UF53



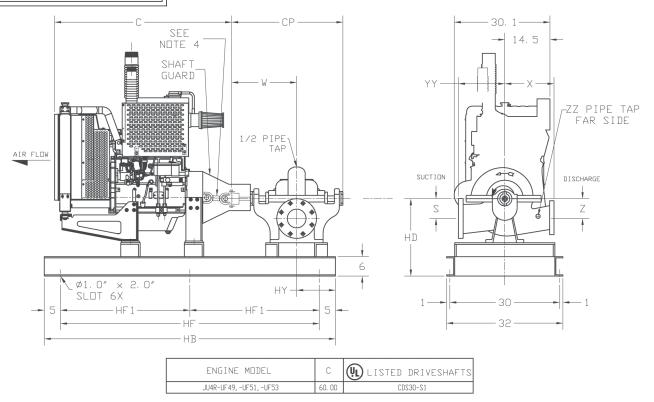


	PUMP SIZE															
DIOOLI	MAODEL	CASE	OLIOTION	POWER				_	0.0	107		LID	LID			107
DISCH	MODEL	BORE	SUCTION	SERIES	S	W	X	Z	CP	YY	ZZ	HB	HD	HF	HF1	HY
2-1/2	481	10B	3	2	4	13-1/2	9-3/4	4	24	10	1-1/4	88	20	78	39	16-1/2
3	481	10	4	2	4-1/2	13-1/2	10	4-1/2	24	11	1-1/4	88	20	78	39	16-1/2
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	88	20	78	39	15-1/2
5	481	11	6	4	5-1/2	16	11-1/4	5-1/2	28-1/2	13-1/4	1-1/4	88	20	78	39	14
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
6	481	11	8	4	6-1/4	16	11-3/4	6-1/4	28-1/2	14-1/2	1-1/4	88	21	78	39	14
6	481	11HH	8	-	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	88	23	78	39	11-7/8
6	481	14HH	8	-	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	98	23	88	44	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	88	21	78	39	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	88	22	78	39	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	88	22	78	39	12
8	481	12	10	5	8	18	17	9	32	17-3/4	1-1/4	88	24	78	39	12
8	481	17	10	5	8	18	17	8	32	17-3/4	2	88	24	78	39	12

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.35" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine "C" dimension.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JU6H-UF30, UF32, UF34, UF50, UF52, UF54, UF60, UF62, UF84, UFD0, UFD2, UFM0, UFM8, UFAAPG, UFAAQ8, UFAARG, UFAAS0



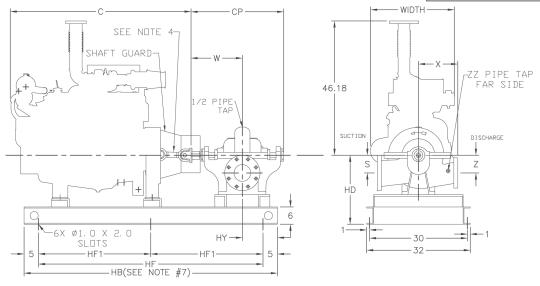

ENGINE MODEL	С	WIDTH
JU6H-UF30, UF32, UF34, UF50 JU6H-UF52, UF54, UF58 JU6H-UFD0, UFD2, UFG8 JU6H-UFABL8, ABL0, ABL2 JU6H-UFM0, UFM2, UFM8	61, 625	29. 64
JU6H-UF60, 62, UFAB76, UF68, JU6H-UF84	63. 625	31. 74
JU6H-UFAAPG,UFAAQ8 JU6H-UFAARG,UFAAS0	68. 375	31. 74

(II) LIS	TED DRIVESH	4FT
ENGINE MODEL	DRIVESHAFT MODEL	'B' DRIVESHAFT OFFSET
JU6H-UFDO, D2, 30, 32, 34	CDS20-S1	0, 35"
JUGH-UFG8, ABL8, ABL0, ABL2, M0, M2, 58, 50, 52, 54, 60, 62, AB76, 68, 84	CDS30-S1	0. 35*
JU6H-UFAAPG, AAQ8, AARG, AASO	CDS50-SC	0. 45"


	PUMP SIZE															
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF	HF1	HY
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	88	20	78	39	15-1/2
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
6	481	11HH	8	-	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	88	23	78	39	11-7/8
6	481	14HH	8	-	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	98	23	88	44	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	88	21	78	39	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	88	22	78	39	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	88	22	78	39	12
8	481	17B	10	5	8	18	17	8	32	17-3/4	2	88	24	78	39	12
8	481	21	10	7A	12-1/4	24-1/4	20	12-1/4	43	24	2	98	31	88	44	15-11/16
10	481	18	12	6B	13-1/2	21-7/8	18	13-1/2	38	22	2	98	32	88	44	18-1/8
10	481	18D	12	7A	12-1/4	24-5/16	20	12-1/4	24-5/16	24	2	98	31	88	44	15-11/16

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 1. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.
- 7. Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.



SINGLE-STAGE HSC FIRE PUMPS JU6H-UF30, UF32, UF34, UFABL8, UFABL0 UFABL2, AB76, UF50, UF52, UF54 UF58, UFD0, UFD2, UFG8, UFM0, UFM2, UFM8, UF60, AAQ8, AARG, UF62, UF68, UF84



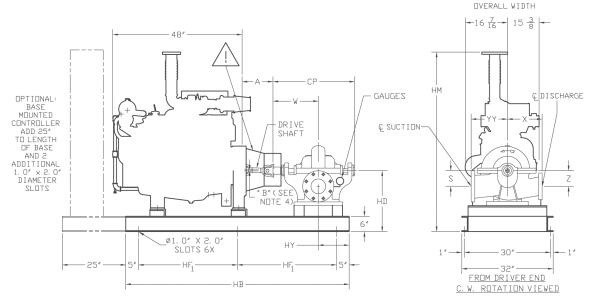



UL LIST	ED DRIVESHAF	Т	
ENGINE MODEL	DRIVESHAFT MODEL	Α	В
JU6H-UFDO, D2, 30, 32, 34	CDS20-S1	15-5/8	0. 35
JU6H-UFG8, ABL8, ABL0, ABL2, M0, M2, 58, 50, 52, 54, 60, 62, AB76, 68, 84	CDS30-S1	15-5/8	0. 35
JU6H-UFAAPG, AAQ8, AARG, AASO	CDS50-SC	20-3/8	0, 45

	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	HD	HF1	НМ	HY	YY
4	491	14	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	98	20	44	65-3/4	22-3/8	15-1/4
4	492	18	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	98	22	44	67-3/4	21-5/8	14
5	491	14	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	98	23	44	68-3/4	22-3/8	17-1/4
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	98	23	44	68-3/4	21-1/8	18-3/4
6	491	14	10	-	9-3/8	20-1/8	13-1/4	10	35-7/8	98	25	44	70-3/4	19-7/8	18
6	491	18	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	98	25	44	70-3/4	19-7/8	20
6	491	18	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	98	26	44	71-3/4	17-3/8	22
6	491	12	10	-	6-7/8	16-5/8	20-1/2	7-1/8	29-11/16	88	23	39	68-3/4	13-3/8	14
6	492	15	8	-	8-3/4	22-1/2	15-1/2	8-3/4	40-1/4	98	23	44	68-3/4	17-1/2	15
6	492	18	8	-	9-5/8	22-1/2	16	9-5/8	40-1/8	98	24	44	69-3/4	17-1/2	16
6	492	10	10	-	9	20-5/8	13	7-1/2	36-3/4	98	25	44	70-3/4	19-3/8	15
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	98	28	44	73-3/4	19-1/2	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	98	28	44	73-3/4	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	108	31	49	76-3/4	21-3/8	25

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.10 inches vertically above the pump shaft and 0.00" \pm 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

MULTI-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE

JU6H-UF30, UF32, UF34, UF50, UF52, UF54, UF58, UFDO, UFD2, UFG8, UFABL8, ABL0, ABL2, UFM0, UFM2, UFM8, JU6H-UF60, 62, UFAB76, UF68, UF84, JU6H-UFAAPG, UFAAQ8, UFAARG, UFAASO

DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BOILLY INJURY.

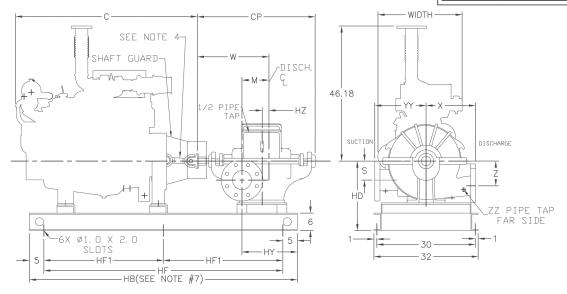

ENGINE MODEL	С	WIDTH
JU6H-UF30, UF32, UF34, UF50 JU6H-UF52, UF54, UF58 JU6H-UFD0, UFD2, UFG8 JU6H-UFABL8, ABL0, ABL2 JU6H-UFM0, UFM2, UFM8	61. 625	29. 64
JU6H-UF60, 62, UFAB76, UF68, JU6H-UF84	63. 625	31. 74
JU6H-UFAAPG,UFAAQ8 JU6H-UFAARG,UFAAS0	68. 375	31. 74


(il) ris	TED DRIVESHA	4FT
ENGINE MODEL	DRIVESHAFT MODEL	'B' DRIVESHAFT OFFSET
JU6H-UFDO, D2, 30, 32, 34	CDS20-S1	0. 35"
JUGH-UFG8, ABL8, ABL0, ABL2, M0, M2, 58, 50, 52, 54, 60, 62, AB76, 68, 84	CDS30-S1	0. 35"
JU6H-UFAAPG, AAQ8, AARG, AASO	CDS50-SC	. 45"

	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF1	HY
4	485	15	5	3	5	18-7/8	13	6-1/2	31	13-1/2	1-1/4	88	20	39	13
5	485	12	5	4A	7	20-7/8	13	7	35-3/8	13	1-1/4	98	20	44	20-1/2
5	485	15	6	4	5-1/2	21-1/8	15	7-1/2	34-1/2	15-7/16	1-1/4	88	20	39	11
6	485	12	6	5A	8	22-7/8	14	8	38-1/2	14	1-1/4	98	22	44	18-3/4
6	485	16	8	5	8-1/4	23-5/8	19	7-3/4	37-7/8	17	1-1/4	98	23	44	26-7/8
6	485	17	8	5	7	24-1/2	16	9	38	16-1/2	1-1/4	98	22	44	19

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

MULTI-STAGE HSC FIRE PUMPS JU6H-UF30, UF32, UF34, ABL8, ABL0 ABL2, AB76, UF50, UF52, UF54, UF58, UFD0, UFD2, UFG8, UFM0, UFM2, UFM8, UF60, AAPG, AAS0, AAQ8, AARG, UF62, UF68, UF84



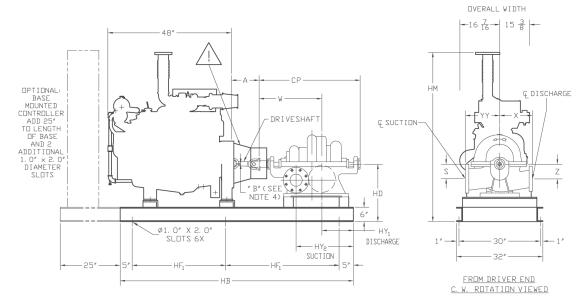

(i) LIST	ED DRIVESHAF	Т	
ENGINE MODEL	DRIVESHAFT MODEL	Α	В
JU6H-UFDO, D2, 30, 32, 34	CDS20-S1	15-5/8	0, 35
JU6H-UFG8, ABL8, ABL0, ABL2, MO, M2, 58, 50, 52, 54, 60, 62, AB76, 68, 84	CDS30-S1	15-5/8	0. 35
JU6H-UFAAPG, AAQ8, AARG, AASO	CDS50-SC	20-3/8	0. 45

PUMP SIZE																
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	HD	HF1	HM	YY	HY1	HY2
5	495	15	6	-	9	28-3/8	15	9	46-7/8	108	23	49	68-3/4	15	21-5/8	32-5/8
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	108	25	49	70-3/4	16-1/2	18-3/8	31-3/8

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.10 inches vertically above the pump shaft and 0.00" \pm 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE ENGINE JW6H-UF30, UF40, UF48, UF50, UFH8, UF58 AND UF60 DIESEL DRIVE



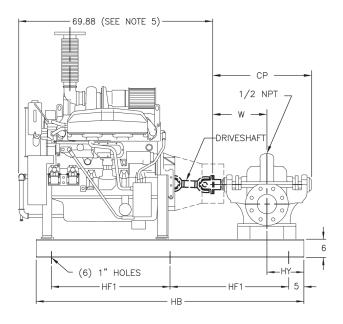

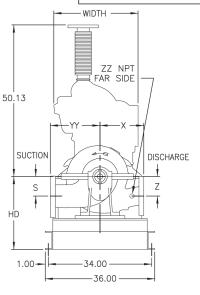

LISTEI) DRIVESHAFT					
ENGINE MODEL	DRIVESHAFT MODEL					
1470 THRU 2100 RPM DNLY	CDS50-SC					

NON-LISTED DRIVESHAFT

ENGINE MODEL	WIDTH
JW6H-UF30	29.5
ALL EXCEPT JW6H-UF30 & -UF38	28.6


	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY
5	481	17	6	4	6.25	16	14	6.25	28.5	15	1.25	98	24	44	14
6	481	15	8	5	6.75	18	14.25	6.75	32	16.75	1.25	98	24	44	12
6	481	18	8	5	8	18	16	8	32	18	1.25	98	24	44	12
6	481	20	8	5	8	18	15.75	8	32	18	1.25	98	24	44	12
8	481	17	10	5	8	18	17	8	32	17.75	2	98	24	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	2	108	25	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	32	54	24.75
10	481	15	12	6B	13.5	21.88	17	13.5	38	20	1.25	108	31	49	18.13
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	31	49	18.13
10	481	18D	12	7A	12.25	24.31	20	12.25	42.93	24	2	108	31	49	15.69

- 1. All dimensions are in inches and may vary \pm .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE HSC FIRE PUMPS CLARKE ENGINE JW6H-UF30, UF40, UF48, UF50, UFH8, UF58, UF60



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD
IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT
PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

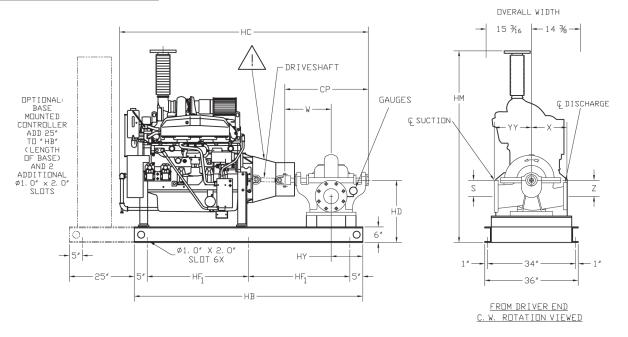

UL LISTED	DRIVESHAFT						
ENGINE MODEL	DRIVESHAFT MODE						
1760 & 2100 RPM	CDS50-SC						

NON-LISTED DRIVESHAFT										
ENGINE MODEL	DRIVESHAFT MODEL									
ALL JW6H MDDELS	SC81A									

PUMP SIZE																
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	НС	HD	HF1	HM	HY	YY
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	98	103-1/4	24	44	74-1/4	11-1/8	18-3/4
6	491	14	10	-	9-3/8	20-1/8	13 1/4	10	35-7/8	108	105-3/4	25	49	76-1/4	19-7/8	18
6	491	18	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	108	105-3/4	26	49	76-1/4	19-7/8	20
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	109-1/8	25	49	75-1/4	17-3/8	22
6	492	18	8	-	9-5/8	22-1/2	16	9-5/8	40-1/8	108	110	24	49	74-1/4	17-1/2	16
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	108	106-1/2	28	49	78-1/4	19-1/2	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	111-3/8	28	49	78-1/4	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	118	121-3/8	31	54	81-1/4	21-3/8	25
10	491	20	16	-	13	25-9/16	23	14-1/4	49-9/16	118	119-1/2	32	54	82-1/4	24-7/16	25
10	492	18	12	_	11-1/2	25-9/16	21	11-1/2	14-13/16	108	115-11/16	29	49	79-1/4	14-7/16	21

NOTES


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45^{\circ} \pm 0.11$ inches vertically above the pump shaft and $0.00^{\circ} \pm 0.11$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

TWO-STAGE FIRE PUMPS CLARKE ENGINE JW6H-UF30, UF40, UF48, UF50, UFH8, UF58 AND UF60 DIESEL DRIVE



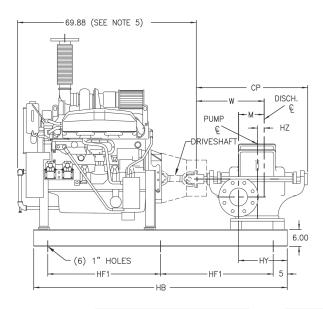

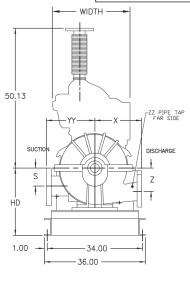

(N) LISTEI	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
1470 THRU 2100 RPM DNLY	CDS50-SC

NON-LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
2350 RPM ONLY	SC81A

ENGINE MODEL	WIDTH
JW6H-UF30	29.5
ALL EXCEPT JW6H-UF30 & -UF38	28.6


PUMP SIZE																
DISCH	MODEL	CASE BORE	SUCTION	M	S	W	Х	Z	СР	HZ	YY	ZZ	НВ	HD	HF1	HY
4	485	15	5	7.13	5	18.88	13	6.5	31	1.88	13.5	1.25	98	24	44	18.25
5	485	15	6	9.13	5.5	21.13	15	7.5	34.5	2.13	15.44	1.25	98	24	44	18
6	485	16	8	10.5	8.25	23.63	19	7.75	37.88	2.63	17	1.25	108	24	49	26.88
6	485	17	8	11	7	24.5	16	9	38	3.5	16.5	1.25	108	24	49	16.5

- 1. All dimensions are in inches and may vary ± .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

MULTI-STAGE HSC FIRE PUMPS CLARKE ENGINE JW6H-UF30, UF40, UF48, UF50, UFH8, UF58, UF60



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUART IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

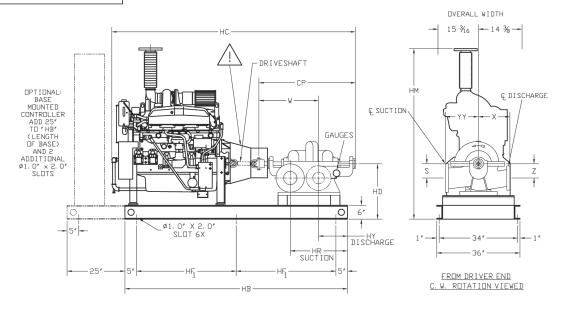

(LISTED	DRIVESHAFT
ENGINE MODEL	DRIVESHAFT MODEL
1760 & 2100 RPM	CDS50-SC

NON-LISTED DRIVESHAFT									
ENGINE MODEL	DRIVESHAFT MODEL								
ALL JW6H MODELS	SC81A								

	Р	UMP SIZ	E															
	DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	HB	HC	HD	HF1	HM	HY	HR	YY
Ì	6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	118	122-3/8	25	54	74-1/4	18-3/8	31-3/8	16-1/2


NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.45 ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JX6H-UF40, UF50, UF60 AND UF70 DIESEL ENGINES



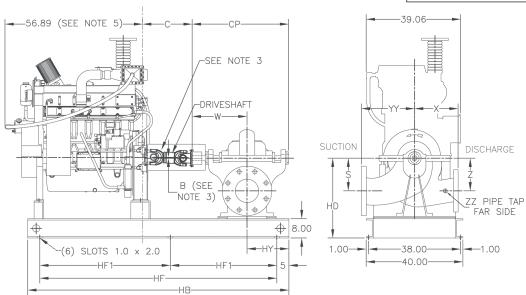

(ÎL) LI	STED DRIVESHA	FTS	
ENGINE MODEL	DRIVESHAFT MODEL*	С	В
N/A	N/A		
There are no lis	ted driveshafts availible enaines.	e for th	nese

NON-LISTED DRIVESHAFTS									
ENGINE MODEL	DRIVESHAFT MODEL*	С	В						
JX6H-UF40	SC2140	17.00	0.35						
JX6H-UF50, 60, 70	SC2160A	20.50	0.35						


F	PUMP SIZI	=														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF	HF1	HY
6	481	18	8	5	8	18	16	8	32	18	1.25	98	26	88	44	12
8	481	17	10	5	8	18	17	8	32	17.75	2	98	26	88	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	2	108	27	98	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	34	108	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	33	98	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	108	33	98	49	15.75
12	481	18	14	7	15	25.25	18	15	43.88	23	2	118	35	108	54	24.75

- 1. All dimensions are in inches and may vary \pm .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.12 inches vertically above the pump shaft and 0.00" ± 0.12 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JX6H-UF40, UF50, UF60 AND UF70 DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

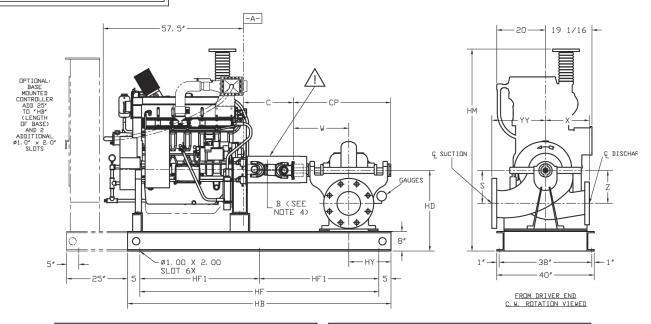

UL LISTED DRIVESHAFTS										
ENGINE MODEL	DRIVESHAFT MODEL*	С	В							
N/A	N/A									
*There are no lis	ted driveshafts for the	ese eng	jines.							

NON-LISTED DRIVESHAFTS									
ENGINE MODEL DRIVESHAFT MODEL* C B									
JX6H-UF40	SC2140	17.00	0.35						
JX6H-UF50, 60, 70	SC2160A	20.50	0.45						

F	PUMP SIZI	E														
		CASE	SUCTION	POWER												
DISCH	MODEL	BORE		SERIES	S	W	Χ	Z	CP	HB	HD	HF	HF1	HM	HY	YY
6	491	18	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	108	28	98	49	77-5/8	19-7/8	20
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	28	98	49	77-5/8	17-3/8	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	30	98	49	79-5/8	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	118	33	108	54	82-5/8	21-3/8	25
10	491	20	16	-	13	25-9/16	23	14-1/4	49-9/16	118	35	108	54	84-5/8	24-7/16	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	118	31	108	54	80-5/8	24-7/16	21

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 5.25.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 0° angle. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.12 inches above the pump shaft. The engine crankshaft may be parallel offset from the pump shaft 0.45" left or right. Refer to the engine manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4H-UFAEAO, AEE8, AEF2, ADJ8, ADJ2 EPA NSPS TIER 3 AND TIER iT4* CERTIFIED



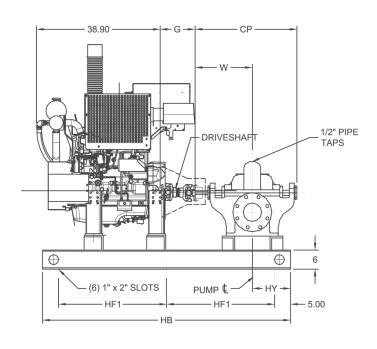

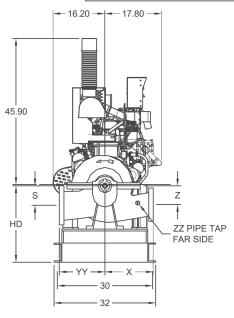


LISTED DRIVESHAFT									
ENGINE MODEL	DRIVESHAFT MODEL	G							
JU4H-UFAEA0*	CDS10-SC	10.50							
JU4H-UFAEE8*,AEF2*, ADJ8,ADJ2	CDS20-SC	11.00							

F	PUMP SIZ	E		NO												
DISCH	MODEL	CASE BORE	ENGINE MODEL JU4H-UF	SUCTI	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF1	HY
4	481	11/A/C	AEA0	5	3	5	14.5	11.25	5	26	12.75	1.25	78	20	34	15.5
4	481	11D	AEA0	5	3	5	14.5	12	5	26	12.75	1.25	78	20	34	15.5
4	481	15	ADJ8,AEE8	5	3	5.5	14.5	13	5.5	26	14	1.25	78	20	34	15.5
5	481	15/A	ADJE8, AEA0, AEE8	6	4	6.25	16	13.25	6.25	28.5	15	1.25	78	20	34	14
5	481	17	ADJ8	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1 1/4	78	20	34	14
6	481	11	AEA0	8	4	6.25	16	11.75	6.25	28.5	14.5	1.25	78	21	34	14
6	481	15	ADJ8,AEE8	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	11HH	ADJ2	8	4A	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	78	23	34	11-7/8
6	481	14HH	ADJ2	8	5A	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	88	23	39	19-9/16
6	481	15	ADJ8,AEE8	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
8	481	12	AEE8	10	5	8	18	17	9	32	17-3/4	1-1/4	78	24	34	12
8	481	24	ADJ2	12	7	15	25-1/4	20	15	43-7/8	25	1-1/4	88	32	39	14-3/4

- 1. All dimensions are in inches and may vary ± .38.
- Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

SINGLE-STAGE HSC FIRE PUMPS CLARKE MODELS JU4HADJ8, AEE8, AEA0, ADJ2, AND AEF2 EPA NSPS TIER 3 AND iT4* CERTIFIED



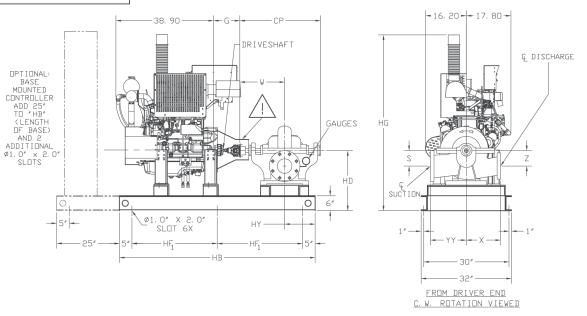

(IL) LISTED	DRIVESHAFT	
ENGINE MODEL	DRIVESHAFT MODEL	G
JU4H-UFAEAO*	CDS10-SC	10. 50
JU4H-UFAEE8*, AEF2*, ADJ8	CDS20-SC	11. 00

	PUMP SIZ	E														
		CASE	ENGINE MODEL JU4H-		POWER	_										
DISCH	MODEL	BORE	UF	SUCTION	SERIES	S	W	X	Z	CP	HB	HD	HF1	HG	HY	YY
4	491	14	AEAO*, AEE8*, AEF2*, ADJ2*	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	88	20	39	66	22-3/8	15-1/4
4	492	18	AEE8*, ADJ8	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	88	22	39	68	21-5/8	14

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25^{\circ} \pm 0.08$ inches vertically above the pump shaft and $0.00^{\circ} \pm 0.08$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 481 PUMPS SINGLE-STAGE FIRE PUMPS CLARKE MODEL JU4H-UFAD4G

DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY DEERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

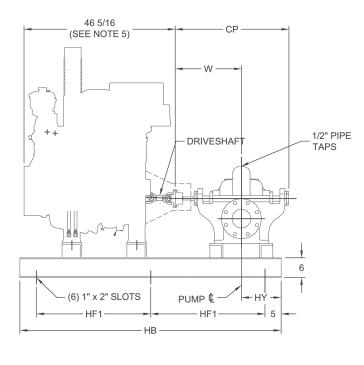

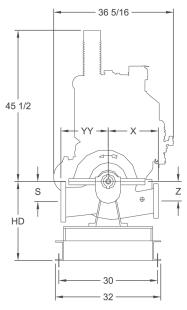


LISTED DRIVES	HAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UFAD4G	CDS20-SC

	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF1	HY
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	78	20	34	14
6	481	15C	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	14HH	8	5A	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	88	23	39	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
8	481	24	12	7	15	25-1/4	20	15	43-7/8	25	1-1/4	98	32	44	24-3/4

- 1. All dimensions are in inches and may vary ± .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

MULTI-STAGE HSC FIRE PUMPS CLARKE MODELS JU4H-UFAD4G, AD5G, ADJG, ADP0, ADR0, ADW8, ADY8 EPA NSPS TIER 3



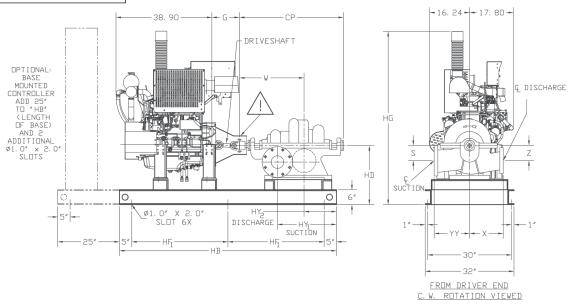

(IL) LISTED	DRIVESHAFT	
ENGINE MODEL	DRIVESHAFT MODEL	G
JU4H-UFAD4G	CDSSO-SC	11.00"
JU4H-UFAD5G, ADJG, ADPO, ADRO, ADW8, ADY8	CDS30-S1	15. 75″

	PUI	MP SIZE		ENGINE														
ſ			CASE	MODEL		POWER												1 I
L	DISCH	MODEL	BORE	JU4H-UF	SUCTION	SERIES	S	W	Χ	Ζ	CP	HB	HD	HF1	HG	HY1	HY2	YY
	5	495	15	ADY8	6	-	9	28-3/8	15	9	46-7/8	98	23	44	69	32-5/8	21-5/8	15

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25" \pm 0.08$ inches vertically above the pump shaft and $0.00" \pm 0.08$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE MODELS JU4H-UFADJG, UFADPO, UFADRO, UFADW8, UFADY8



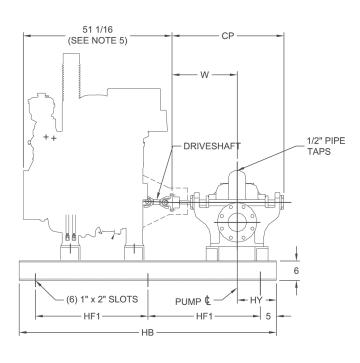

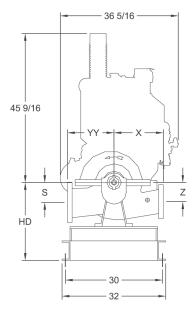

LISTED DRIVESH	IAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UFAD5G, -UFADJG, -UFADP0, -UFADR0, -UFADW8, -UFADY8	CDS30-S1


	PUMP SIZE														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Y	7	СР	YY	77	HB	HD	HF1	HY
				JLIIILJ	<u> </u>		Λ	0.4/4							
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	78	20	34	14
5	481	17	6	4	6-1/4	16	14	6-1/4	28-1/2	15	1-1/4	78	20	34	14
6	481	20B	8	5	8	18	15-3/4	8	32	188	1-1/4	78	22	34	12
6	481	18B/C	8	5	8	18	16	8	32	18	1-1/4	78	22	34	12
6	481	15C	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	15B	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
6	481	14HH	9	5A	7-1/2	20-7/16	15	7-1/2	36-3/4	17	1-1/4	88	23	39	19-9/16
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	78	22	34	12
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	78	21	34	12
8	481	17B	10	5	8	18	17	8	32	17-3/4	2	78	24	34	12


- 1. All dimensions are in inches and may vary \pm .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.35" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

TWO-STAGE FIRE PUMPS CLARKE MODEL JU4H-UFAD4G



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

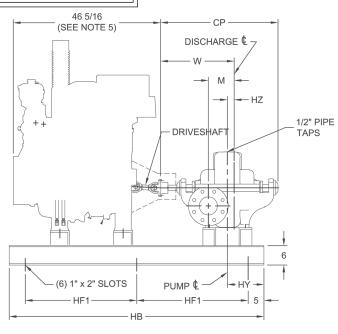

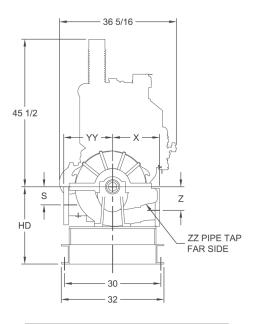


LISTED DRIVES	SHAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UFAD4G	CDS20-SC


	Pl	JMP SIZE																
I	DIGGLI		CASE	007.01.	POWER			,,,	.,	_	CD	V//						77
L	DISCH	MODEL	BORE	SUCTION	SERIES	M	S	W	Х	Z	CP	YY	HZ	HB	HD	HF1	HY	LL
	4	485	15	5	3	7-1/8	5	18-7/8	13	6-1/2	31	13-1/2	1-7/8	78	20	34	13	1-1/4

- 1. All dimensions are in inches and may vary ± .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.

TWO-STAGE FIRE PUMPS CLARKE MODELS JU4H-UFAD5G, UFADJG, UFADP0, UFADR0, UFADW8, UFADY8



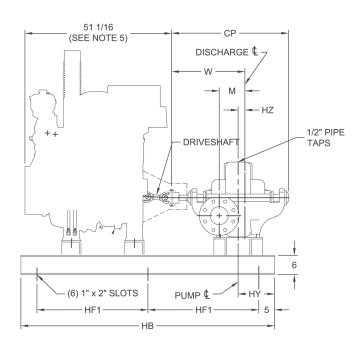

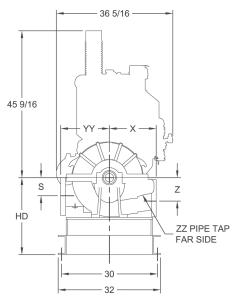

LISTED DRIVES	HAFT
ENGINE MODEL	DRIVESHAFT MODEL
JU4H-UFAD5G, -UFADJG, -UFADP0, -UFADR0, -UFADW8, -UFADY8	CDS30-S1

F	PUMP SIZ	E															
		CASE		POWER													
DISCH	MODEL	BORE	SUCTION	SERIES	M	S	W	Χ	Z	CP	YY	HZ	HB	HD	HF1	HY	ZZ
4	485	15	5	3	7-1/8	5	18-7/8	13	6-1/2	31	13-1/2	1-7/8	78	20	34	13	1-1/4
6	485	17A	8	5	11	7	24-1/2	16	9	38	16-1/2	3-1/2	88	22	39	19	1-1/4
6	485	17A/DI	8	5	11	7	24-1/2	16	9	38	16-1/2	3-1/2	88	22	39	19	1-1/4


- 1. All dimensions are in inches and may vary \pm .38.
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.35" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine engine overall length.
- 6. Left-hand (counterclockwise) rotation is not available.


Section **913** Page **230**Date **OCTOBER 2017**Supersedes **JULY 2013**

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE ENGINE DRIVE JU4R-UFAEE7, AEF1 EPA NSPS TIER iT4 CERTIFIED



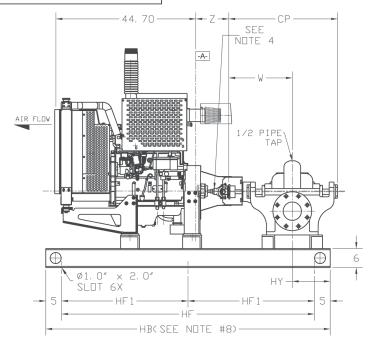

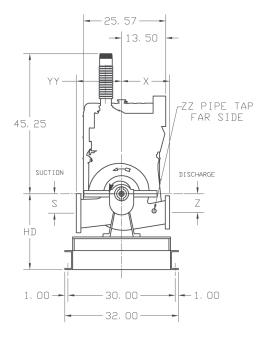


ENGINE MODEL	LISTED DRIVESHAFTS	Z
JU4R-UFAEA9	CDS10-SC	10, 50
JU4R-UFAEE7, AEF1	CDS20-SC	11. 00


	PUMP SIZ	E														
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF	HF1	HY
4	481	11/A/C	5	3	5	14-1/2	11-1/4	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	11D	5	3	5	14-1/2	12	5	26	12-3/4	1-1/4	88	20	78	39	15-1/2
4	481	15	5	3	5-1/2	14-1/2	13	5-1/2	26	14	1-1/4	88	20	78	39	15-1/2
5	481	15/A	6	4	6-1/4	16	13-1/4	6-1/4	28-1/2	15	1-1/4	88	20	78	39	14
6	481	11	8	4	6-1/4	16	11-3/4	6-1/4	28-1/2	14-1/2	1-1/4	88	21	78	39	14
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	88	21	78	39	12
8	481	12	10	5	8	18	17	9	32	17-3/4	1-1/4	88	24	78	39	12

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.25" ± 0.08 inches vertically above the pump shaft and 0.00" ± 0.08 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine "C" dimension.
- 6. Left-hand (counterclockwise) rotation is not available.
- 7. Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS JU4R-UFAEA9, AEE7, AEF1 EPA NSPS TIER iT4 CERTIFIED



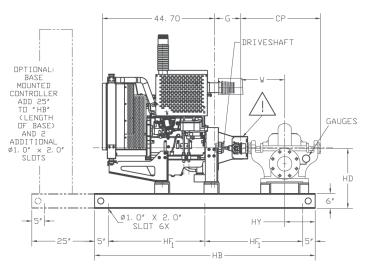

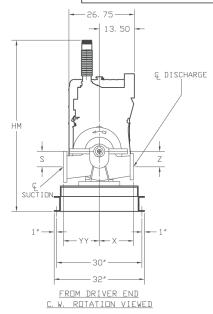

(ÚL) LISTED	DRIVESHAFT	
ENGINE MODEL	DRIVESHAFT MODEL	G
JU4H-UFAEA9	CDS10-SC	10, 50
JU4H-UFAEE7, AEF1	CDS20-SC	11.00

PUMP SIZE		ENGINE														
DISCH	MODEL	CASE BORE	MODEL JU4H-UF	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	HD	HF1	НМ	HY	YY
4	491	11	AEA9	6	-	6-7/8	16-5/8	11-1/4	7-1/8	29-11/16	88	21	39	66-1/4	13-3/8	14
4	491	14	AEA9, AEE7, AEF1	6	-	6-7/8	17-5/8	13	8-3/8	31-11/16	98	20	44	65-1/4	22-3/8	15-1/4
4	492	18	AEA9, AEE7, AEF1	5	-	9-1/2	18-3/8	14	9-1/2	33-1/4	98	22	44	67-1/4	21-5/8	14
4	492	14	AEA9	5	-	7-3/8	18-3/8	13-1/2	7-3/8	33-3/16	88	20	39	65-1/2	11-5/8	14
5	491	14	AEE7, AEF1	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	98	23	44	68-1/4	22-3/8	17-1/4

NOTES


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified.
 Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.25^{\circ} \pm 0.08$ inches vertically above the pump shaft and $0.00^{\circ} \pm 0.08$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JU6H-UFAD-K0, M8, MG, 58, NG, N0, P8, P0, Q0, R0, S0, T0, 88, R8, S8, W8, X8, 98 EPA NSPS TIER 3 CERTIFIED



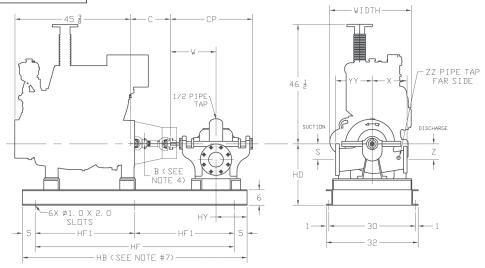


ENGINE MODEL: JU6H-UFAD	С	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION							
K0*,M8, MG, 58, NG, N0, Q0, R0	15 -5/8	CDS30-S1	0.35							
P8,P0,S0,T0,88,R8,S8,W8,X8,98	20 -3/8	CDS50-SC (1760 & 2100 RPM)	0.45							
*For engines with speeds of 1760 & 2100 RPM only. For 2350 RPM use a non-listed driveshaft.										

ſ				В
1	ENGINE MODEL:	С	NON-LISTED DRIVESHAFT**	DRIVESHAFT
	JU6H-UFAD		NON-LISTED DRIVESHAFT	OFFSET DIMENSION
Ì	T0, S0, P0, R0	20 -3/8	SC81A (2350 RPM)	0.45
	**For engines with speeds of 2350	RPM only.	There is no listed driveshaft avai	lable in this HP range.

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Х	Z	СР	YY	ZZ	НВ	HD	HF	HF1	HY
5	481	17	6	4	6-1/4	16	14	5-1/4	28-1/2	15	1-1/4	88	20	78	39	14
6	481	11HH	8	4A	8-5/8	18-1/8	10	8-5/8	32-7/8	15	1-1/4	88	23	78	39	11-7/8
6	481	14HH	8	5A	7-1/2	20-1/2	15	7-1/2	36-3/4	17	1-1/4	98	23	88	44	19-9/16
6	481	15	8	5	6-3/4	18	14-1/4	6-3/4	32	16-3/4	1-1/4	88	21	78	39	12
6	481	18	8	5	8	18	16	8	32	18	1-1/4	88	22	78	39	12
6	481	20	8	5	8	18	15-3/4	8	32	18	1-1/4	88	22	78	39	12
8	481	17B	10	5	8	18	17	8	32	17-3/4	2	88	24	78	39	12
8	481	21	10	6B	9-1/2	21-7/8	18	9-1/2	38	21	2	98	25	88	44	18-1/8
10	481	15	12	6B	13-1/2	21-7/8	17	13-1/2	38	20	1-1/4	98	31	88	44	13-1/8
10	481	18	12	6B	13-1/2	21-7/8	17	13-1/2	38	22	2	98	31	88	44	13-1/8
10	481	18D	12	7A	12-1/4	24-1/4	20	12-1/4	43	24	2	98	31	88	44	15.69

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- 6. Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional \emptyset 1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS JU6H-UFAD-K0, M8, MG, 58, NG, N0, P8, P0, Q0, R0, S0, T0, 88, R8, S8, W8, X8, 98 EPA SNPS TIER 3 CERTIFIED

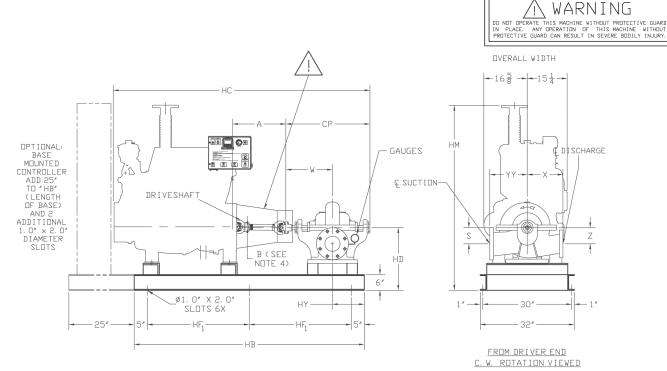

ENGINE MODEL: JU6H-UFAD	А	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION						
K0*, M8, MG, 58, NG, N0, Q0, R0	15 -5/8	CDS30-S1	0.35						
P8,P0,S0,T0,88,R8,S8,W8,X8,98	20 -3/8	CDS50-SC (1760 & 2100 RPM)	0.45						
*For engines with speeds of 1760 & 2100 RPM only. For 2350 RPM use a non-listed driveshaft									

ENGINE MODEL			В
ENGINE MODEL:	۸ ا	NON-LISTED DRIVESHAFT**	DRIVESHAFT
JU6H-UFAD	A	NON-LISTED DRIVESHAFT	OFFSET DIMENSION
T0, S0, P0, R0	20 -3/8	SC81A (2350 RPM)	0.45
**For engines with speeds of 2350	RPM only.	There is no listed driveshaft avail	lable in this HP range.

ONLY SOLD AS PLD IN US & US TERRITORIES

	PUMP SIZE			DOM/ED												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Х	Z	СР	НВ	HC	HD	HF1	НМ	HY	YY
5	491	14	8	-	8-1/4	17-5/8	13-1/2	9-3/4	31-11/16	98	97-7/16	23	44	70	22-3/8	17-1/4
5	491	18	8	-	8-1/8	18-7/8	15	10-5/8	33-3/8	98	99-1/8	23	44	70	21-1/8	18-3/4
6	491	14	10	-	9-3/8	20-1/8	13-3/4	10	35-7/8	98	101-5/8	25	44	72	19-7/8	18
6	491	18	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	98	101-5/8	25	44	72	19-7/8	20
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	98	105	26	44	73	17-3/8	22
6	492	18	8	-	9-5/8	22-1/2	16	9-5/8	40-1/8	98	105-7/8	24	44	71	17-1/2	16
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	98	102-3/8	28	44	75	19-1/2	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	98	107-1/4	28	44	75	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	108	117-1/4	31	49	78	21-3/8	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	108	111-9/16	23	49	70	14-7/16	21

NOTES


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified.
 Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.

ΩΙΙΤΙΩΝ:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.18 inches vertically above the pump shaft and 0.00" \pm 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

TWO-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JU6H-UFAD-K0, M8, MG, 58, NG, N0, P8, P0, Q0, R0, S0, T0, 88, R8, S8, W8, X8, 98 EPA NSPS TIER 3 CERTIFIED



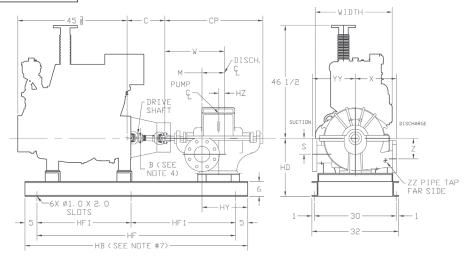

ENGINE MODEL: JU6H-UFAD	С	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION							
K0*, M8, MG, 58, NG, N0, Q0, R0	15 -5/8	CDS30-S1	0.35							
P8,P0,S0,T0,88,R8,S8,W8,X8,98	20 -3/8	CDS50-SC (1760 & 2100 RPM)	0.45							
*For engines with speeds of 1760 & 2100 RPM only. For 2350 RPM use a non-listed driveshaft.										

ENONE MODEL			В
ENGINE MODEL:	С	NON-LISTED DRIVESHAFT**	DRIVESHAFT
JU6H-UFAD		NON-LISTED DRIVESHAFT	OFFSET DIMENSION
T0, S0, P0, R0	20 -3/8	SC81A (2350 RPM)	0.45
**For engines with speeds of 2350	RPM only.	There is no listed driveshaft avail	able in this HP range.


ONLY SOLD AS PLD IN US AND US TERRITORIES

	PUMP SIZE			POWER													
DISCH	MODEL	CASE BORE	SUCTION	SERIES	M	S	W	X	Z	CP	HZ	ZZ	YY	НВ	HD	HF1	HY
6	485	16	8	5	10-1/2	8-1/4	26-5/8	19	7-3/4	37-7/8	2-5/8	N/A	17	98	23	44	26-7/8
6	485	17	8	5	11	7	24-1/2	16	9	38	3-1/2	1-1/4	16-1/2	98	22	44	26-1/2

- All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

TWO-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JU6H-UFAD-K0, M8, MG, 58, NG, N0, P8, P0, Q0, R0, S0, T0, 88, R8, S8, W8, X8, 98 EPA NSPS TIER 3 CERTIFIED



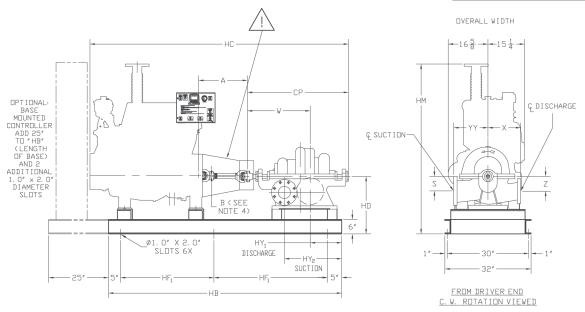

ENGINE MODEL: JU6H-UFAD	А	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION						
K0*, M8, MG, 58, NG, N0, Q0, R0	15 -5/8	CDS30-S1	0.35						
P8,P0,S0,T0,88,R8,S8,W8,X8,98	20 -3/8	CDS50-SC (1760 & 2100 RPM)	0.45						
*For engines with speeds of 1760 & 2100 RPM only. For 2350 RPM use a non-listed driveshaft.									

			В								
ENGINE MODEL:	A	NON-LISTED DRIVESHAFT**	DRIVESHAFT								
JU6H-UFAD	^	NON-LISTED DRIVESHAFT	OFFSET DIMENSION								
T0, S0, P0, R0	20 -3/8	SC81A (2350 RPM)	0.45								
**For engines with speeds of 2350 RPM only. There is no listed driveshaft available in this HP range.											

^{*}ONLY SOLD AS PLD IN US & US TERRITORIES

PUMP SIZE			POWER														
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	СР	НВ	HC	HD	HF1	HM	YY	HY1	HY2
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	108	118-1/4	25	49	72	16-1/2	18-3/8	31-3/8

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.

CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.18 inches vertically above the pump shaft and 0.00" \pm 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JW6H-UFADB0, UFADD0, UFADF0, UFADJ0, UFAD70, UFAD80 EPA NSPS TIER 3 CERTIFIED



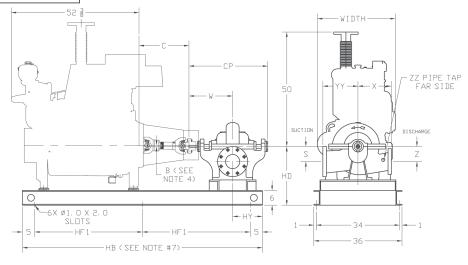

ENGINE MODEL: JW6H-UFAD	С	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION		
B0, D0, F0, J0, 70	20.38	CDS50-SC	0.45		
80	20.38	CDS50-SC (2100 RPM ONLY)	0.45		
*For engine with speed of	2100 RPM	only. For 1760 RPM use a non-list	ted driveshaft.		


ENGINE HODE			В								
ENGINE MODEL:	С	NON-LISTED DRIVESHAFT**	DRIVESHAFT								
JW6H-UFAD		NON-LISTED DRIVESHAFT	OFFSET DIMENSION								
80	20 -3/8	SC81A (1760 RPM)	0.45								
**For engine with speed of 1760 RPM only. There is no listed driveshaft available in this HP range.											

PUMP SIZE				DOMED											
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY
6	481	20	8	5	8	18	15.75	8	32	18	1.25	98	24	44	12
8	481	17	10	5	8	18	17	8	32	17.75	2	98	24	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	2	108	25	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	32	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	32	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	108	31	49	15.75

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- 6. Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional \emptyset 1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JW6H-UFADB0, UFADD0, UFADF0, UFADJ0, UFAD70, UFAD80 EPA NSPS TIER 3 CERTIFIED



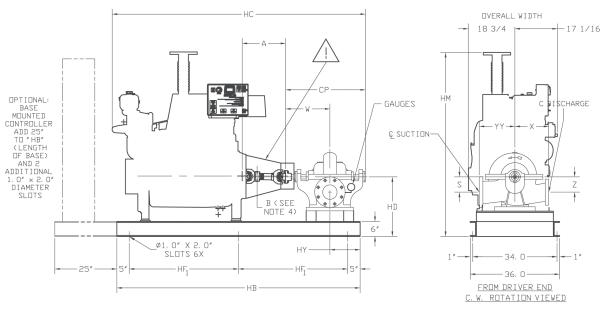

ENGINE MODEL: JU6H-UFAD	А	UL LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION			
B0, D0, F0, J0, 70	20 -3/8	CDS50-SC	0.45			
80	20 -3/8	CDS50-SC (2100 RPM ONLY)	0.45			
*For engine with speed of 2100 RPM only. For 1760 RPM use a non-listed driveshaft.						

ENGINE MODEL: JW6H-UFAD	А	NON-LISTED DRIVESHAFT**	B DRIVESHAFT OFFSET DIMENSION			
80	20 -3/8	SC81A (1760 RPM)	0.45			
**For engine with speed of 1760 RPM only. There is no listed driveshaft available in this HP range.						

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	CP	НВ	HC	HD	HF	HM	HY	YY
6	491	18C	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	108	105-3/4	26	49	76-3/8	19-7/8	20
6	491	19A	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	109-1/8	25	49	75-3/8	17-3/8	22
8	491	14A	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	108	106-1/2	28	49	78-3/8	19-1/2	22
8	491	18A	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	111-3/8	28	49	78-3/8	16-1/4	22
8	481	24	12	-	13-1/2	28-5/8	20	15	51-1/2	118	121-3/8	31	54	81-3/8	21-3/8	25
10	491	20	16	-	13	25-9/16	23	14-1/4	44-9/16	118	114-7/16	32	54	82-3/8	24-7/16	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	108	115-11/16	29	49	79-3/8	17-7/16	21

NOTES

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.18 inches vertically above the pump shaft and 0.00" \pm 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JX6H-UFADF0, UFADK0, UFADN0, UFADP0, UFAD60, UFAD88 EPA NSPS TIER 3 CERTIFIED



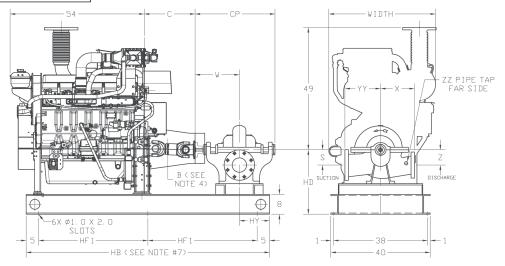

ENGINE MODEL	С	WIDTH	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION				
All Tier 3 JX Models	NA	NA	NA	NA				
*There are no listed driveshafts for these engines in their HP range.								


				В				
ENGINE MODEL	С	WIDTH	NON-LISTED DRIVESHAFT**	DRIVESHAFT				
ENGINE WODEL		WIDIN	NON-LISTED DRIVESHAFT**	OFFSET DIMENSION				
JX6H-UFADF0, 60, K0,	20 -1/2	41-3/4	SC2160A	0.45				
N0, P0, 88 20 -1/2 41-3/4 302100A 0.43								
**For all Tier 3 JX6H Models. There is no listed driveshaft available in this HP range.								

	PUMP SIZE			POWER											
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	34	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	33	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	108	33	49	15.75

NOTES:

- All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JX6H-UFADF0, UFADK0, UFADN0, UFADP0, UFAD60, UFAD88 EPA NSPS TIER 3 CERTIFIED

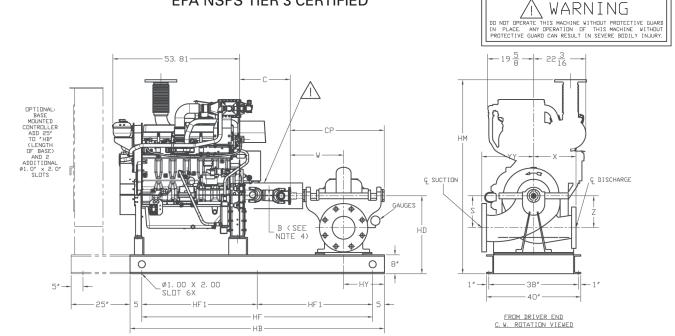

ENGINE MODEL	С	WIDTH	NON-LISTED DRIVESHAFT**	B DRIVESHAFT OFFSET DIMENSION
JX6H-UFADFO,K0,N0, PO,60,88	20 -1/2	41-3/4	SC2160A	0.45
**For all Tion 2. I	VCH Mad	olo Thoroid	and listed drivesbaft available in t	hia UD ranga

ENGINE MODEL	С	WIDTH	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION			
All Tier 3 JX Models	NA	NA	NA	NA			
*There are no listed driveshafts available for these engines.							

	PUMP SIZE			POW-												
DISCH	MODEL	CASE BORE	SUCTION	ER SERIES	S	W	Χ	Z	CP	НВ	HD	HF	HF1	НМ	HY	YY
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	28	98	49	76-7/8	16-5/8	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	30	98	49	78-7/8	16-1/4	22
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	118	31	108	54	79-7/8	24-7/16	21

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.18 inches vertically above the pump shaft and 0.00" \pm 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 485 PUMPS

TWO-STAGE FIRE PUMPS
CLARKE DIESEL ENGINE DRIVE
JX6H-UFADF0, UFADK0, UFADN0, UFADP0,
UFAD60, UFAD88
EPA NSPS TIER 3 CERTIFIED



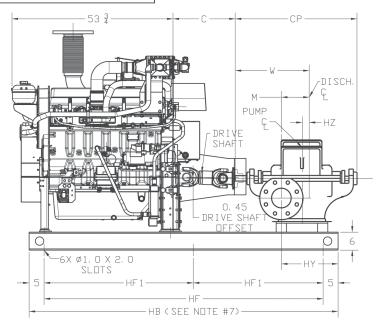

41 3
49 YY X
SUCTION
HD
ZZ PIPE TAP
1 - 38 - 1
40

ENGINE MODEL	С	WIDTH	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION				
All Tier 3 JX Models	NA	NA	NA	NA				
*There are no listed driveshafts for these engines in their HP range.								

ENGINE MODEL	С	NON-LISTED DRIVESHAFT**						
JX6H-UFADF0, 60, K0, N0, P0, 88	20 -1/2	SC2160A						
**For all Tier 3 JX6H Models. There is no listed driveshaft available.								

	PUMP SIZE			POWER													
DISCH	MODEL	CASE BORE	SUCTION	SERIES	М	S	W	Χ	Z	СР	HZ	ZZ	YY	НВ	HD	HF1	HY
6	485	16	8	5	10-1/2	8-1/4	26-5/8	19	7-3/4	37-7/8	2-5/8	N/A	17	108	26	49	26-7/8


NOTES:

- All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.15 inches vertically above the pump shaft and 0.00" ± 0.15 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JW6H-UFAAM8, UFAA80 EPA NSPS TIER 3 CERTIFIED



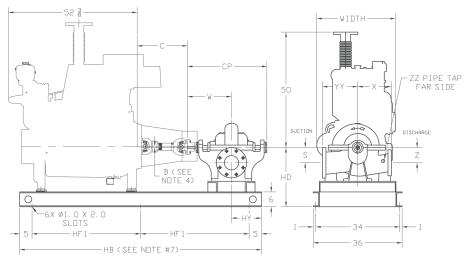

ENGINE MODEL: JW6H-UF	С	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION
AAM8	20.38	CDS50-SC	0.45
AA80	20.38	CDS50-SC (2100 RPM ONLY)	0.45
*For engine with speed of	2100 RPM	only. For 1760 RPM use a non-lis	ted driveshaft.

	ENGINE MODEL: JW6H-UF	С	NON-LISTED DRIVESHAFT**	B DRIVESHAFT OFFSET DIMENSION					
	AA80	20 -3/8	SC81A (1760 RPM)	0.45					
Γ	**For engine with speed of 1760 RPM only. There is no listed driveshaft available in this HP range.								

	PUMP SIZE			POWER											
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	СР	YY	ZZ	НВ	HD	HF1	HY
8	481	17	10	5	8	18	17	8	32	17-3/4	2	98	24	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	2	108	25	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	32	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	32	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	108	31	49	15.75


NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" ± 0.10 inches vertically above the pump shaft and 0.00" ± 0.10 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE JW6H-UFAAM8, -UFAA80 CERTIFIED (EXPORT ONLY)



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

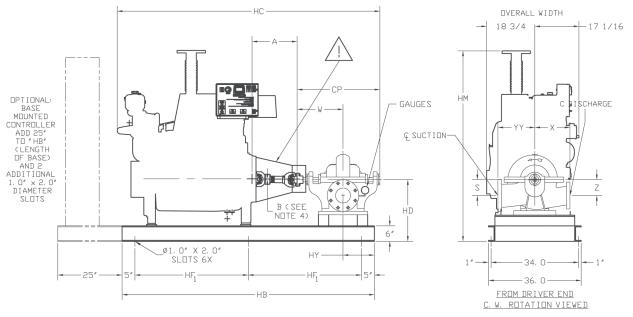

ENGINE MODEL: JU6H-UF	Α	LISTED DRIVESHAFT*	B DRIVESHAFT OFFSET DIMENSION					
AAM8	20 -3/8	CDS50-SC	0.45					
AA80	20 -3/8	CDS50-SC (2100 RPM ONLY)	0.45					
*For engine with speed of 2	*For engine with speed of 2100 RPM only. For 1760 RPM use a non-listed driveshaft.							

ENGINE MODEL: JW6H-UF	А	NON-LISTED DRIVESHAFT**	B DRIVESHAFT OFFSET DIMENSION
AA80	20 -3/8	SC81A (1760 RPM)	0.45
**For engine with speed of 1760	RPM only.	There is no listed driveshaft availa	able in this HP range.

	PUMP SIZE			DOMED												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	НВ	HC	HD	HF	HM	HY	YY
6	491	18C	10	-	9-3/8	20-1/8	16	11-3/4	35-7/8	108	105-3/4	26	49	76-3/8	19-7/8	20
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	109-1/8	25	49	75-3/8	17-3/8	22
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	108	106-1/2	28	49	78-3/8	19-1/2	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	111-3/8	28	49	78-3/8	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	118	121-3/8	31	54	81-3/8	21-3/8	25
10	491	20	16	-	13	25-9/16	23	14-1/4	44-9/16	118	114-7/16	32	54	82-3/8	24-7/16	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	108	115-11/16	29	49	79-3/8	14-7/16	21

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" \pm 0.18 inches vertically above the pump shaft and 0.00" \pm 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DP6H-UFAA50 AND UFAA62 CERTIFIED (EXPORT ONLY)



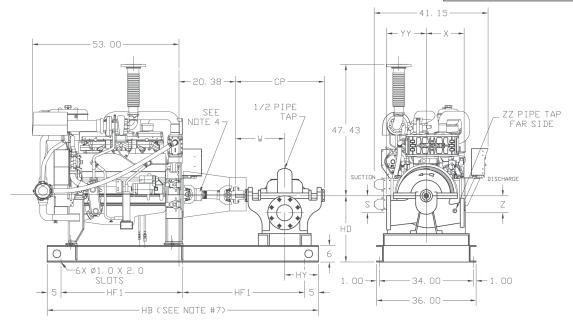

ENGINE MODEL: DP6H-UFAA	LISTED DRIVESHAFT*
50	CDS50-SC
*For engine with speed of 14	70 to 2100 RPM only.

ENGINE MODEL: DP6H-UFAA	NON-LISTED DRIVESHAFT**
50, 62	SC81A (2600 RPM)
**For engine with speed of gre	ater than 2100 RPM only.


	PUMP SIZE			POWER											
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	CP	YY	ZZ	HB	HD	HF1	HY
6	481	14HH	8	5A	7.5	20.44	15	7.5	36.75	17	1.25	108	24	49	19.56
6	481	20	8	5	8	18	15.75	8	32	18	1.25	98	24	44	12
8	481	17	10	5	8	18	17	8	32	17.75	1.25	98	24	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	1.25	108	25	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	32	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	1.25	108	31	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	1.25	108	31	49	15.75

NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- ${\it 4.} \quad {\it Pump suction and discharge flanges are ANSI Standard flat face.}$
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DP6H-UFAA50 AND UFAA62 CERTIFIED (EXPORT ONLY)



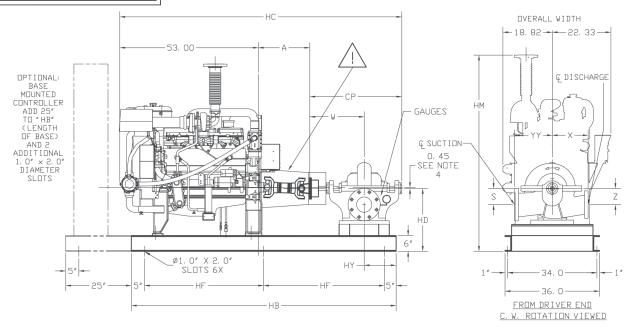

ENGINE M DP6H-UF		А	UL LISTED DRIVESHAFT*								
AA50, A	A62	20 -3/8	CDS50-SC								
*For	*For engine with speed of 1760 & 2100 RPM only.										

ENGINE MODEL: DP6H-UF	А	NON-LISTED DRIVESHAFT*							
AA50, AA62	20 -3/8	SC81A							
*For 2350 RPM use a non-listed driveshaft.									

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Х	Z	СР	HB	HC	HD	HF	НМ	HY	YY
6	491	19A	10	-	9-3/8	20-5/8	18	12-1/8	39-1/4	108	112-5/8	25	49	72-7/16	17-3/8	22
8	491	14A	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	108	110	28	49	75-7/16	19-1/2	22
8	491	18A	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	114-7/8	28	49	75-7/16	16-1/4	22

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45" \pm 0.11$ inches vertically above the pump shaft and $0.00" \pm 0.11$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 485 PUMPS

MULTI-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DP6H-UFAA50 AND UFAA62 CERTIFIED (EXPORT ONLY)



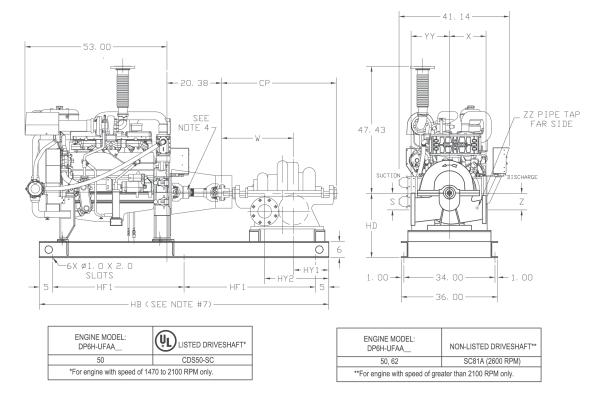


	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY1	HY2
6	485	16	8	5	8.25	23.63	19	7.75	37.88	17	1.25	108	24	49	16.38	26.88
6	485	17	8	5	7	24.5	16	9	38	16.5	1.25	108	24	49	15.5	26.5

NOTES

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

MULTI-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DP6H-UFAA50 AND UFAA62 CERTIFIED (EXPORT ONLY)



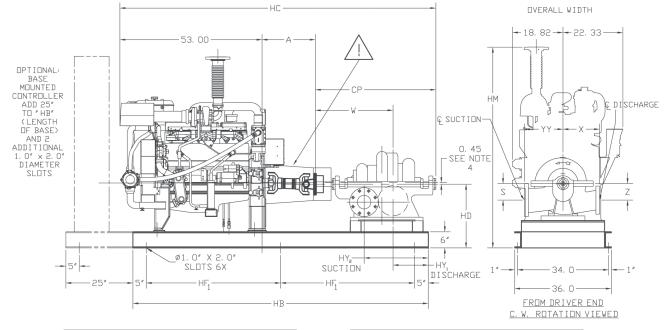

ENGINE MODEL: DP6H-UF	А	LISTED DRIVESHAFT*
AA50, AA62	20 -3/8	CDS50-SC
*For engine with spe	ed of 1760	& 2100 RPM only.

ENGINE MODEL: DP6H-UF	А	NON-LISTED DRIVESHAFT*
AA50, AA62	20 -3/8	SC81A
*For 2350 RPM (use a non-li	sted driveshaft.

	PUMP SIZE		SUC-	POWER													
DISCH	MODEL	CASE BORE	TION	SERIES	S	W	Χ	Z	СР	НВ	HC	HD	HF1	HM	YY	HY1	HY2
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	118	125-7/8	25	54	72-7/16	16-1/2	18-3/8	31-3/8

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45" \pm 0.11$ inches vertically above the pump shaft and $0.00" \pm 0.11$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DQ6H-UFAA48, UFAA4G, UFAA50, UFAA60, UFAA88, UFAA98 CERTIFIED (EXPORT ONLY)



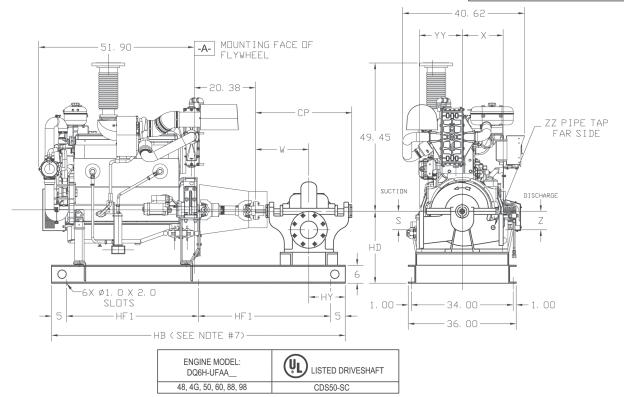


	PUMP SIZE			POWER											
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	CP	YY	ZZ	НВ	HD	HF1	HY
6	481	20	8	5	8	18	15.75	8	32	18	1.25	98	24	44	12
8	481	17	10	5	8	18	17	8	32	17.75	1.25	98	24	44	12
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	1.25	108	25	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	32	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	1.25	108	31	49	18.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	1.25	108	31	49	15.75

NOTES

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DQ6H-UFAA48, UFAA4G, UFAA50, UFAA60, UFAA88, UFAA98 CERTIFIED (EXPORT ONLY)



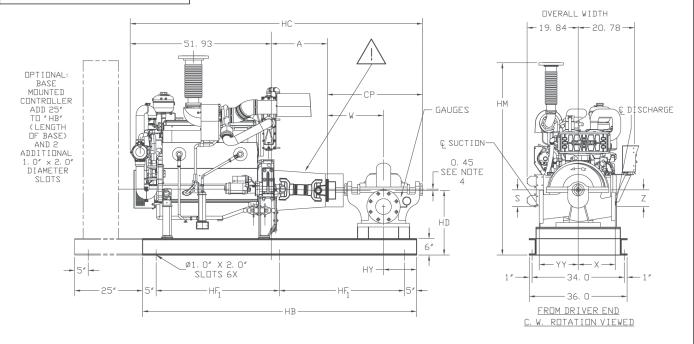

ENGINE MODEL: DQ6H-UF	А	UL LISTED DRIVESHAFT
AA48, 4G, 50, 60, 88, 98	20 -3/8	CDS50-SC

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	СР	НВ	HC	HD	HF	HM	HY	YY
6	491	18C	10	_	9-3/8	20-5/8	16	11-3/4	35-7/8	108	107-1/4	26	49	75-7/16	19-7/8	20
6	491	19A	10	_	9-3/8	22-5/8	18	12-1/8	39-1/4	108	111-1/2	25	49	74-7/16	17-3/8	22
8	491	18A	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	113-3/4	28	49	77-7/16	16-1/4	22
8	481	24	12	_	13-1/2	28-5/8	20	15	51-1/2	118	123-3/4	31	54	80-7/16	21-3/8	25
10	491	20A	16	_	13	25.56	23	14-1/4	44-9/16	118	116-7/8	32	54	81-7/16	24-7/16	25

NOTES:


- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45" \pm 0.11$ inches vertically above the pump shaft and $0.00" \pm 0.11$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 485 PUMPS

MULTI-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DQ6H-UFAA48, UFAA4G, UFAA50, UFAA60, UFAA88, UFAA98 CERTIFIED (EXPORT ONLY)



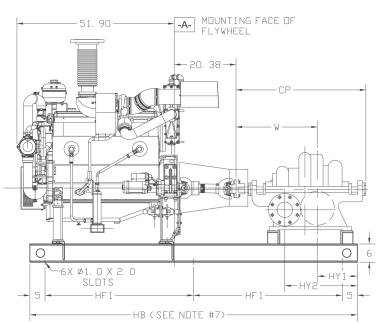

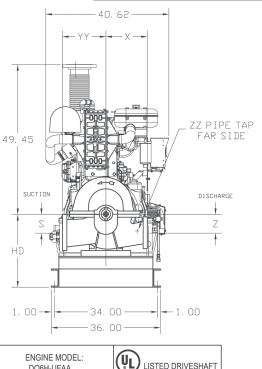

ENGINE MODEL: DQ6H-UFAA	LISTED DRIVESHAFT
48, 4G, 50, 60, 88, 98	CDS50-SC


	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY1	HY2
6	485	16	8	5	8.25	23.63	19	7.75	37.88	17	1.25	108	24	49	16.38	26.88
6	485	17	8	5	7	24.5	16	9	38	16.5	1.25	108	24	49	15.5	26.5

NOTES

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.11 inches vertically above the pump shaft and 0.00" ± 0.11 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

MULTI-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DQ6H-UFAA48, UFAA4G, UFAA50, UFAA60, UFAA88, UFAA98 CERTIFIED (EXPORT ONLY)



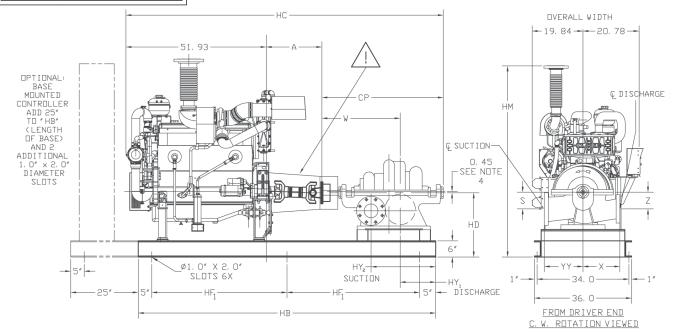

ENGINE MODEL: DQ6H-UF	А	LISTED DRIVESHAFT
AA48, 4G, 60, 88, 98	20 -3/8	CDS50-SC

	PUMP SIZE			POWER													
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	СР	HB	HC	HD	HF	HM	YY	HY1	HY2
6	495	17	8	-	10-1/2	31-5/8	16-1/2	10-1/2	52-1/2	118	124-13/16	25	54	74-7/16	16-1/2	18-3/8	31-3/8

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45" \pm 0.11$ inches vertically above the pump shaft and $0.00" \pm 0.11$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DR8H-UFAA40, UFAA5G, UFAA68, UFAA62 CERTIFIED (EXPORT ONLY)



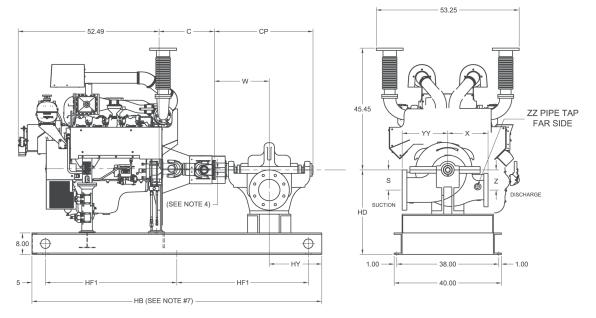

ENGINE MODEL	С	NON-LISTED DRIVESHAFT**
ALL DR MODELS	20.63	SC2160A
**For all DR8H Model	s. There	e is no listed driveshaft available in this HP range.

ENGINE MODEL	С	UL LISTED DRIVESHAFT*
All DR Models	NA	NA
*There are no listed d	riveshaf	ts for these engines in their HP range.


	PUMP SIZE			DOM/ED											
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Х	Z	СР	YY	ZZ	НВ	HD	HF1	HY
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	1.25	108	32	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	34	54	24.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	108	33	49	18.13
10	481	18D	12	7A	12.25	24.25	20.5	12.25	43	24	2	108	33	49	15.75
12	481	18	14	7	15	25.25	18	15	43.88	23	1.25	118	35	54	24.75

NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.15 inches vertically above the pump shaft and 0.00" ± 0.15 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DR8H-UFAA40, UFAA5G, UFAA68, UFAA62 CERTIFIED (EXPORT ONLY)



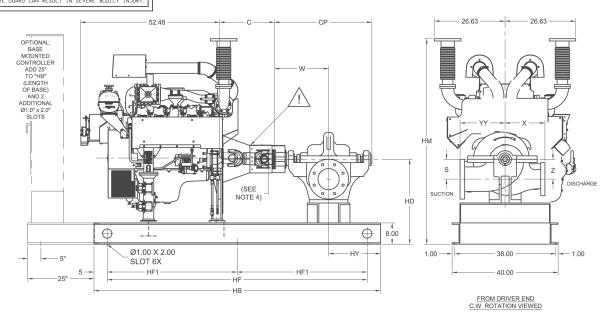

	ENGINE MODEL	С	NON-LISTED DRIVESHAFT**	DRIVESHAFT OFFSET DIMENSION						
	DR8H-UFAA40, 5G, 68, 62	20.63	SC2160A	0.45						
**For all DR Models. There is no listed driveshaft available in this HP range.										

ENGINE MODEL	С	LISTED DRIVESHAFT*	DRIVESHAFT OFFSET DIMENSION							
All DR Models	NA	NA	NA							
*There are no listed driveshafts available for these engines.										

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	CP	НВ	HD	HF	HF1	HM	HY	YY
6	491	19	10	-	9-3/8	22-5/8	18	12-1/8	39-1/4	108	32	98	49	77-7/16	17-3/8	22
8	491	14	12	-	10-3/4	20-1/2	16	10-3/4	36-5/8	108	32	98	49	77-7/16	19-1/2	22
8	491	18	12	-	10-3/4	23-3/4	16	12-1/2	41-1/2	108	32	98	49	77-7/16	16-1/4	22
8	481	24	12	7	13-1/2	28-5/8	20	15	51-1/2	118	33	108	54	78-7/16	21-3/8	25
10	491	20	16	-	13	25-9/16	23	14-1/4	44-9/16	118	35	108	54	80-7/16	24-7/16	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	118	32	108	54	77-7/16	24-7/16	21

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


-ΔΙΙΤΙΩΝ-


The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of $0.45" \pm 0.15$ inches vertically above the pump shaft and $0.00" \pm 0.15$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 485 PUMPS

TWO-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DR8H-UFAA40, UFAA5G, UFAA68, UFAA62 CERTIFIED (EXPORT ONLY)



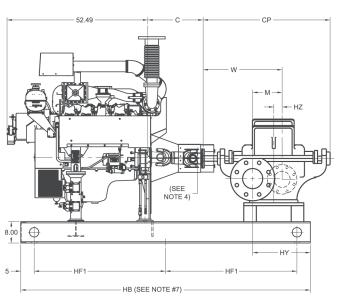

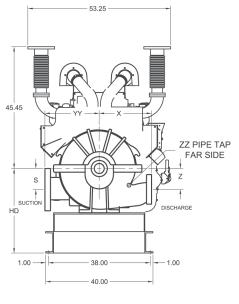

ENGINE MODEL	С	NON-LISTED DRIVESHAFT**							
ALL DR MODELS	20.63	SC2160A							
**For all DR8H Models. There is no listed driveshaft available in this HP range.									

ENGINE MODEL	С	LISTED DRIVESHAFT*							
All DR Models	NA	NA							
*There are no listed driveshafts for these engines in their HP range.									

	PUMP SIZE DISCH MODEL CASE			POWER													
DISCH	MODEL	CASE BORE	SUCTION	SERIES	М	S	W	X	Z	СР	HZ	ZZ	YY	НВ	HD	HF1	HY
6	485	16	8	5	10.5	8.25	26.63	19	7.75	37.88	2.63	N/A	17	108	32	49	26.88


NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.15 inches vertically above the pump shaft and 0.00" ± 0.15 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 25" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

AURORA® 481 PUMPS

SINGLE-STAGE FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DS0H-UFAA60, UFAA68, UFAAN0 CERTIFIED (EXPORT ONLY)



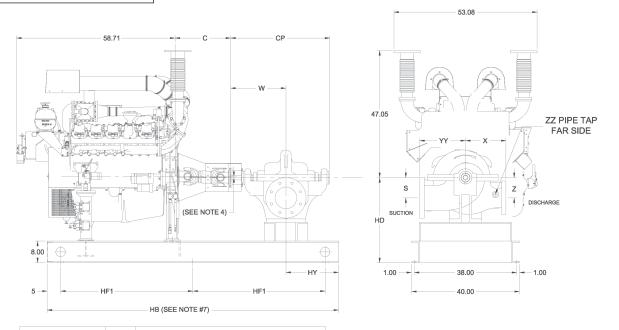

	ENGINE MODEL	С	NON-LISTED DRIVESHAFT**						
	ALL DS MODELS	20.63	SC2160A						
**For all DS0H Models. There is no listed driveshaft available in this HP range.									

ENGINE MODEL	С	UL LISTED DRIVESHAFT*						
All DS Models	NA	NA						
*There are no listed driveshafts for these engines in their HP range.								


	PUMP SIZE			POWER											
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	X	Z	СР	YY	ZZ	НВ	HD	HF1	HY
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	2	108	32	49	18.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	118	34	54	24.75
10	481	18D	12	7A	12.25	24.25	20.5	12.25	43	24	2	108	33	49	15.75


NOTES:

- All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Caution: The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of .45" ± 0.15 inches vertically above the pump shaft and 0.00" ± 0.15 inch parallel offset horizontally right or left of the pump shaft. Refer to the Certified Driveshaft Instructions Manual for alignment instructions.
- 4. Pump suction and discharge flanges are ANSI Standard flat face.
- 5. Left-hand (counterclockwise) rotation is not available.
- Optional: base mounted controller (not shown) add 30" to "HB" (length of base) and 2 additional ø1.00 x 2.00 slots.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DS0H-UFAA60, UFAA68, UFAAN0 CERTIFIED (EXPORT ONLY)



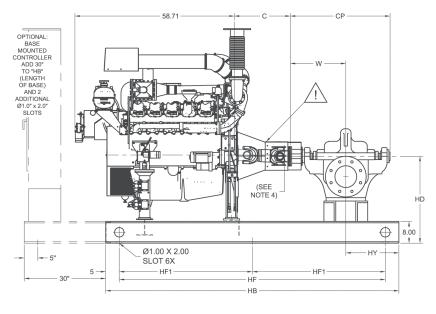

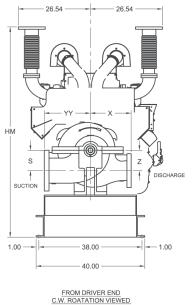

ENGINE MODEL	С	NON-LISTED DRIVESHAFT**	DRIVESHAFT OFFSET DIMENSION								
DS0H-UFAAN0, 68, 60	20 5/8	SC2160A	0.45								
**For all DS Models. There is no listed driveshaft available in this HP range.											

ENGINE MODEL	С	LISTED DRIVESHAFT*	DRIVESHAFT OFFSET DIMENSION									
All DS Models	NA	NA	NA									
*There are no listed driveshafts available for these engines.												

	PUMP SIZE			POWER												
DISCH	MODEL	CASE BORE	SUCTION	SERIES	S	W	Χ	Z	СР	НВ	HD	HF	HF1	HM	HY	YY
10	491	20	16	-	13	25-9/16	23	14-1/4	44-9/16	118	35	108	54	82-1/16	24-7/16	25
10	492	18	12	-	11-1/2	25-9/16	21	11-1/2	45-13/16	118	32	108	54	79-1/16	24-7/16	21

NOTES

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified. Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of 0.45" \pm 0.15 inches vertically above the pump shaft and 0.00" \pm 0.15 inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

SINGLE-STAGE HSC FIRE PUMPS CLARKE DIESEL ENGINE DRIVE DT2H-UFAA60, UFAA92, UFAA98 CERTIFIED (EXPORT ONLY)



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

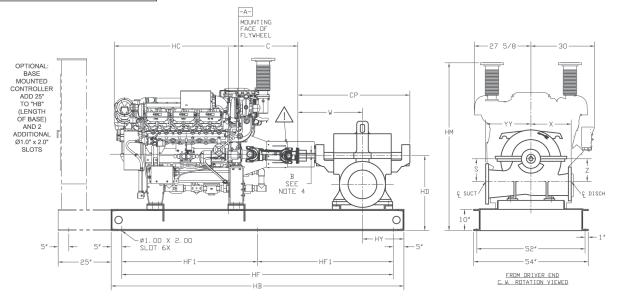

	NON	- LISTED DRIVESHAFTS	
ENGINE MODEL	С	DRIVESHAFT MODEL *	"B" DRIVESHAFT OFFSET DIMENSION
DT2H-UFAA60	20.62	SC2160A	0.45
DT2H-UFAA92 DT2H-UFAA98	27.88	SC2390	0.65

^{*}There are no listed driveshafts for these engine models at this time.

	PUMP SIZI	E	ENGINE		DOM/ED													
DISCH	MODEL	CASE BORE	MODEL DT2H	SUCTION	POWER SERIES	S	W	Χ	Z	СР	НВ	HC	HD	HF	HF1	НМ	HY	YY
10	492	18	UFAA60	12	-	10	25-9/16	21	17-1/2	45-13/16	128	58-7/8	34	118	59	80	24-7/16	21
10	492	18	UFAA92, 98	12	-	10	25-9/16	21	17-1/2	45-13/16	138	58-7/8	34	128	64	80	24-7/16	21
10	491	20	URAA60	16	-	13	25-9/16	23	14-1/4	44-9/16	128	58-7/8	37	118	59	83	24-7/16	25
10	491	20	UFAA92, 98	16	-	13	25-9/16	23	14-1/4	44-9/16	138	58-7/8	37	128	64	83	24-7/16	25

NOTES:

- Flange ratings are either 125# or 250#. Reducers and/or increasers may be required to meet NFPA Pamphlet 20, Table 2-19.
- Not for construction, installation or application puposes unless certified.
 Dimensions shown are typical and may vary due to various tolerances.
- 3. All bases are required to be completely filled with grout.
- 4. Unit installation and final driveshaft alignment must be done by the installing contractor.


CAUTION:

The driveshaft is designed to operate at a 2° angle with the input and output shafts in parallel. The engine crankshaft is to be set with a parallel offset of "B" $\pm\,0.15$ inches vertically above the pump shaft and 0.00" $\pm\,0.15$ inch parallel offset horizontally right or left of the pump shaft. Refer to the certified driveshaft instructions manual for alignment instructions.

AURORA® 480/490 FIRE PUMPS

SINGLE-STAGE FIRE PUMP **CUMMINS CFP5E DIESEL ENGINE DRIVE**



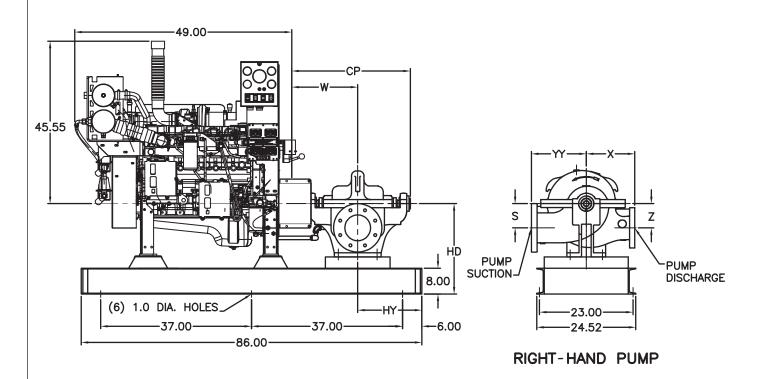

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HY	HD
4	481	11/A/C	5	3	5	14.5	11.25	5	26	12.75	1.25	24.75	25.19
4	481	11D	5	3	5	14.5	12	5	26	12.75	1.25	24.75	25.19
4	491	11	6	-	6.88	16.63	11.25	7.13	29.69	14	0.75	22.62	25.19
4	491	14C	6	-	6.88	17.63	13	8.38	31.69	15.25	0.75	21.62	25.19
4	481	15	5	3	5.5	14.5	13	5.5	26	14	1.25	24.75	25.19
4	492	18	5	-	9.5	18.38	14	9.5	33.25	14	0.75	21	25.19
5	481	15	6	4	6.25	16	13.25	6.25	28.5	15	1.25	23.25	25.19
5	481	17	6	4	6.25	16	14	6.25	28.5	15	1.25	23.25	25.19
6	481	11	8	4	6.25	16	11.75	6.25	28.5	14.5	1.25	23.25	25.19
6	481	11HH*	8	4A	8.63	18.13	10	8.63	33.88	15	1.25	21.13	28.19
6	481	14HH*	8	5A	7.5	20.5	15	7.5	36.75	17	1.25	18	28.19
6	491	14	10	-	9.38	20.13	13.25	10	35.88	18	1	19.14	28.19
6	481	15	8	5	6.75	18	14.25	6.75	32	16.75	1.25	21.25	25.19
6	481	18	8	5	8	18	16	8	32	18	1.25	21.25	25.19
6	481	20	8	5	8	18	15.75	8	32	18	1.25	21.25	25.19
8	481	12	10	5	8	18	17	9	32	17.75	1.25	21.25	25.19
8	481	17B	10	5	8	18	17	8	32	17.75	1.25	21.25	25.19

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- Suction and discharge flanges are ANSI Standard flat face. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.

- The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- Pump sizes 6–481–11HH and 14HH are furnished as standard with 125# suction flange and 250# discharge flange.




AURORA® 481 FIRE PUMPS

SINGLE-STAGE FIRE PUMP CUMMINS CFP7E DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

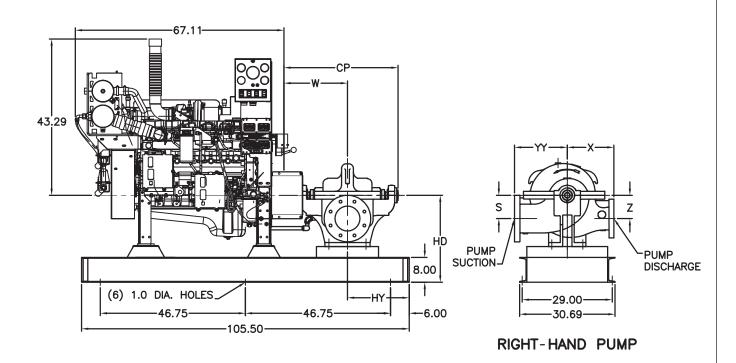

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HY	HD
5	481	17	6	4	6.25	16	14	6.25	28.5	15	1.25	22.19	27.75
6	481	14HH*	8	5A	7.5	20.5	15	7.5	36.75	17	1.25	17.75	27.75
6	481	15	8	5	6.75	18	14.25	6.75	32	16.75	1.25	20.19	27.75
6	481	18	8	5	8	18	16	8	32	18	1.25	20.19	27.75
6	481	20	8	5	8	18	15.75	8	32	18	1.25	20.19	27.75
8	481	17B	10	5	8	18	17	8	32	17.75	2	20.19	27.75
8	481	21/A	10	6B	9.5	21.88	18	9.5	38	21	2	16.31	31.75
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	12.94	36.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	16.31	36.75
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	13.94	36.75
12	481	18A	14	7	15	25.25	18	15	43.88	23	2	12.94	36.75


NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® MODEL 485 TWO-STAGE FIRE PUMPS CUMMINS CFP7E DIESEL ENGINES

DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

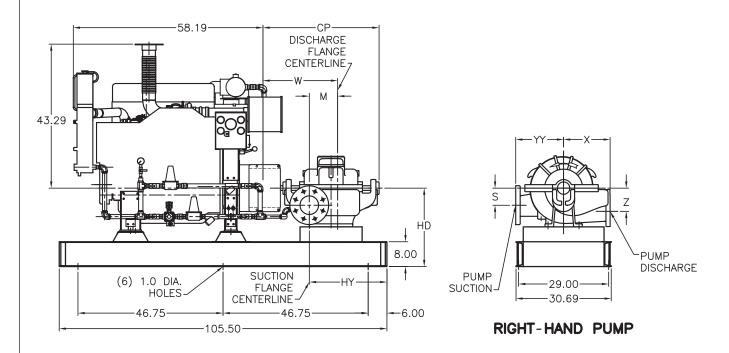

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	М	W	Χ	Z	СР	YY	ZZ	HD	HY
6	485	12	6	5A	8	7.5	22.88	13	8	31	13.5	1.25	27.75	23.06
6	485	16	8	5	8.25	10.5	23.63	19	7.25	37.88	17	1.25	27.75	25.06
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	27.75	24.69

NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.


6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® 490 FIRE PUMPS

SINGLE-STAGE FIRE PUMP **CUMMINS CFP7E DIESEL ENGINE DRIVE**



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

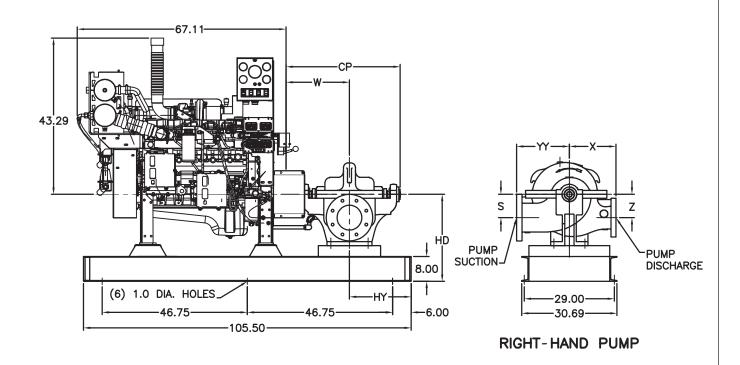

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HY	HD
4	491	14C	6	-	6.88	17.63	13	8.38	31.69	15.25	0.75	20.56	27.75
5	491	14A	8	-	8.25	17.63	13.5	9.75	31.69	17.25	1	20.56	27.75
5	491	18A	8	-	8.13	18.88	15	10.63	33.38	18.75	1	19.31	27.75
6	491	14A/C	10	-	9.38	20.13	13.25	10	35.88	18	1	18.06	31.75
6	491	18C	10	-	9.38	20.13	16	11.75	35.88	20	1	18.06	31.75
6	491	19A	10	-	9.38	22.63	18	12.13	39.25	22	1	15.56	31.75
8	491	14A	12	-	10.75	20.13	16	10.75	36.63	22	1	17.69	31.75
10	491	20*	16	-	13	25.69	23	14.25	44.56	25	1	12.63	36.75


- All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
 Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- Left hand (counterclockwise) rotation is not available.

- 6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 \pm 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- Pump size 10-491-20 is furnished as standard with 125# suction flange and 250# discharge flange.

AURORA® MODELS 481, 491 **AND 492 PUMPS**

SINGLE-STAGE FIRE PUMP **CUMMINS CFP9E DIESEL ENGINE DRIVE**



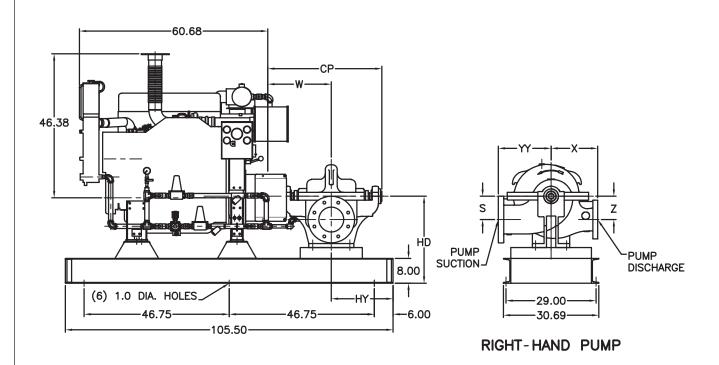

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HD	HY
5	491	14A	8	-	8.25	17.63	13.5	9.75	31.69	17.25	1	27.81	12.38
5	491	18A	8	-	8.13	18.88	15	10.63	31.38	18.75	1	27.81	11.13
6	491	14A	10	-	9.38	20.13	13.25	10	31.38	18.75	1	31.81	24.38
6	491	18C	10	-	9.38	20.13	16	11.75	35.88	20	1	31.81	24.38
6	491	19A	10	-	9.38	22.63	18	12.13	35.88	18	1	31.81	21.88
6	481	20	8	5	8	18	15.75	8	32	18	1.25	27.81	12
8	491	14A	12	-	10.75	20.5	16	10.75	36.63	22	1	31.81	24
8	481	17B	10	5	8	18	17	8	32	17.75	1.25	27.81	12
8	491	18A	12	-	10.75	23.75	16	12.5	41.5	22	1	31.81	20.75
8	481	21/A	10	6B	9.5	21.88	18	9.5	38	21	1.25	27.81	22.63
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	36.81	19.25
10	481	15C	12	6B	13.5	21.88	18	13.5	38	20	1.25	36.81	22.63
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	1.25	36.81	22.63
10	492	18	12	-	11.5	25.56	21	11.5	45.81	21	1	31.81	18.94
10	481	18D	12	7A	12.25	24.31	20	12.25	43	24	1.25	36.81	20.25
10	491	20*	16	-	15	25.25	20	15	43.88	25	1.25	36.81	18.94
12	481	18A	14	7	15	25.25	18	15	43.88	23	1.25	36.81	19.25

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- Suction and discharge flanges are ANSI Standard flat face. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.

- The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- Pump size 10–491–20 is furnished as standard with 125# suction flange and 250# discharge flange.




AURORA® MODEL 485

TWO-STAGE FIRE PUMPS CUMMINS CFP9E DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

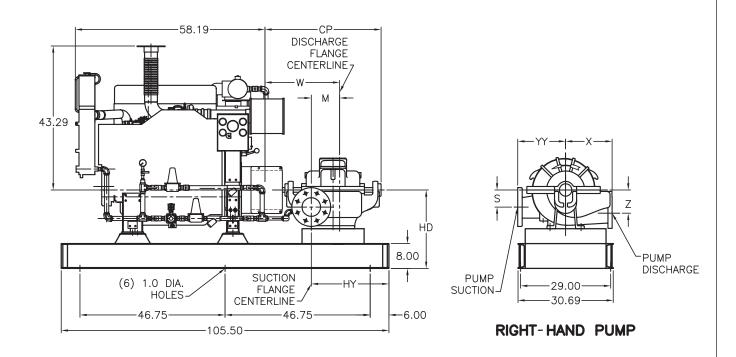

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	M	W	X	Z	СР	YY	ZZ	HD	HY
6	485	16	8	5	8.25	10.5	23.63	19	7.25	37.88	17	1.25	27.81	16.88
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	27.81	16.5

NOTES:


- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- 4. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® MODELS 481, 491 **AND 492 PUMPS**

SINGLE-STAGE FIRE PUMP **CUMMINS CFP11E DIESEL ENGINE DRIVE**



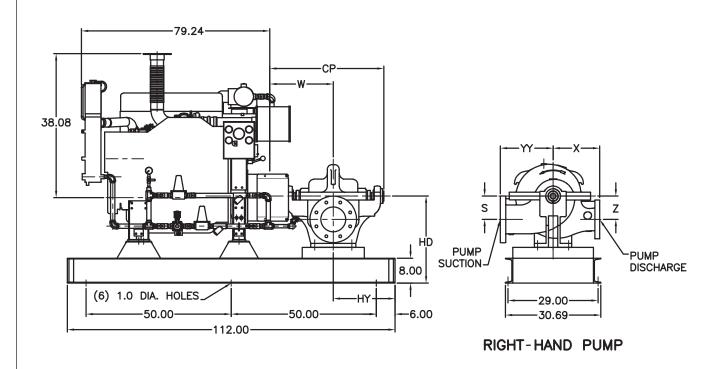

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HD	HY
6	491	18C	10	-	9.38	20.13	16	11.75	35.88	20	1	29.88	10.63
6	481	20	8	5	8	18	15.75	8	32	18	1.25	29.88	12.75
8	481	12	10	5	8	18	17	9	32	17.75	1.25	29.88	12.75
8	481	17B	10	5	8	18	17	8	32	17.75	1.25	29.88	12.75
8	491	18A	12	-	10.75	23.75	16	12.5	41.5	22	1	32.88	15
8	481	21/A	10	6B	9.5	21.88	18	9.5	38	21	1.25	29.88	8.88
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	35.88	13.5
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	1.25	35.88	8.88
10	492	18	12	-	11.5	25.56	21	11.5	45.81	21	1	32.88	13.19
10	481	18D	12	7A	12.25	24.31	20	12.25	43	24	1.25	35.88	14.5
10	491	20*	16	-	15	25.25	20	15	43.88	25	1.25	35.88	13.19
12	481	18A	14	7	15	25.25	18	15	43.88	23	1.25	35.88	13.5

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
 Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.


- 6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 \pm 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- Pump size 10-491-20 is furnished as standard with 125# suction flange and 250# discharge flange.

AURORA® MODEL 485

TWO-STAGE FIRE PUMPS **CUMMINS CFP11E DIESEL ENGINES**



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

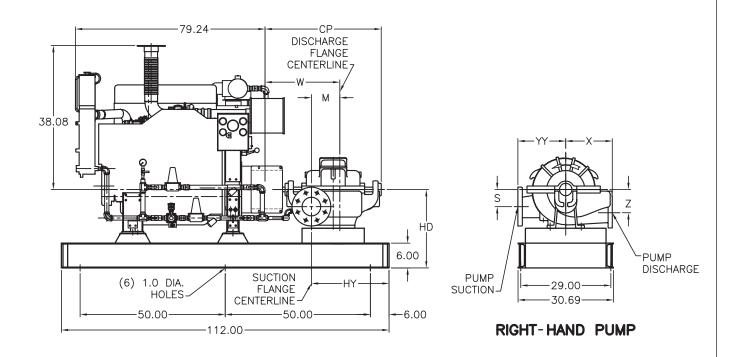

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	M	W	Χ	Z	СР	YY	XX	HD	HY
6	485	16	8	5	8.25	10.5	23.63	19	7.25	37.88	17	1.25	29.88	22.13
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	29.88	21.75


- All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
- Suction and discharge flanges are ANSI Standard flat face. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 \pm 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® MODELS 481, 491 **AND 492 FIRE PUMPS**

SINGLE-STAGE FIRE PUMP **CUMMINS CFP15E DIESEL ENGINE DRIVE**



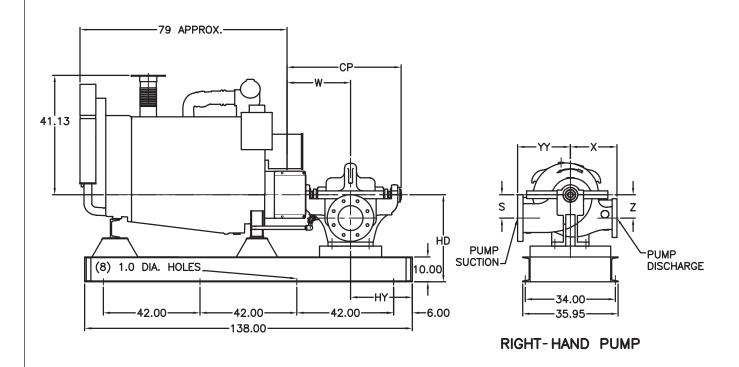

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HD	HY
5	491	18A	8	-	8.13	18.88	15	10.63	33.38	18.75	1	35.13	27.13
6	491	14C	10	-	9.38	20.13	13.25	10	35.88	18	1	35.13	25.88
6	491	19A	10	-	9.38	22.63	18	12.13	39.25	22	1	35.13	23.38
8	481	17B	10	5	8	18	17	8	32	17.75	1.25	35.13	26.88
8	491	18A	12	-	10.75	23.75	16	12.5	41.5	22	1	35.13	22.25
8	481	21/A	10	6B	9.5	21.88	18	9.5	38	21	2	35.13	24.13
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	37.13	20.75
10	481	15C	12	6B	13.5	21.88	17	13.5	38	20	1.25	37.13	24.13
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	37.13	24.13
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	37.13	21.69
10	492	18	12	-	11.5	25.56	21	11.5	45.81	21	1	35.13	20.44
10	491	20*	16	-	13	25.56	23	14.25	44.56	25	1	37.13	20.44
12	481	18	12	7	15	25.25	18	15	43.88	23	2	37.13	20.75

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
 Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- Left-hand (counterclockwise) rotation is not available.


- The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- Pump size 10-491-20 is furnished as standard with 125# suction flange and 250# discharge flange.

AURORA® MODEL 485

TWO-STAGE FIRE PUMPS CUMMINS CFP15E DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARD
IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT
PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

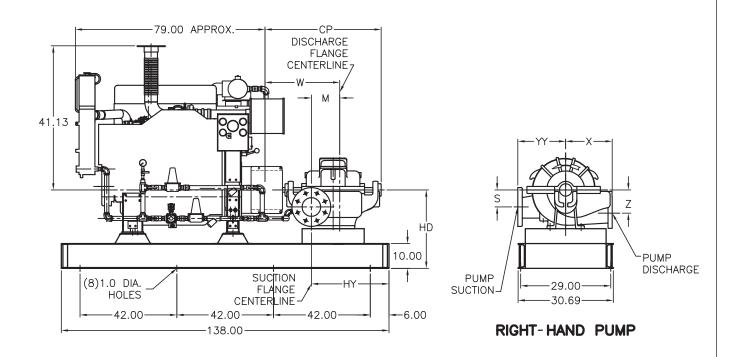

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	М	W	X	Z	СР	YY	ZZ	HD	HY
6	485	16	8	5	8.25	10.5	23.63	19	7.25	37.88	17	1.25	35.13	32.88
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	35.13	32.5

NOTES:


- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- 4. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left-hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® 491 FIRE PUMPS

SINGLE-STAGE FIRE PUMPS CUMMINS CFP23E DIESEL ENGINE DRIVE



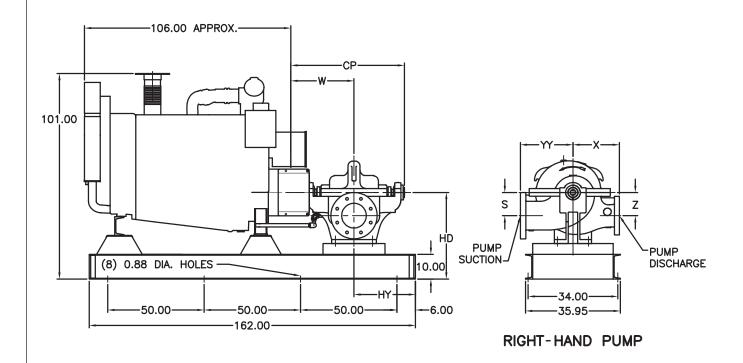

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	Χ	Z	СР	YY	ZZ	HD	HY
10	491	20	16	-	13	25.56	23	14.25	44.56	25	1	37.88	23.19

NOTES:

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left-hand (counterclockwise) rotation is not available.


6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® 481 FIRE PUMPS

SINGLE-STAGE FIRE PUMP CUMMINS CFP59 DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

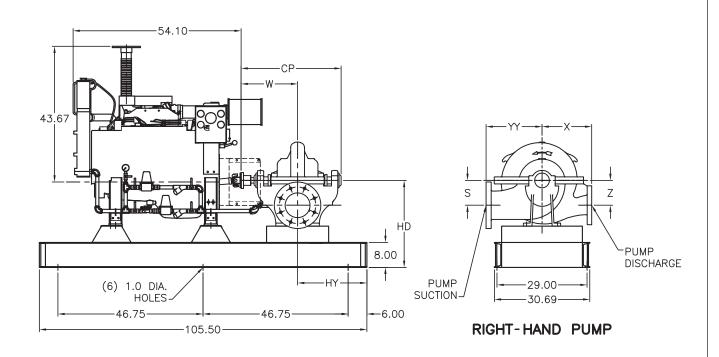

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HY	HD
4	481	15	5	3	5.5	14.5	13	5.5	26	14	1.25	25.38	25.69
5	481	15	6	4	6.25	16	13.25	6.25	28.5	15	1.25	23.88	25.69
5	481	17	5	4	6.25	16	14	6.25	28.5	15	1.25	23.88	25.69
6	481	11HH*	6	4A	8.63	18.13	10	8.63	32.88	15	1.25	21.75	27.69
6	481	14HH*	8	5A	7.5	20.44	15	7.5	36.75	17	1.25	19.38	27.69
6	481	15	8	5	6.75	18	14.25	6.75	32	16.75	1.25	21.88	27.69
6	481	18B/C	8	5	8	18	16	8	32	18	1.25	21.88	27.69
6	481	20	8	5	8	18	15.75	8	32	18	1.25	21.88	27.69
8	481	17C	10	5	8	18	17	8	32	17.75	1.25	21.88	27.69
8	481	21	10	6B	9.5	21.88	18	9.5	38	21	1.25	18	31.69
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	2	18	36.69
10	481	18D	12	7A	12.25	24.25	20	12.25	43	24	2	15.63	36.69


NOTES

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left-hand (counterclockwise) rotation is not available.

- 6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.
- * Pump sizes 6–481–11HH and 14HH are furnished as standard with 125# suction flange and 250# discharge flange.

AURORA® MODEL 485 TWO-STAGE FIRE PUMPS **CUMMINS CFP59 DIESEL ENGINES**



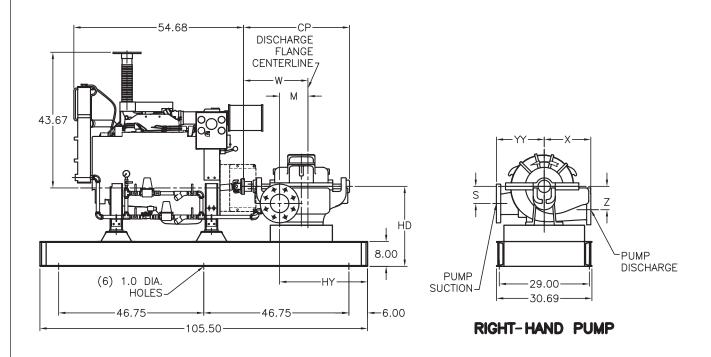

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	M	W	X	Z	СР	YY	ZZ	HD	HY
4	485	15	5	3	5	7.13	18.88	13	6.5	31	13.5	1.25	25.69	30.88
6	485	12	6	5A	8	7.5	22.88	14	8	38.5	14	1.25	27.69	24.75
6	485	16/B	8	5	8.25	10.5	23.63	19	7.25	37.88	17	1.25	27.69	26.75
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	27.69	26.38

- 1. All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
 Suction and discharge flanges are ANSI Standard flat face.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- Left-hand (counterclockwise) rotation is not available.


The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® 491 AND 492

SINGLE-STAGE FIRE PUMPS CUMMINS CFP59 DIESEL ENGINES



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

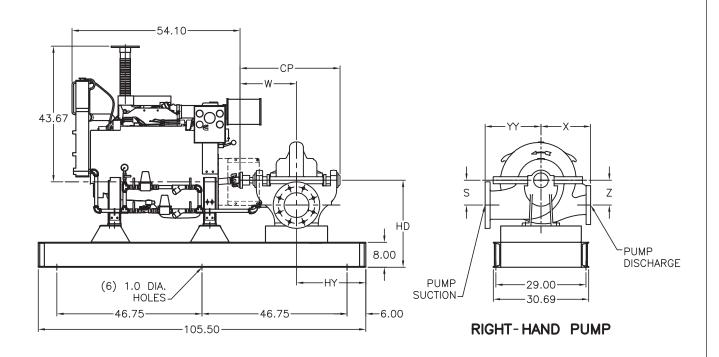

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HD	HY
4	491	14C	6	-	6.88	17.63	13	8.38	31.69	15.25	3/4	27.69	22.25
4	492	18	5	-	9.5	18.38	14	9.5	33.25	14	3/4	27.69	21.5
5	491	18A	8	-	8.13	18.88	15	10.63	33.38	18.75	1	27.69	21
6	491	12A	6	-	6.88	16.63	20.5	7.13	29.69	14	1	27.69	23.25
6	491	14A/C	10	-	9.38	20.13	13.25	10	35.88	18	1	31.69	19.75
6	492	18	8	-	9.63	22.5	16	9.63	40.13	16	1	27.69	17.38
8	491	14A	12	-	10.75	20.5	16	10.75	36.63	22	1	36.69	19.88

NOTES:


- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- 4. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left-hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® MODELS 481, 491 AND 492 PUMPS

SINGLE-STAGE FIRE PUMP CUMMINS CFP83 DIESEL ENGINE DRIVE



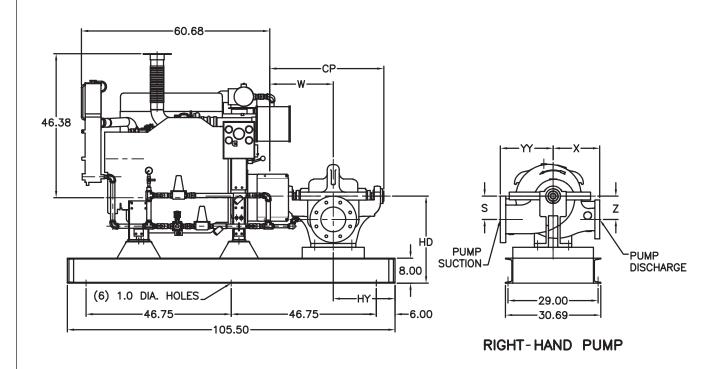

	PUMP SIZE												
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	W	X	Z	СР	YY	ZZ	HY	HD
5	491	18A	8	-	8.13	18.88	15	10.63	31.38	18.75	1	19.13	27.75
6	481	15	8	5	6.75	18	14.25	6.75	32	16.75	1.25	20	27.75
6	481	18B/C	8	5	8	18	16	8	32	18	1.25	20	27.75
6	491	18C	10	-	9.38	20.13	16	11.75	35.88	20	1	17.88	31.75
6	492	18	8	-	9.63	22.5	16	8.63	40.13	16	1	15.5	27.75
6	481	20	8	5	8	18	15.75	8	32	18	1.25	20	27.75
8	481	12	10	5	8	18	17	9	32	17.75	1.25	20	27.75
8	481	17B	10	5	8	18	17	8	32	17.75	2	20	27.75
8	491	18A	12	-	10.75	23.75	16	12.5	41.5	22	1	14.25	31.75
8	481	21/A	10	6B	9.5	21.88	18	9.5	38	21	1.25	16.13	31.75
8	481	24	12	7	15	25.25	20	15	43.88	25	1.25	12.75	36.75
10	481	18	12	6B	13.5	21.88	18	13.5	38	22	1.25	16.13	36.75
10	481	18D	12	7A	12.25	24.31	20	12.25	43	24	1.25	13.75	36.75

NOTES

- 1. All dimensions are in inches and may vary ±3/8".
- 2. Not for construction purposes, unless certified.
- 3. Suction and discharge flanges are ANSI Standard flat face.
- 4. Refer to individual engine dimension print for reference point used to determine overall engine length.
- 5. Left-hand (counterclockwise) rotation is not available.


6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.

AURORA® MODEL 485

TWO-STAGE FIRE PUMPS **CUMMINS CFP83 DIESEL ENGINES**



DO NOT OPERATE THIS MACHINE WITHOUT PROTECTIVE GUARI IN PLACE. ANY OPERATION OF THIS MACHINE WITHOUT PROTECTIVE GUARD CAN RESULT IN SEVERE BODILY INJURY.

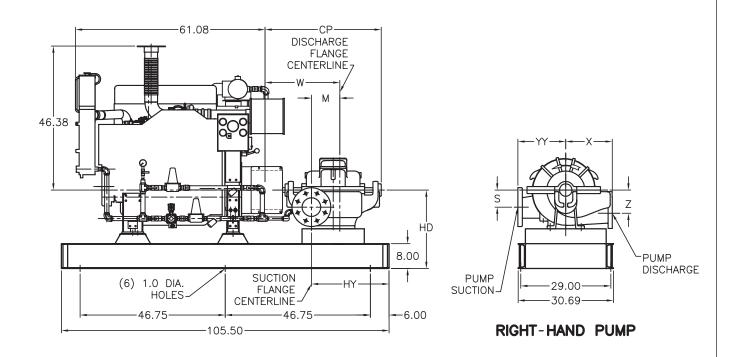

	PUMP SIZE													
DISCH	MODEL	CASE BORE	SUCTION	POWER SERIES	S	M	W	Χ	Z	СР	YY	ZZ	HY	HD
6	485	16	8	-	8.25	10.5	23.63	19	7.25	37.88	17	1.25	17	27.75
6	485	17A	8	5	7	11	24.5	16	9	38	16.5	1.25	17	27.75

- All dimensions are in inches and may vary ±3/8".
- Not for construction purposes, unless certified.
 Suction and discharge flanges are ANSI Standard flat face. 3.
- Refer to individual engine dimension print for reference point used to determine overall engine length.
- Left-hand (counterclockwise) rotation is not available.

6. The driveshaft is not designed to operate at a 0° angle. The engine crankshaft is to be parallel offset of 0.50 ± 0.25 inch. The engine crankshaft may be parallel offset from the pump shaft 0.50 inch right or left.